


Memory Card Reader only for Hi-MD Walkman
MCMD-R1 Operating Instruction Card

The USB cable supplied with the Hi-MD Walkman

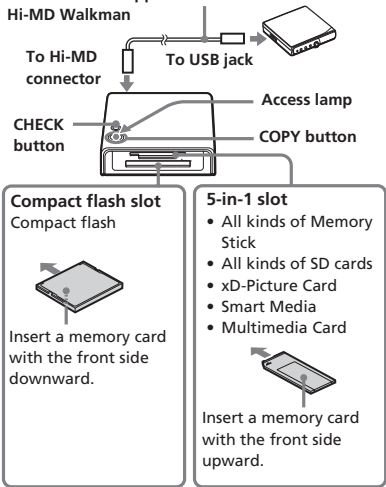

For more details, refer to Operating Instructions.

Copying the data from a memory card to a disc in Hi-MD mode

Insert four size-AAA alkaline dry batteries in the memory card reader.

- 1 Insert a battery and a disc in Hi-MD mode (1GB Hi-MD disc or 60/74/80-minute standard disc) with a sufficient free space in the Hi-MD Walkman.**
- 2 Connect the memory card reader to the Hi-MD Walkman.**
- 3 Insert a memory card in the slot.**
- 4 Press the COPY button.**
The memory card reader is turned on to start copying (the access lamp flashes in green). When copying is complete, the access lamp stays lit in green. The memory card reader is automatically turned off about 10 seconds after completion of copying.
- 5 After turned off the memory card reader, press the CHECK button to check the result according to access lamp indication.**
When copying was complete, the access lamp stays lit in green (refer to the label on the bottom of the memory card reader).