

## Authorizing your Walkman® Player

By authorizing your device, you will be able to:

- Transfer content downloaded from Sony's Connect™ music store to your device.
- Use your device as a means of sharing your digital music collection on up to five<sup>2</sup> PCs. Content residing on your portable player (ex: recorded from CDs or downloaded from Sony's Connect™ music store) can be transferred to four additional authorized PCs.

The authorization process is powered by the Connect music store. An Internet connection is required.

### **“Authorize” Your Device Automatically.**

The first time you launch SonicStage software and attach your Walkman device to the PC, a dialog box will appear asking if you want to “Authorize” your device.

- 1. Click “Yes” to authorize your device. The Connect music store screen will appear.**

Note: If you choose “No,” your device will be registered locally. You will only be able to transfer your content to/from the locally-registered PC. To authorize your device later, see “Authorize Your Device Manually” instructions below.

- 2. Follow the on-screen steps.**

Note: You are not obligated to purchase music from the Connect music store, and you do not need to provide your credit card information in order to complete the device authorization process.

- 3. You can now transfer Connect content to your Walkman device, and utilize your device to share your music content on up to five PCs.**

Note: SonicStage 3.0 or higher must be installed on the additional PCs.

- 4. When you attach your device to an additional PC and launch SonicStage software, a prompt will appear. Follow the on-screen instructions to authorize your device on the additional PC(s).**

### **“Authorize” Your Device Manually.**

If you did not complete the automatic device authorization steps above, you can still authorize your device.

- 1. Launch SonicStage software, and attach your device to the original PC.**
- 2. Click the “Transfer” button to switch to the Transfer screen.**
- 3. Click on the “Device/Media Info” button located near the bottom right corner of the ATRAC Audio Device panel.**
- 4. Click the “Authorize” button. The Connect music store screen will appear.**
- 5. Follow the on-screen steps.**

Note: You are not obligated to purchase music from the Connect music store, and you do not need to provide your credit card information in order to complete the device authorization process.

- 6. You can now transfer Connect content to your Walkman device, and utilize your device to share your music content on up to five PCs.**

Note: SonicStage 3.0 or higher must be installed on the additional PCs.

- 7. When you attach your device to an additional PC and launch SonicStage software, a prompt will appear. Follow the on-screen instructions to authorize your device on the additional PC(s).**

### **“De-Authorizing” a PC:**

In order to share your content on a sixth PC, you will need to de-authorize one of the existing five PCs.

- 1. Launch SonicStage software, and choose “Connect music store” from the Music Source pull-down.**
- 2. Log on to the Connect music store and click “Account.”**
- 3. Go the “Purchased Music” section and click “Remove Your Account from this Computer.”**
- 4. Find the name of the computer on which you are currently logged onto and click “de-authorize.”**
- 5. Confirm de-authorization.**

### **“De-Authorizing” a device:**

If you will no longer be using your device with your current PC, you can de-authorize it for use on that PC.

- 1. Launch SonicStage software, and attach your device to the PC.**
- 2. Choose “ATRAC Audio Device” from the “Transfer” screen pull-down menu.**
- 3. Click on the “Device/Media info” button located near the bottom right corner of the ATRAC Audio Device panel.**
- 4. Click the “De-Authorize” button.**
- 5. Follow the on-screen prompts.**

\* Usage rules are subject to change. See Sony Connect's Terms of Service and End User License Agreement located at [www.connect.com](http://www.connect.com) for further information.