

Precautions on connecting the recorder to a computer

When connecting the recorder to a computer, it is recommended that you connect the supplied USB cradle to the computer with the dedicated USB cable and place the recorder on the USB cradle.

If you connect the recorder directly to the computer without using the supplied USB cradle, please do the following:

- Fully charge the built-in rechargeable battery.
- Insert the dedicated USB cable firmly into the recorder's USB cradle connecting jack.
- Place the recorder on a stable place not subject to vibrations.
- Make sure not to touch or disturb the recorder or dedicated USB cable, especially while checking in/checking out an audio file.

Make sure the above points are carried out. If they are not, audio file check-out authorization may be reduced.

把錄放隨身聽連到電腦前的注意事項

當把錄放隨身聽和電腦相連時，建議用專用的USB纜線連接附帶的USB底座和電腦，並把錄放隨身聽放在USB底座上。

如果不使用附帶的USB底座而是直接把錄放隨身聽和電腦相連，請按下列步驟進行：

- 給內建充電式電池充滿電。
- 把專用的USB纜線牢固插入錄放隨身聽USB底座的連接插孔。
- 把錄放隨身聽放在不會受到震動的穩固之處。
- 務必不要觸摸或干擾錄放隨身聽或專用的USB纜線，特別當存回 / 取出音訊檔案時。

確保執行了上述幾點。否則，音訊檔案取出許可次數可能減少。