

## Notes on using the recorder together with a dry battery

- **It is recommended that you use the recorder only after attaching the dry battery case and inserting a new dry battery into the case.**
- If the recorder has not been used for a few days after the battery became exhausted and “LOW BATT” appeared in the display, the recorder may not operate even after you insert a new dry battery or attach the dry battery case with a battery in it. If this happens, charge the built-in rechargeable battery and then try using the recorder again.

## Notes on charging

- When the recorder has not been used for a long time, the charge lamp will not light up immediately after you place the recorder on the USB cradle. **If this happens, leave the recorder on the cradle for a few minutes, and then take the recorder off and reset it on the cradle.** Also make sure that the BUILT-IN BATTERY switch at the rear of the recorder is set to ON.
- It is recommended that you charge the built-in rechargeable battery immediately after “LOW BATT” appears in the display.
- Set the BUILT-IN BATTERY switch at the rear of the recorder to OFF if the recorder will not be used for a long time.

For details, refer to the operating instructions supplied with the recorder.

## 錄放隨身聽使用乾電池時的注意事項

- 建議只在連接乾電池盒並在盒中裝入新的乾電池後再使用錄放隨身聽。
- 如果電池用完且“ LOW BATT ”出現在顯示幕上後幾天未使用錄放隨身聽，即使裝入新的乾電池或連上帶有電池的乾電池盒，錄放隨身聽可能也無法操作。此時，請給內建充電式電池充電，然後再試一次。

## 充電注意事項

- 當錄放隨身聽長期不用時，把錄放隨身聽放在USB底座上後，充電指示燈不會立刻點亮。此時，讓錄放隨身聽放在底座上幾分鐘，然後取下錄放隨身聽並再次放入。還需確保錄放隨身聽背面的BUILT-IN BATTERY開關設為ON。
- 建議當“ LOW BATT ”出現在顯示幕上後立即給內建充電式電池充電。
- 如果錄放隨身聽將長期不用，請把錄放隨身聽背面的BUILT-IN BATTERY開關設為OFF。

詳情，請參考錄放隨身聽附帶的使用說明書。