

Setting Up Giga Pocket Personal Video Recorder

The following instructions describe how to set up additional devices, such as a VCR or camcorder, to record information using the Giga Pocket® Personal Video Recorder System. These instructions supersede those found in the electronic VAIO® Computer User Guide.

Connecting VCR or camcorder using A/V and S-video cables

Your computer has audio and video connection capabilities that support A/V and S-video cables. Before you begin, verify whether your VCR or camcorder requires a standard video or S-video connection. Your computer does not support a standard 1/8 mini stereo to RCA cable.


Option 1

- 1** Connect the mini-jack end of an optional A/V cable with triple RCA plugs (VMCN320TP) to the AV In jack located on the left side of your computer.
- 2** Connect the triple RCA plugs into the appropriate jacks on your compatible VCR or camcorder.


Option 2


- 1** Connect an optional S-video cable to the S Video In jack located on the left side of your computer.
 - 2** Connect the other end of the S-video cable into the appropriate port on your compatible VCR or camcorder.
 - 3** Connect the mini-jack end of an optional A/V cable with triple RCA plugs (VMCN320TP) to the AV In jack on the left side of the computer.
-

- 4 Connect the composite audio L and R plugs of the A/V cable to the appropriate jacks on your compatible VCR or camcorder.

 If your computer is connected to an optional port replicator, you must connect the A/V cable to the AV In jack located on the left side of the computer. The Audio In jacks (composite audio L and R jacks) located on the back of the port replicator are not designed to support the Giga Pocket® Personal Video Recorder System.

 Connecting a VCR or Camcorder to the Computer

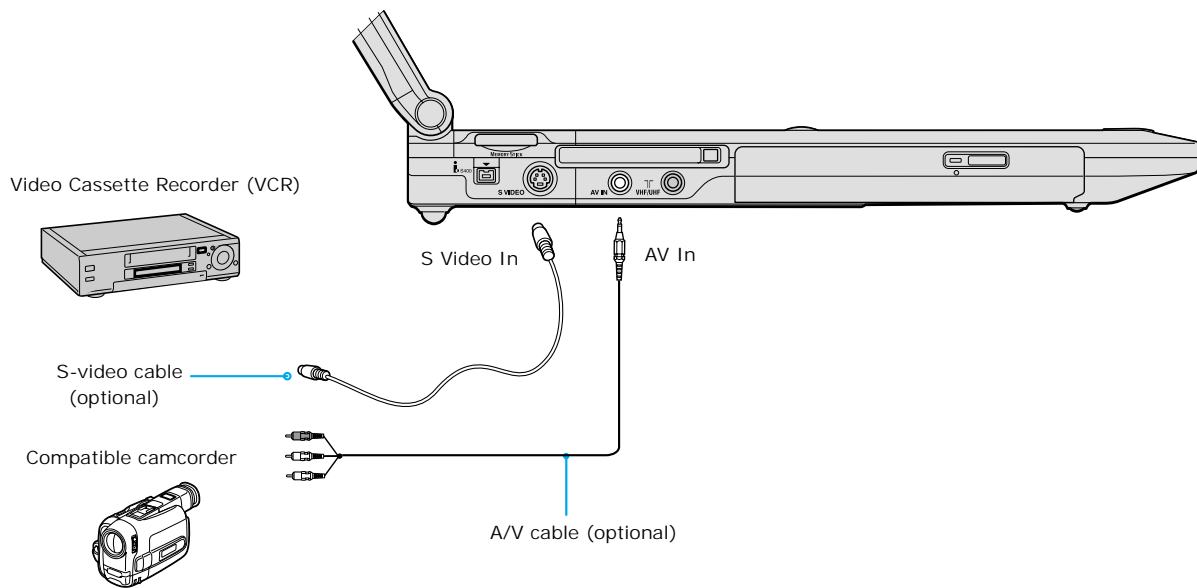

 To order accessory parts for your VAIO computer, visit the Sony Direct Accessories and Parts Center (DAPC) at <http://servicesales.sel.sony.com/web/index.jsp> or call them at 1-800-488-SONY (7669).