

Notes on Picsel Viewer for CLIE and NetFront v3.0 for CLIE

If you try to display files or websites already viewed with **Picsel Viewer for CLIE** or **NetFront v3.0 for CLIE** again, they may not be displayed properly. In this case, perform the following:


- For files you can display on your CLIE handheld without connecting to the Internet (For files you can display with **Picsel Viewer for CLIE**)

Disconnect from the Internet.


- For files you can display on your CLIE handheld by connecting to the Internet (For files you can display with **NetFront v3.0 for CLIE**)

Finish the application and disconnect from the Internet. Then start the application and connect to the Internet again.

You can configure the setting for disconnecting from the Internet automatically when you finish **NetFront v3.0 for CLIE**.

How to set: While **NetFront v3.0 for CLIE** is opened, tap  (Menu) and select [NetFront Settings] from [Options]. In the second page, tap ▼ next to [On termination:] and select [Disconnect].

By default, [On termination:] is set to [Disconnect].

- Turn off your CLIE handheld, then turn it on again.
- Tap  (Home) to display the CLIE 3D Launcher. Remove the "Memory Stick" media from your CLIE handheld and then reinsert it into the "Memory Stick" slot.

If the problem persists even after performing the above, perform a soft reset.

- ➔ For details on soft reset, refer to "Restarting your CLIE™ handheld: Performing a soft reset" (page 32) in the supplied "Read This First (Operating Instructions)".