

Component code numbers

Codes d'appareils

Números de código de componentes

TV and VCR Téléviseurs et magnétoscopes Televisores y videograbadoras

Brand Marque Marca	Component Appreil Componente	Code No. Code Núm. de código
Sony	VCR	01 (VTR1: Beta)
		02 (VTR2: 8 mm)
		03 (VTR3: VHS)
		04, 05, 06 (VTR4, 5, 6: DV)
	TV	01
Admiral	VCR	30
	TV	02, 14, 09
Aiwa	VCR	41, 50, 44
Akai	VCR	52, 54
AOC	TV	12
Audio Dynamic	VCR	17, 40
Bell & Howell	VCR	33, 46
	TV	14, 09, 38
Brocsonic	VCR	20, 22, 17
	TV	03, 12
Canon	VCR	12, 11
Citizen	VCR	35
Craig	VCR	18, 35
	TV	22, 23, 20, 21
Criterion	VCR	15
Croslex	TV	11
Curtis Mathis	VCR	07, 41, 12
	TV	03, 19, 23
Daewoo	VCR	44, 15, 12
	TV	35, 36, 03, 41
	TV/VCR Combo	36 & 44
DBX	VCR	17, 39, 40
Dimensia	VCR	07
Emerson	VCR	44, 22, 23, 19, 20, 21, 41
	TV	22, 20, 21, 23, 03, 15, 42
	TV/VCR Combo	21 & 23, 22
Fisher	VCR	33, 37, 38, 36
	TV	25
Funai	VCR	41

Brand Marque Marca	Component Appreil Componente	Code No. Code Núm. de código
General Electric	VCR	32, 07, 12
	TV	02, 18, 03
	TV/VCR Combo	27 & 24, 25
Goldstar	VCR	35
	TV	03, 12, 30, 46
	TV/VCR Combo	TV code & 35
Go Video	VCR	51, 42, 43
Hitachi	VCR	11, 07, 08, 38
	TV	31, 03, 32
HQ	VCR	15
Instant Replay	VCR	12, 11
JC Penny	VCR	12, 08, 07, 33, 17, 39, 40
	TV	03, 02, 30
JVC	VCR	17, 47, 48, 49, 39, 40
	TV	28
Kenwood	VCR	17, 39, 35, 40
	TV	33, 03, 23, 34
KTV	VCR	41, 35, 08, 36, 37, 33, 38
	TV	02, 03, 11, 25, 19, 12
LXI (Sears)	VCR	13, 11, 12, 10
	TV	11, 12, 03, 43, 47
	TV/VCR Combo	11, 18, 47 & 12, 13
Marantz	VCR	17, 39, 40
Marta	VCR	35
Memorex	VCR	12, 38
Minolta	VCR	08, 07
Mitsubishi/	VCR	26, 27, 28, 29, 56, 57
	TV	24, 03, 12
MGA	TV	24, 03, 12
Multitech	VCR	28, 41, 24
NEC	VCR	17, 39, 40
	TV	03, 12
Olympic	VCR	12, 11
Optimus	VCR	27
Orion	VCR	55
Panasonic	VCR	09, 10, 11, 12
	TV	18, 16, 49
	TV/VCR Combo	18 & 11, 12
Pentax	VCR	08, 07

Brand Marque Marca	Component Appreil Componente	Code No. Code Núm. de código
Philco	VCR	11, 12
	TV	11, 03
Philips	VCR	13, 11, 12
	TV	11
Pioneer	VCR	11
	TV	37, 18, 19
Portland	TV	03
Quasar	VCR	11, 12, 09, 10, 06
	TV	18
	TV/VCR Combo	18 & 12, 09, 10
Radio Shack	TV	02, 12, 24, 23
	VCR	07, 08, 11, 12, 13, 14, 15, 16, 29
RCA/ PROSCAN	TV	02, 03, 04, 06, 44, 45
	TV/VCR Combo	18 & 11
	VCR	12, 33, 31, 38, 27, 41
Realistic	VCR	17
Sansui	VCR	17
Singer	VCR	18
Samsung	VCR	25, 16, 24
	TV	26, 12, 03
	TV/VCR Combo	23, 27 & 24, 25, 29
Sanyo	VCR	33, 38
	TV	25
Scott	VCR	15, 16, 24, 38, 26, 27, 28, 29
	TV	23, 12
	VCR	30, 31
Sharp	TV	14, 15
Shintom	VCR	18
Signature 2000	VCR	41, 30, 38
	TV	14, 09
Sylvania	VCR	13, 11, 12, 41
	TV	11, 12, 03
Symphonic	VCR	41
	TV	23, 39, 40
	TV/VCR Combo	23 & 41
Tashiro	VCR	35
Tatung	VCR	17, 39, 40
Teac	VCR	17, 39, 41, 40
Technics	VCR	12, 11
Toshiba	VCR	15
	TV	19, 14
Videch	TV	31, 03, 12
Wards	VCR	30, 31, 38, 34, 35
	TV	03, 15, 12
Yamaha	VCR	33, 17, 39, 40
Zenith	VCR	34
	TV	09, 10

Cable Box Décodeurs Adaptadores para cablevisión

Brand/Marque/Marca	Code No./Code/Núm. de código
Hamlin/Regal	22, 23, 24, 26
Jerrold/G.I.	01, 02, 03, 04, 05, 06, 07, 08, 18, 22
Oak	28, 29
Panasonic	21
Pioneer	14, 15
Scientific Atlanta	10, 11
Tocom	16
Zenith	12, 13

DBS Tuner Récepteurs DBS Sintonizadores del sistema de radiodifusión digital

Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	01
Hitachi	05
Hughes	04
Insight	04
Panasonic	03
RCA/PROSCAN	02, 07
Toshiba	06

Separate Components Appareils indépendants Componentes separados

Receiver/Amplifier Amplis-tuner/amplificaterus Receptores/amplificadores

Brand/ Marque/Marca	Code No./Code/Núm. de código
Sony	01
Aiwa	22, 27
Denon	12, 13, 14
Fisher	34
JVC	06, 40
Kenwood	03, 04
Magnavox	24
Nakamichi	16
Onkyo	09, 20
Panasonic	21
Philips	24
Pioneer	02, 25
RCA	29, 31
Sansui	16, 17
Sharp	12, 30
Teac	18, 19
Technics	07, 08, 21
Yamaha	10, 11

Cassette Deck Platines à cassette Decks de cassettes

Brand/ Marque/Marca	Code No./Code/Núm. de código
Sony	01
Aiwa	16, 22, 23
Denon	13
Fisher	30
JCV	03, 04
Kenwood	07, 08
Nakamichi	15
Onkyo	09, 10, 21
Panasonic	19
Philips	24
Pioneer	02, 20
RCA	26, 27
Sansui	15, 18
Sharp	13
Teac	14, 17
Technics	05, 06, 19
Yamaha	11, 12

CD Player Lecteurs CD Reproductores de discos compactos

Brand/ Marque/Marca	Code No./Code/Núm. de código
Sony	01
Aiwa	30, 32
Denon	24
Emerson	45
Fisher	27, 42
Hitachi	44
JVC	05, 06, 07
Kardon	40
Kenwood	08, 09, 10
LXI	46
Magnavox	22, 23
Nakamichi	14
Onkyo	17, 18, 36
Optimus	47
Panasonic	29
Philips	22, 26
Pioneer	02, 13
RCA	38, 39
Sansui	14, 16
Sanyo	27
Shewood	41
Sharp	24, 28
Teac	15, 25, 37
Technics	03, 04, 29
Yamaha	19, 20, 21

MD Deck/DAT Deck Platines MD/DAT Decks de minidisques/cinta audiodigital

Brand/ Marque/Marca	Code No./Code/Núm. de código
Sony MD Deck	01
Sony DAT Deck	02

TUNER/DSP TUNER/DSP Sintonizador/Procesador perimétrico digital

Brand/ Marque/Marca	Code No./Code/Núm. de código
Sony Tuner	01
Sony DSP	02

DVD Lecteur DVD Reproducteur de vidéodisques digitales

Brand/ Marque/Marca	Code No./Code/Núm. de código
Sony	01
Panasonic	02
Pioneer	04
RCA	05
Toshiba	03

LD (MDP) Player Lecteurs LD (MDP) Reproductores de discos laser (MDP)

Brand/ Marque/Marca	Code No./Code/Núm. de código
Sony	01, 02, 03, 04
Hitachi	12
Kenwood	10, 11
Magnavox	06
Panasonic	13, 14, 07
Philips	15
Pioneer	05
Samsung	16
Sanyo	09
Sharp	08, 17

Mini Hi-Fi component system Appareils d'une minichaîne Hi-Fi Minisistemas de componentes de alta fidelidad

Brand/ Marque/Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección		
	Receiver/ ampli-tuner/ Receptores	CD/lecteur CD / Reproductores de discos compactos	Tape/ cassette/ Decks de cassettes
Sony	01	01	01
Aiwa	22	30	-
	27	32	16
Denon	12	24	13
Garrard	19	37	-
Harman	38	43	-
Jensen	37	31	29
JVC	06	06	04
Kenwood	04	09	08
	03	08	07
McIntosh	39	43	-
Onkyo	09	17	09
Panasonic	21	29	19
Pioneer	25	13	20
Sansui	17	16	18
Sharp	30	28	-
	12	24	13
Technics	21	29	19
	07	03	05
	08	04	06
Yamaha	10	19	11
	11	20	12