

Component code numbers Codes des appareils Números de código de componentes

Brand Marque Marca	Component Appreil Componente	Code No. Code Núm. de código
Sony	VCR	1001 (VTR1: Beta) 1002 (VTR2: 8 mm) 1003 (VTR3: VHS) 1004, 1005, 1006 (VTR4, 5, 6: DV)
	TV	8001
Admiral	VCR	1030
	TV	8002, 8014, 8009
Aiwa	VCR	1041, 1050, 1035
Akai	VCR	1052, 1053, 1054
	TV	8003
AOC	TV	8012
Audinac	TV	8034
Audio Dynamic	VCR	1017, 1040
Bell & Howell	VCR	1033, 1046
	TV	8014, 8009, 8038
Broksonic	VCR	1020, 1022, 1017, 1066
	TV	8003, 8012, 8072
Canon	VCR	1012, 1011
CCE	VCR	1018, 1044, 1035, 1064
	TV	8063, 8069, 8011, 8041, 8029
Cineral	VCR	1044, 1064
	TV	8035, 8034
Citizen	VCR	1035
Craig	VCR	1018, 1035
	TV	8022, 8034, 8020, 8021
Croslex	TV	8011
Crown	TV	8034
Curtis Mathis	VCR	1007, 1041, 1012
	TV	8003, 8019, 8034
Daewoo	VCR	1044, 1015, 1012, 1064
	TV	8035, 8036, 8003, 8041, 8029
Daytron	TV	8013
DBX	VCR	1017, 1039, 1040
Dimensia	VCR	1007

Brand Marque Marca	Component Appreil Componente	Code No. Code Núm. de código
Emerson	VCR	1044, 1022, 1023, 1019, 1020, 1021, 1041, 1058
	TV	8022, 8013, 8020, 8021, 8034, 8003, 8015, 8042
Fisher	VCR	1033, 1037, 1038, 1036
	TV	8025
Funai	VCR	1041
General Electric	VCR	1032, 1007, 1012, 1062
	TV	8002, 8018, 8003, 8007, 8045
Goldstar/LG	VCR	1035
	TV	8003, 8013, 8012, 8030, 8046, 8050, 8051, 8049
GO VIDEO	VCR	1051, 1042, 1043
Gradiente	VCR	1061, 1047, 1041
	TV	8064, 8065, 8028, 8006
Hitachi	VCR	1011, 1007, 1008
	TV	8031, 8013, 8003, 8032
HQ	VCR	1015
Instant Replay	VCR	1012, 1011
JC Penny	VCR	1012, 1008, 1007, 1033, 1017, 1039, 1040
	TV	8003, 8002, 8030, 8007
JVC	VCR	1017, 1047, 1048, 1049, 1039, 1040
	TV	8028
Kenwood	VCR	1017, 1039, 1035, 1040
KTV	TV	8033, 8013, 8003, 8034
LXI (Sears)	VCR	1041, 1035, 1008, 1036, 1037, 1033, 1038, 1052
	TV	8002, 8003, 8011, 8025, 8019, 8012, 8052
Magnavox	VCR	1013, 1011, 1012, 1010, 1063
	TV	8011, 8012, 8013, 8003, 8043, 8047
Marantz	VCR	1017, 1039, 1040
	TV	8024
Marta	VCR	1035
Memorex	VCR	1012, 1038
Minolta	VCR	1008, 1007

Brand Marque Marca	Component Appreil Componente	Code No. Code Núm. de código
Mitsubishi/MGA	VCR	1026, 1027, 1028, 1029, 1056, 1057, 1065, 1059
	TV	8024, 8003, 8012, 8066
Multitech	VCR	1028, 1041, 1024
NEC	VCR	1017, 1039, 1040
	TV	8003, 8012
Noblex	TV	8057, 8061, 8062
Nokia	VCR	1044, 1064
Olympic	VCR	1012, 1011
Optimus	VCR	1027
Orion	VCR	1055
Panasonic	VCR	1009, 1010, 1011, 1012, 1060, 1068
	TV	8018, 8016, 8007, 8049, 8067, 8074, 8076
Pentax	VCR	1008, 1007
Philco	VCR	1011, 1012, 1064, 1044, 1020
	TV	8011, 8013, 8003, 8068, 8035, 8031
Philips	VCR	1035, 1013, 1011, 1012, 1063
	TV	8011, 8056, 8043
Pioneer	VCR	1011
	TV	8037, 8018, 8019
Portland	TV	8003, 8008
Proton	TV	8071
Quasar	VCR	1011, 1012, 1009, 1010, 1006
	TV	8018, 8007, 8048
Radio Shack	TV	8002, 8012, 8024, 8034
RCA/PROSCAN	VCR	1007, 1008, 1011, 1012, 1013, 1014, 1015, 1016, 1063
	TV	8002, 8003, 8004, 8005, 8006, 8007, 8008, 8044, 8045, 8046, 8053
Realistic	VCR	1012, 1033, 1031, 1038, 1027, 1041
Sansui	VCR	1017
Singer	VCR	1018
Samsung	VCR	1025, 1016, 1024
	TV	8026, 8012, 8013, 8003, 8055
Sanyo	VCR	1033, 1038, 1064, 1046, 1044, 1035
	TV	8025, 8054, 8023
Scott	VCR	1015, 1016, 1024, 1038, 1026, 1027, 1028, 1029
	TV	8034, 8012
SEMP Toshiba	VCR	1025
	TV	8019
Serie Dorada	TV	8058
Sharp	VCR	1030, 1031
	TV	8014, 8013, 8015, 8070

Brand Marque Marca	Component Appreil Componente	Code No. Code Núm. de código
Shintom	VCR	1018
Signature 2000	VCR	1041, 1030
	TV	8014, 8009
Sylvania	VCR	1013, 1011, 1012, 1041, 1063, 1067
	TV	8011, 8012, 8003, 8073
Symphonic	VCR	1041
	TV	8034, 8039, 8040, 8074
Tashiro	VCR	1035
Tatung	VCR	1017, 1039, 1040
Teac	VCR	1017, 1039, 1041, 1040
Technics	VCR	1012, 1011
Toshiba	VCR	1015, 1014, 1052, 1069
	TV	8019, 8014, 8059, 8060, 8075
Videch	TV	8031, 8003, 8012
Wards	VCR	1030, 1031, 1038, 1034, 1035
	TV	8013, 8003, 8015, 8012
Yamaha	VCR	1033, 1017, 1039, 1040
Zenith	VCR	1034
	TV	8009, 8010

TV/VCR Combo Combi téléviseur/magnétoscope Combinación de TV/VCR

Brand Marque Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección	
	TV	VCR
Sony	8001	1003
Daewoo	8036	1044
Emerson	8021	1023
	8021	1022
	8020	1058
General Electric	8027	1024
	8027	1025
GoldStar/LG	8003, 8013, 8012, 8030, 8046, 8050, 8051, 8049	1035
Gradiente	8046	1035
Magnavox	8011, 8018, 8047	1012, 1013
Panasonic	8018	1011
	8018	1012
Quasar	8018, 8048	1012, 1009, 1010
RCA/PROSCAN	8018	1011
Samsung	8034, 8027	1024, 1025, 1029
Symphonic	8034	1041

Analog Cable Box Décodeur analogique de câblodistribution Decodificador analógico

Brand/Marque/Marca	Code No./Code/Núm. de código
Hamlin/Regal	9022, 9023, 9024, 9025, 9026
Jerrold/G.I.	9032, 9001, 9002, 9003, 9004, 9005, 9006, 9007, 9008, 9018, 9031
NET	9030
Oak	9027, 9028, 9029
Panasonic	9019, 9020, 9021
Pioneer	9014, 9015
Scientific Atlanta	9009, 9010, 9011
Tocom	9016, 9017, 9031
Zenith	9012, 9013

Digital Cable Box Décodeur de télévision numérique Decodificador digital

Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	3101
Jerrold/G.I.	3103
Motorola	3103
Panasonic	3203
Philips	3104
Scientific Atlanta	3102

Mini Hi-Fi component system Appareils d'une minichaîne Hi-Fi Minisistemas de componentes de alta fidelidad

Brand Marque Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección			
	Receiver/ amplifier/ Receptores	CD/lecteur CD / Reproductores de discos compactos	Tape/ cassette/ Decks de cassettes	MD/lecteur MD/Deck de minidisques
Sony	4001	5001	6001	7001
	4002	5001	6001	7001
	4003	5002	6001	–
	4003	5002	6002	–
	4003	5002	6003	–
Admiral	4095	5085	–	–
Aiwa	4022	5021	–	–
	4023	5022	6019	–
	4040	5037	6029	–
	4079	5074	6054	7012
Akai	4074	5068	6050	–
B&O (Bang&Olufsen)	4068	5063	6043	–
Crown	4062	5059	–	–
Daewoo	4005	5003	–	–
Denon	4010	5008	6007	–
	4028	5009	6021	–
	4028	5009	6008	–
	4024	5023	6020	–
	4037	5009	6021	7003
Garrard	4058	5054	–	–
Harman/ Kardon	4035	5090	–	–
Jensen	4061	5084	6024	–
JVC	4019	5018	6017	7005
	4020	5019	6018	–
	4070	5018	6044	–
	4019	5018	6044	7005
	4078	5073	6053	7008
Kenwood	4015	5014	6013	–
	4016	5015	6014	–
	4025	5034	6026	–
	4025	5024	–	–
	4071	5065	6047	7014
	4071	5065	6013	7014
	4082	5077	6056	7011
	4083	5078	6057	7014
GoldStar/LG	4009	5007	6006	–
Marantz	4017	5016	6015	–
	4029	5039	6015	–
	4094	5016	6035	–

Brand Marque Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección			
	Receiver/ amplifier/ Receptores	CD/lecteur CD / Reproductores de discos compactos	Tape/ cassette/ Decks de cassettes	MD/lecteur MD/Deck de minidisques
McIntosh	4097	5090	–	–
Onkyo	4034	5035	6027	–
	4034	5030	6027	–
	4084	5079	6058	7015
Panasonic	4008	5006	–	–
	4008	5005	6049	–
	4077	5072	6052	7010
	4099	5094	–	–
Philips	4017	5016	6015	–
Pioneer	4006	5004	6004	–
	4090	5028	6025	–
B&O	4018	5017	6016	–
(Bang&Olufsen)	4006	5017	6004	–
Crown	4018	5017	6004	–
Daewoo	4072	5066	6048	–
Denon	4081	5076	6055	7016
	4028	5009	6021	–
	4028	5009	6008	–
	4024	5023	6020	–
	4037	5009	6021	7003
Garrard	4058	5054	–	–
Harman/ Kardon	4035	5090	–	–
Jensen	4061	5084	6024	–
JVC	4019	5018	6017	7005
	4020	5019	6018	–
	4070	5018	6044	–
	4019	5018	6044	7005
	4078	5073	6053	7008
Kenwood	4015	5014	6013	–
	4016	5015	6014	–
	4025	5034	6026	–
	4025	5024	–	–
	4071	5065	6047	7014
	4071	5065	6013	7014
	4082	5077	6056	7011
	4083	5078	6057	7014
GoldStar/LG	4009	5007	6006	–
Marantz	4017	5016	6015	–
	4029	5039	6015	–
	4094	5016	6035	–
Toshiba	4101	5096	–	–

Brand Marque Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección			
	Receiver/ ampl			

Separate Components Appareils indépendants Componentes separados

Receiver/Amplifier Amplis-tuner/amplificaterus Receptores/amplificadores

Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	4001, 4002
Admiral	4095
Aiwa	4022, 4023, 4040, 4079
Akai	4074
B&O (Bang&Olufsen)	4068
Crown	4062
Daewoo	4005
Denon	4010, 4024, 4027, 4028, 4036, 4037
Finearts	4044
Goldstar/LG	4009
Harman/Kardon	4035
JVC	4019, 4020, 4047, 4070, 4078, 4098
Kenwood	4015, 4016, 4025, 4071, 4082, 4083
Magnavox	4021
Marantz	4029, 4094, 4044
McIntosh	4097
NAD	4103, 4033
Nakamichi	4104, 4087, 4086
Onkyo	4034, 4039, 4043, 4084
Panasonic	4008, 4077, 4099
Parasund	4066
Philips	4017
Pioneer	4006, 4018, 4032, 4072, 4081, 4085, 4090
RCA	4105, 4091, 4092, 4093
Rebox	4050
Rotel	4067
SABA	4041
Samsung	4042
Sansui	4086, 4087, 4089, 4038
Sanyo	4011
Sharp	4028, 4037, 4080, 4100
Sherwood	4012, 4013, 4031
Schneider	4004, 4069
Sounde-sign	4096
T+A	4063
Teac	4088
Technics	4007, 4026, 4045, 4073
Toshiba	4101
Yamaha	4102, 4014, 4030, 4046

CD Player Lecteurs CD Reproductores de discos compactos

Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	5001, 5002, 5099, 5100, 5101
Admial	5085
Aiwa	5021, 5022, 5037, 5074
Akai	5068
B&O (Bang&Olufsen)	5063
Crown	5059
Daewoo	5003
Denon	5008, 5009, 5023, 5026
Emerson	5091
Fisher	5040
Goldstar/LG	5098, 5007
Harman/Kardon	5031
Hitachi	5041
Jensen	5084
JVC	5018, 5019, 5033, 5073
Kenwood	5014, 5015, 5024, 5034, 5065, 5077, 5078
Magnavox	5016, 5026
Marantz	5071
McIntosh	5090
NAD	5029
Nakamichi	5044, 5082
Onkyo	5030, 5035, 5038, 5079
Optimus	5092
Panasonic	5006, 5072, 5094
Philips	5016
Pioneer	5004, 5017, 5028, 5066, 5076
RCA	5080, 5081, 5088, 5089
SABA	5042
Samsung	5043
Sansui	5082, 5083, 5086
Sanyo	5010
Sharp	5075, 5095
Sherwood	5011, 5012, 5039
Schneider	5064
Sounde-sign	5087
T+A	5060
Technics	5005, 5025, 5032, 5067
Toshiba	5096, 5097
Yamaha	5013, 5027, 5036

Cassette Deck Platines à cassette Decks de cassettes

Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	6001, 6002, 6003
Aiwa	6029, 6031, 6019, 6065
Denon	6021, 6007, 6008
Fisher	6009
GoldStar/LG	6006
Harman/Kardon	6024
JVC	6017, 6018
Kenwood	6026, 6013
Marantz	6033
NAD	6023
Nakamichi	6060, 6068
Onkyo	6027, 6028, 6030
Panasonic	6049
Philips	6033, 6067
Pioneer	6025, 6016, 6004
RCA	6063, 6064
Sansui	6060, 6059
Sanyo	6009
Sharp	6021, 6066
Teac	6059, 6061
Technics	6032, 6005, 6049
Yamaha	6022, 6012

DVD DVD Videodiscos digitales

Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	0001, 0024, 0023, 0025, 0201, 0202, 0203, 0211
Aiwa	0015
Denon	0006, 0017
Harman/Kardon	0018
Hitachi	0008
JVC	0007, 0208
KLH	0010
Onkyo	0016
Panasonic	0002, 0006, 0027, 0028, 0205, 0206, 0207, 0213, 0216
Philips	0012, 0221
Pioneer	0004, 0019, 0021, 0204, 0222, 0223
RCA	0005
Sharp	0011, 0219
Shinco	0022
Samsung	0014, 0212
Sylvania	0020, 0215, 0220
Thomson	0013
Toshiba	0003, 0209, 0210, 0217, 0224
Yamaha	0006
Zenith	0009, 0218
Daewoo	0029
LG	0009, 0218
Marantz	0012
Funai	0020, 0220
Teac	0022
Mitsubishi	0026
Broksonic	0214

MD Deck/DAT Deck Platines MD/DAT Decks de minidiscos/cinta audiodigital

Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	7001, 7002, 7101 (DAT)
Aiwa	7012
Akai	7018
Denon	7003
JVC	7008
Kenwood	7004, 7011, 7014
Marantz	7007
Onkyo	7015, 7102 (DAT)
Panasonic	7006, 7010
Pioneer	7016, 7102 (DAT)
Sansui	7009
Sharp	7013
Teac	7005
Yamaha	7017

Digital Satellite Receiver Récepteur satellite Receptor de satélite digital

DirecTV (for the U.S.A./pour les États-Unis/para EE.UU.)	
Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	3001, 3011, 3012
Hitachi	3005
Hughes	3004
Panasonic	3003
RCA/Proscan	3002, 3007
Toshiba	3006

Ster Choice (for Canada/pour le Canada/para Canadá)

Brand/Marque/Marca	Code No./Code/Núm. de código
General Instrument	3009*

* as of 1998/en 1998/en 1998

Express Vu (for Canada/pour le Canada/para Canadá)

Brand/Marque/Marca	Code No./Code/Núm. de código
Echo Star	3010*

* as of 1998/en 1998/en 1998

DVR (Digital Video Recorder) DVR (Magnétoscope numérique) DVR (Videograbadora digital)

Tivo	
Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	3201, 3205, 3206
Philips	3202

Replay

Brand/Marque/Marca	Code No./Code/Núm. de código
Panasonic	3203
Replay	3204