

Component code numbers
Codes d'appareils
Números de código de componentes

Brand Marque Marca	Component Appreil Componente	Code No. Code Núm. de código
TV and VCR Téléviseurs et magnétoscopes Televisores y videograbadoras		
Sony	VCR	1001 (VTR1: Beta) 1002 (VTR2: 8 mm) 1003 (VTR3: VHS) 1004, 1005, 1006 (VTR4, 5, 6: DV)
Admiral	TV VCR	8001 1030
Aiwa	VCR	8002, 8014, 8009 1041, 1050, 1035
Akai	VCR TV	1052, 1053, 1054 8003
AOC	TV	8012
Audinac	TV	8034
Audio Dynamic	VCR	1017, 1040
Bell & Howell	VCR TV	1033, 1046 8014, 8009, 8038
Brosonic	VCR TV	1020, 1022, 1017 8003, 8012
Canon	VCR	1012, 1011
CCE	VCR TV	1018, 1044, 1035, 1064 8063, 8072, 8011, 8041, 8073
Cineral	VCR TV	1044, 1064 8035, 8034
Citizen	VCR	1035
Craig	VCR TV	1018, 1035 8022, 8023, 8020, 8021
Croslex	TV	8011
Crown	TV	8023
Curtis Mathis	VCR TV	1007, 1041, 1012 8003, 8019, 8023
Daewoo	VCR TV	1044, 1015, 1012, 1064 8035, 8036, 8003, 8041, 8073
Daytron	TV	8013
DBX	VCR	1017, 1039, 1040
Dimensia	VCR	1007
Emerson	VCR	1044, 1022, 1023, 1019, 1020, 1021, 1041, 1058
Fisher	VCR TV	1033, 1037, 1038, 1036 8022, 8013, 8020, 8021, 8023, 8003, 8015, 8042
Funai	VCR	1041
General Electric	VCR TV	1032, 1007, 1012, 1062 8002, 8018, 8003, 8007, 8045
Goldstar/LG	VCR TV	1035 8003, 8013, 8012, 8030, 8046, 8050, 8051, 8049
GO VIDEO	VCR	1051, 1042, 1043
Gradiente	VCR TV	1061, 1047, 1041 8064, 8065, 8028, 8006
Hitachi	VCR TV	1011, 1007, 1008 8031, 8013, 8003, 8032
HQ	VCR	1015
Instant Replay	VCR	1012, 1011
JC Penny	VCR TV	1012, 1008, 1007, 1033, 1017, 1039, 1040 8003, 8002, 8030, 8007
JVC	VCR TV	1017, 1047, 1048, 1049, 1039, 1040 8028, 8029
Kenwood	VCR TV	1017, 1039, 1035, 1040 8033, 8013, 8003, 8023, 8034
KTV	TV	8033, 8013, 8003, 8023, 8034
LXI (Sears)	VCR TV	1041, 1035, 1008, 1036, 1037, 1033, 1038, 1052 8002, 8003, 8011, 8025, 8019, 8012, 8052
Magnavox	VCR TV	1013, 1011, 1012, 1010, 1063 8011, 8012, 8013, 8003, 8043, 8047
Marantz	VCR TV	1017, 1039, 1040 8024
Marta	VCR	1035
Memorex	VCR	1012, 1038
Minolta	VCR	1008, 1007

Brand Marque Marca	Component Appreil Componente	Code No. Code Núm. de código
Mitsubishi/MGA	VCR	1026, 1027, 1028, 1029, 1056, 1057, 1065, 1059
	TV	8024, 8003, 8012, 8066
Multitech	VCR	1028, 1041, 1024
NEC	VCR TV	1017, 1039, 1040 8003, 8012
Noblex	TV	8057, 8061, 8062
Nokia	VCR	1044, 1064
Olympic	VCR	1012, 1011
Optimus	VCR	1027
Orion	VCR	1055
Panasonic	VCR TV	1009, 1010, 1011, 1012, 1060 8018, 8016, 8017, 8007, 8049, 8067
Pentax	VCR	1008, 1007
Philco	VCR TV	1011, 1012, 1064, 1044, 1020 8011, 8013, 8003, 8068, 8035, 8031
Philips	VCR TV	1035, 1013, 1011, 1012, 1063 8011, 8056, 8043
Pioneer	VCR TV	1011 8037, 8018, 8019
Portland	TV	8003, 8008
Proton	TV	8071
Quasar	VCR TV	1011, 1012, 1009, 1010, 1006 8018, 8007, 8048
Radio Shack	TV	8002, 8012, 8024, 8023
RCA/PROSCAN	VCR TV	1007, 1008, 1011, 1012, 1013, 1014, 1015, 1016, 1063 8002, 8003, 8004, 8005, 8006, 8007, 8008, 8044, 8045, 8046, 8053
Realistic	VCR	1012, 1033, 1031, 1038, 1027, 1041
Sansui	VCR	1017
Singer	VCR	1018
Samsung	VCR TV	1025, 1016, 1024 8026, 8012, 8013, 8003, 8055
Sanyo	VCR TV	1033, 1038, 1064, 1046, 1044, 1035 8025, 8054, 8069, 8023
Scott	VCR TV	1015, 1016, 1024, 1038, 1026, 1027, 1028, 1029 8023, 8012
SEMP Toshiba	VCR TV	1025 8019
Serie Dorada	TV	8058
Sharp	VCR TV	1030, 1031 8014, 8013, 8015, 8070

Brand Marque Marca	Component Appreil Componente	Code No. Code Núm. de código
Shintom	VCR	1018
Signature 2000	VCR TV	1041, 1030 8014, 8009
Sylvania	VCR TV	1013, 1011, 1012, 1041, 1063 8011, 8012, 8003
Symphonic	VCR TV	1041 8023, 8039, 8040, 8074
Tashiro	VCR	1035
Tatung	VCR	1017, 1039, 1040
Teac	VCR	1017, 1039, 1041, 1040
Technics	VCR	1012, 1011
Toshiba	VCR TV	1015, 1014, 1052 8019, 8014, 8059, 8060
Videch	TV	8031, 8003, 8012
Wards	VCR TV	1030, 1031, 1038, 1034, 1035 8013, 8003, 8015, 8012
Yamaha	VCR	1033, 1017, 1039, 1040
Zenith	VCR TV	1034 8009, 8010

TV/VCR Combo
Combi téléviseur/magnétoscope
Combinación de TV/VCR

Brand Marque Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección	
	TV	VCR
Sony	8001	1003
Daewoo	8036	1044
Emerson	8021	1023
	8021	1022
	8020	1058
General Electric	8027	1024
	8027	1025
GoldStar/LG	8003, 8013, 8012, 8030, 8046, 8050, 8051, 8049	1035
Gradiente	8046	1035
Magnavox	8011, 8018, 8047	1012, 1013
Panasonic	8018	1011
	8018	1012
Quasar	8018, 8048	1012, 1009, 1010
RCA/PROSCAN	8018	1011
Samsung	8023, 8027	1024, 1025, 1029
Symphonic	8023	1041

Analog Cable Box
Décodeur analogique de câblodistribution
Decodificador analógico

Brand/Marque/Marca	Code No./Code/Núm. de código
Hamlin/Regal	9022, 9023, 9024, 9025, 9026
Jerrold/G.I.	9044, 9001, 9002, 9003, 9004, 9005, 9006, 9007, 9008, 9018, 9043
NET	9042
Oak	9027, 9028, 9029
Panasonic	9019, 9020, 9021
Pioneer	9014, 9015
Scientific Atlanta	9009, 9010, 9011
Tocom	9016, 9017, 9043
Zenith	9012, 9013

Digital Cable Box
Décodeur de télévision numérique
Decodificador digital

Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	3101
Jerrold/G.I.	3103
Motorola	3103
Panasonic	3203
Philips	3104
Scientific Atlanta	3102

Mini Hi-Fi component system
Appareils d'une minichaîne Hi-Fi
Minisistemas de componentes de alta fidelidad

Brand Marque Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección	CD/lecteur CD / Reproductores de discos compactos	Tape/ cassette/ Decks de cassettes	MD/lecteur MD/Deck de minidisques
Sony	4001	5001	6001	7001
	4001	5001	6002	-
	4002	5001	6001	7001
	4002	5001	6002	-
	4003	5002	6002	-
	4003	5002	6003	-
	4003	5002	6004	-
	4003	5002	6005	-
Admiral	4095	5085	-	-
Aiwa	4022	5021	-	-
	4023	5022	6025	-
	4023	5022	6026	-
	4040	5037	6042	-
	4079	5074	6072	7012
Akai	4074	5068	6068	-
B&O	4068	5063	6059	-
(Bang&Olufsen)				
Crown	4062	5059	-	-
Daewoo	4005	5003	-	-
Denon	4010	5008	6009	-
	4028	5099	6028	-
	4028	5009	6029	-
	4028	5009	6010	-
	4024	5023	6027	-
	4037	5009	6028	7003
Garrard	4058	5054	-	-
Harman/ Kardon	4035	5090	-	-
Jensen	4061	5084	6033	-
JVC	4019	5018	6022	7005
	4019	5018	6023	-
	4020	5019	6024	-
	4070	5018	6060	-
	4070	5018	6061	-
	4019	5018	6060	7005
	4019	5018	6061	-
	4078	5073	6071	7008

Brand Marque Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección	CD/lecteur CD / Reproductores de discos compactos	Tape/ cassette/ Decks de cassettes	MD/lecteur MD/Deck de minidisques
Kenwood	4015	5014	6015	-
	4016	5015	6017	-
	4016	5015	6018	-
	4025	5034	6036	-
	4025	5024	-	-
	4071	5065	6064	7014
	4071	5065	6065	-
	4071	5065	6015	7014
	4071	5065	6016	-
Admiral	4095	5085	-	-
Aiwa	4022	5021	-	-
	4023	5022	6025	-
	4023	5022	6026	-
	4040	5037	6042	-
	4079	5074	6072	7012
Akai	4074	5068	6068	-
B&O	4068	5063	6059	-
(Bang&Olufsen)				
Crown	4062	5059	-	-
Daewoo	4005	5003	-	-
Denon	4010	5008	6009	-
	4028	5099	6028	-
	4028	5009	6029	-
	4028	5009	6010	-
	4024	5023	6027	-
	4037	5009	6028	7003
Garrard	4058	5054	-	-
Harman/ Kardon	4035	5090	-	-
Jensen	4061	5084	6033	-
JVC	4019	5018	6022	7005
	4019	5018	6023	-
	4020	5019	6024	-
	4070	5018	6060	-
	4070	5018	6061	-
	4019	5018	6060	7005
	4019	5018	6061	-
	4078	5073	6071	7008
Kenwood	4015	5014	6015	-
	4016	5015	6017	-
	4016	5015	6018	-
	4025	5034	6036	-
	4025	5024	-	-
	4071	5065	6064	7014
	4071	5065	6065	-
	4071	5065	6015	7014
	4071	5065	6016	-
Admiral	4095	5085	-	-
Aiwa	4022	5021	-	-
	4023	5022	6025	-
	4023	5022	6026	-
	4040	5037	6042	-
	4079	5074	6072	7012
Akai	4074	5068	6068	-
B&O	4068	5063	6059	-
(Bang&Olufsen)				
Crown	4062	5059	-	-
Daewoo	4005	5003	-	-
Denon	4010	5008	6009	-
	4028	5099	6028	-
	4028	5009	6029	-
	4028	5009	6010	-
	4024	5023	6027	-
	4037	5009	6028	7003
Garrard	4058	5054	-	-
Harman/ Kardon	4035	5090	-	-
Jensen	4061	5084	6033	-
JVC	4019	5018	6022	7005
	4019	5018	6023	-
	4020			

Separate Components
Appareils indépendants
Componentes separados

Receiver/Amplifier
Amplis-tuner/amplificaterus
Receptores/amplificadores

Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	4001, 4002
Admiral	4095
Aiwa	4022, 4023, 4040, 4079
Akai	4074
B&O (Bang&Olufsen)	4068
Crown	4062
Daewoo	4005
Denon	4010, 4024, 4027, 4028, 4036, 4037
Finearts	4044
Goldstar/LG	4009
Harman/Kardon	4035
JVC	4019, 4020, 4047, 4070, 4078, 4098
Kenwood	4015, 4016, 4025, 4071, 4082, 4083
Magnavox	4021
Marantz	4029, 4094, 4044
McIntosh	4097
NAD	4103, 4033
Nakamichi	4104, 4087, 4086
Onkyo	4034, 4039, 4043, 4084
Panasonic	4008, 4077, 4099
Parasund	4066
Philips	4017
Pioneer	4006, 4018, 4032, 4072, 4081, 4085, 4090
RCA	4105, 4091, 4092, 4093
Rebox	4050
Rotel	4067
SABA	4041
Samsung	4042
Sansui	4086, 4087, 4089, 4038
Sanyo	4011
Sharp	4028, 4037, 4080, 4100
Sherwood	4012, 4013, 4031
Schneider	4004, 4069
Sounde-sign	4096
T+A	4063
Teac	4088
Technics	4007, 4026, 4045, 4073
Toshiba	4101
Yamaha	4102, 4014, 4030, 4046

CD Player
Lecteurs CD
Reproductores de discos compactos

Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	5001, 5002, 5099
Admial	5085
Aiwa	5021, 5022, 5037, 5074
Akai	5068
B&O (Bang&Olufsen)	5063
Crown	5059
Daewoo	5003
Denon	5008, 5009, 5023, 5026
Emerson	5091
Fisher	5040
Goldstar/LG	5098, 5007
Harman/Kardon	5031
Hitachi	5041
Jensen	5084
JVC	5018, 5019, 5033, 5073
Kenwood	5014, 5015, 5024, 5034, 5065, 5077, 5078
Magnavox	5016, 5026
Marantz	5071
McIntosh	5090
NAD	5029
Nakamichi	5044, 5082
Onkyo	5030, 5035, 5038, 5079
Optimus	5092
Panasonic	5006, 5072, 5094
Philips	5016
Pioneer	5004, 5017, 5028, 5066, 5076
RCA	5080, 5081, 5088, 5089
SABA	5042
Samsung	5043
Sansui	5082, 5083, 5086
Sanyo	5010
Sharp	5075, 5095
Sherwood	5011, 5012, 5039
Schneider	5064
Sounde-sign	5087
T+A	5060
Technics	5005, 5025, 5032, 5067
Toshiba	5096, 5097
Yamaha	5013, 5027, 5036

Cassette Deck
Platines à cassettes
Decks de cassettes

Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	6001, 6002, 6005
Aiwa	6042, 6045, 6025
Denon	6028, 6029, 6009, 6010
Fisher	6011
GoldStar/LG	6008
Harman/Kardon	6033
JVC	6022, 6023, 6024
Kenwood	6036, 6037, 6015, 6016
Marantz	6047
NAD	6031, 6032
Nakamichi	6079
Onkyo	6038, 6039, 6040, 6041, 6043, 6044
Panasonic	6067
Philips	6047
Pioneer	6034, 6035, 6020, 6021, 6006
RCA	6084, 6085
Sansui	6079, 6077, 6078
Sanyo	6011
Sharp	6028
Teac	6077, 6078, 6080, 6081
Technics	6046, 6007, 6067
Yamaha	6030, 6014

DVD
Lecteur DVD
Reproductor de videodiscos digitales

Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	0001, 0024, 0023
Aiwa	0015
Denon	0006, 0017
Harman/Kardon	0018
Hitachi	0008
JVC	0007
KLH	0010
Onkyo	0016
Panasonic	0002, 0006
Philips	0012
Pioneer	0004, 0019, 0021
RCA	0005
Sharp	0011
Shinco	0022
Samsung	0014
Sylvania	0020
Thomson	0013
Toshiba	0003
Yamaha	0006
Zenith	0009

MD Deck/DAT Deck
Platines MD/DAT
Decks de minidiscos/cinta audiodigital

Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	7001, 7002, 7101 (DAT)
Aiwa	7012
Akai	7018
Denon	7003
JVC	7008
Kenwood	7004, 7011, 7014
Marantz	7007
Onkyo	7015, 7102 (DAT)
Panasonic	7006, 7010
Pioneer	7016, 7102 (DAT)
Sansui	7009
Sharp	7013
Teac	7005
Yamaha	7017

Digital Satellite Receiver
Récepteur satellite
Receptor de satélite digital

DirecTV (for the U.S.A./pour les États-Unis/para EE.UU.)	
Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	3001
Hitachi	3005
Hughes	3004
Panasonic	3003
RCA/Proscan	3002, 3007
Toshiba	3006

Ster Choice (for Canada/pour le Canada/para Canadá)

Brand/Marque/Marca	Code No./Code/Núm. de código
General Instrument	3009*

* as of 1998/en 1998/en 1998

Express Vu (for Canada/pour le Canada/para Canadá)

Brand/Marque/Marca	Code No./Code/Núm. de código
Echo Star	3010*

* as of 1998/en 1998/en 1998

LD (Laser Disc)
LD (Disque laser)
LD (Disco láser)

Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	0101, 0102, 0103, 0104
Hitachi	0108
Kenwood	0113, 0114
Magnavox	0110
Panasonic	0105, 0106, 0107
Philips	0115
Pioneer	0109
Sanyo	0112
Sharp	0111, 0116

Light
Appareil d'éclairage
Luz

Brand Marque Marca	Product Produit Producto	Code No Code Núm. de código
Lutron	Grafik Eye	2001
	HomeWorks interactive	2004
	Radio RA	2002
	Spacer	2001
	Spacer System	2003
X10		2005

DVR (Digital Video Recorder)
DVR (Magnétoscope numérique)
DVR (Videograbadora digital)

Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	3205, 3206, 3207

Tivo

Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	3201
Philips	3202

Replay

Brand/Marque/Marca	Code No./Code/Núm. de código
Panasonic	3203
Replay	3204