

Component code numbers

Codes d'appareils

Números de código de componentes

TV		Téléviseurs		Televisores	
Brand Marque Marca	Code No. Code Núm. de código	Brand Marque Marca	Code No. Code Núm. de código	Brand Marque Marca	Code No. Code Núm. de código
Sony	8001, 8201 8202	Pioneer	8037, 8018, 8019, 8210		
Admiral	8002, 8014, 8009	Polaroid	8098		
Akai	8003	Portland	8003, 8008		
AOC	8012	Proton	8071		
Audinac	8034	Quasar	8018, 8007, 8048		
Bell & Howell	8014, 8009, 8038	Radio Shack	8002, 8012, 8024, 8023, 8015		
Broksonic	8003, 8012, 8075	RCA/PROSCAN	8002, 8003, 8004, 8005, 8006, 8007, 8008, 8044, 8045, 8046, 8053, 8089		
CCE	8063, 8072, 8011, 8041, 8073				
Cineral	8035, 8034	Samsung	8026, 8012, 8013, 8003, 8055, 8027, 8206		
Craig	8022, 8023, 8020, 8021				
Croslex	8011	Sanyo	8025, 8054, 8069, 8023		
Crown	8023	Scott	8023, 8012		
Curtis Mathis	8003, 8019, 8023	SEMP Toshiba	8019		
Daewoo	8035, 8036, 8003, 8041, 8073	Serie Dorada	8058		
Daytron	8013	Sharp	8014, 8013, 8015, 8070, 8204		
Durabrand	8080, 8081, 8092	Signature 2000	8014, 8009		
Emerson	8022, 8013, 8020, 8021, 8023, 8003, 8015, 8042, 8039, 8084	Sylvania	8011, 8012, 8003, 8076, 8099		
ESA	8083, 8097	Symphonic	8023, 8039, 8040, 8074		
Fisher	8025	Syntax	8096		
Funai	8099	Toshiba	8019, 8014, 8059, 8060, 8052, 8078, 8205		
General Electric	8002, 8018, 8003, 8007, 8045, 8049	Videch	8031, 8003, 8012		
Goldstar/LG	8003, 8013, 8012, 8030, 8046, 8050, 8051, 8049, 8209	View Sonic	8093, 8094, 8095		
Gradiente	8064, 8065, 8028, 8006, 8046	Wards	8013, 8003, 8015, 8012		
Hitachi	8031, 8013, 8003, 8032	Zenith	8009, 8010		
JC Penny	8003, 8002, 8030, 8007				
Jensen	8082				
JVC	8028, 8029, 8208				
KTV	8033, 8013, 8003, 8034, 8023				
LXI (Sears)	8002, 8003, 8011, 8025, 8019, 8012, 8052				
Magnavox	8011, 8012, 8013, 8003, 8043, 8047, 8018, 8086, 8087, 8088				
Marantz	8024				
Memorex	8080				
Mitsubishi/MGA	8024, 8003, 8012, 8066, 8091				
NEC	8003, 8012				
Noblex	8057, 8061, 8062				
Orion	8085, 8090				
Panasonic	8018, 8016, 8007, 8049, 8067, 8077, 8079, 8017, 8203				
Philco	8011, 8013, 8003, 8068, 8035, 8031				
Philips	8011, 8056, 8043, 8207				

VCR		Magnétoscopes		Videograbadoras	
Brand Marque Marca	Code No. Code Núm. de código	Brand Marque Marca	Code No. Code Núm. de código	Brand Marque Marca	Code No. Code Núm. de código
Sony	1001 (VTR1: Beta) 1002 (VTR2: 8 mm) 1003 (VTR3: VHS) 1004, 1005, 1006 (VTR4, 5, 6: DV)	Pentax	1008, 1007		
Admiral	1030	Philco	1011, 1012, 1064, 1044, 1020		
Aiwa	1041, 1050, 1035	Philips	1035, 1013, 1011, 1012, 1063		
Akai	1052, 1053, 1054	Pioneer	1011		
Audio Dynamic	1017, 1040	Quasar	1011, 1012, 1009, 1010, 1006		
Bell & Howell	1033, 1046	RCA/PROSCAN	1007, 1008, 1011, 1012, 1013, 1014, 1015, 1016, 1063		
Broksonic	1020, 1022, 1017, 1066				
Canon	1012, 1011	Realistic	1012, 1033, 1031, 1038, 1027, 1041		
CCE	1018, 1044, 1035, 1064	Sansui	1017		
Cineral	1044, 1064	Singer	1018		
Citizen	1035	Samsung	1025, 1016, 1024, 1029		
Craig	1018, 1035	Sanyo	1033, 1038, 1064, 1046, 1044, 1035, 1074		
Curtis Mathis	1007, 1041, 1012	Scott	1015, 1016, 1024, 1038, 1026, 1027, 1028, 1029		
Daewoo	1044, 1015, 1012, 1064	SEMP Toshiba	1025		
DBX	1017, 1039, 1040	Sharp	1030, 1031		
Dimensia	1007	Shintom	1018		
Emerson	1044, 1022, 1023, 1019, 1020, 1021, 1041, 1058, 1070, 1071	Signature 2000	1041, 1030		
Fisher	1033, 1037, 1038, 1036	Sylvania	1013, 1011, 1012, 1041, 1063, 1067		
Funai	1041	Symphonic	1041, 1075, 1076		
General Electric	1032, 1007, 1012, 1062	Tashiro	1035		
Goldstar/LG	1035	Tatung	1017, 1039, 1040		
GO VIDEO	1051, 1042, 1043	Teac	1017, 1039, 1041, 1040		
Gradiente	1061, 1047, 1041	Technics	1012, 1011		
Hitachi	1011, 1007, 1008	Toshiba	1015, 1014, 1052, 1069		
HQ	1015	Wards	1030, 1031, 1038, 1034, 1035		
Instant Replay	1012, 1011	Yamaha	1033, 1017, 1039, 1040		
JC Penny	1012, 1008, 1007, 1033, 1017, 1039, 1040	Zenith	1034, 1077		
JVC	1017, 1047, 1048, 1049, 1039, 1040				
Kenwood	1017, 1039, 1035, 1040				
LXI (Sears)	1041, 1035, 1008, 1036, 1037, 1033, 1038, 1052				
Magnavox	1013, 1011, 1012, 1010, 1063, 1073				
Marantz	1017, 1039, 1040				
Marta	1035				
Memorex	1012, 1038				
Minolta	1008, 1007				
Mitsubishi/MGA	1026, 1027, 1028, 1029, 1056, 1057, 1065, 1059				
Multitech	1028, 1041, 1024				
NEC	1017, 1039, 1040				
Nokia	1044, 1064				
Olympic	1012, 1011				
Optimus	1027				
Orion	1055, 1072				
Panasonic	1009, 1010, 1011, 1012, 1060, 1068				

TV/VCR Combo		
Combi téléviseur/magnétoscope		
Combinación de TV/VCR		
Brand Marque Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección	
	TV	VCR
Sony	8001	1003
Daewoo	8036	1044
Emerson	8021	1023
	8021	1022
	8020	1058
General Electric	8027	1024
	8027	1025
GoldStar/LG	8003, 8013, 8012, 8030, 8046, 8050, 8051, 8049	1035
Gradiente	8046	1035
Magnavox	8011, 8018, 8047	1012, 1013
Panasonic	8018	1011
	8018	1012
Quasar	8018, 8048	1012, 1009, 1010
RCA/PROSCAN	8018	1011
Samsung	8034, 8027	1024, 1025, 1029
Symphonic	8034	1041

Analog Cable Box / Décodeur analogique de câblodistribution / Decodificador analógico

Brand/Marque/Marca	Code No./Code/ Núm. de código
Hamlin/Regal	9022, 9023, 9024, 9025, 9026
Jerrold/G.I.	9044, 9001, 9002, 9003, 9004, 9005, 9006, 9007, 9008, 9018, 9022, 9043
NET	9042
Oak	9027, 9028, 9029
Panasonic	9019, 9020, 9021
Pioneer	9014, 9015
Scientific Atlanta	9009, 9010, 9011
Tocom	9016, 9017, 9043
Zenith	9012, 9013

Digital Cable Box	
Décodeur de télévision numérique	
Decodificador digital	
Brand/Marque/Marca	Code No./Code/ Núm. de código
Sony	3101
Jerrold/G.I.	3103
Motorola	3103
Panasonic	3203
Philips	3104
Scientific Atlanta	3102

DVR (Digital Video Recoder) DVR (Magnétoscope numérique) DVR (Videograbadora digital)

Brand/Marque/Marca	Code No./Code/ Núm. de código
Sony	3201, 3205, 3206, 3207, 3208, 3209, 3210
DirecTV	3214
JVC	3212, 3213
Panasonic	3203
Philips	3202
Replay	3204
Scientific Atlanta	3211

Mini Hi-Fi component system Composants d'une minichaine hi-fi Sistemas de minicomponentes de alta fidelidad

Brand Marque Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección	Brand Marque Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección
	Receiver/ ampli-tuner/ Receptores	CD/ lecteur CD/ Reproductores de discos compactos	Tape/ cassette/ Decks de cassettes
		MD/ lecteur MD/ Deck de minidisocs	
Sony	4001	5001	6001 7001
	4002	5001	6001 7001
	4003	5002	6001 –
	4003	5002	6002 –
	4003	5002	6003 –
Admiral	4095	5085	– –
Aiwa	4022	5021	– –
	4023	5022	6019 –
	4040	5037	6029 –
	4079	5074	6056 7012
Akai	4074	5068	6042 –
Crown	4062	5059	– –
Daewoo	4005	5003	– –
Denon	4010	5008	6007 –
	4028	5009	6021 –
	4028	5009	6008 –
	4024	5023	6020 –
	4037	5009	6021 7003
Garrard	4058	5054	– –
Haman/Kardon	4035	5031	– –
Jensen	4061	5084	– –
JVC	4019	5018	6017 7005
	4020	5019	6018 –
	4070	5018	6036 –
	4019	5018	6036 7005
	4078	5073	6044 7008
Kerwood	4015	5014	6013 –
	4016	5015	6014 –
	4025	5034	6026 –
	4025	5024	– –
	4071	5065	6039 7014
	4071	5065	6013 7014
	4082	5077	6047 7011
	4083	5078	6048 7014
GoldStar/LG	4009	5007	6006 –
Marantz	4017	5016	6015 –
	4029	5071	6015 –
	4094	5016	– –
McIntosh	4097	5090	– –
Onkyo	4034	5035	6027 –
	4034	5030	6027 –
	4084	5079	6049 7015
Panasonic	4008	5006	– –
	4008	5005	6041 –
	4077	5072	6043 7010
	4099	5094	– –
Philips	4017	5016	6015 –
Pioneer	4006	5004	6004 –
	4090	5028	6025 –
	4018	5017	6016 –
	4006	5017	6004 –
	4018	5017	6004 –
	4072	5066	6040 –
	4081	5076	6046 7016
RCA	4091	5080	6053 –
SABA	4041	5042	– –
Samsung	4042	5043	– –
Sansui	4087	5083	6050 –
Sanyo	4011	5010	6009 –
Schneider	4069	5064	6037 –
Sharp	4037	5009	6021 7003
	4016	5015	– –
	4028	5009	6021 –
	4028	5009	6008 –
	4080	5075	– 7013
	4100	5095	– –
Sherwood	4012	5011	6010 –
	401		

