

# SONY®

## Television

Reference Guide

### **Sony Customer Support**

<http://esupport.sony.com/ES/LA/>

Please Do Not Return the Product  
to the Store

## BRAVIA

XBR-65X757D / 65X755D / 55X707D / 55X705D / 49X707D / 49X705D

# Table of Contents

IMPORTANT NOTICE .....	2
Safety Information .....	3
Precautions .....	5
Parts and Controls .....	7
Controls and Indicators .....	7
Using Remote Control .....	8
Remote Control Parts Description .....	8
Connection Diagram .....	10
Installing the TV to the Wall .....	12
Detaching the Table-Top Stand from the TV .....	12
Installing the TV against a wall or enclosed area .....	13
Troubleshooting .....	14
Troubles and Solutions .....	14
Specifications .....	15

## Introduction

Thank you for choosing this Sony product. Before operating the TV, please read this manual thoroughly and retain it for future reference.

### Note

- Images and illustrations used in Setup Guide and this manual are for reference only and may differ from actual product.

The 65" class has a 64.5 inch (163.9 cm) viewable image size, the 55" class has a 54.6 inch (138.8 cm) viewable image size and the 49" class has a 48.5 inch (123.2 cm) viewable image size (measured diagonally).

## Location of the Setup Guide

Setup Guide is placed on top of the cushion inside the TV carton.

## Help Guide

Help Guide explains the information on how to use the TV's features. To display Help Guide on the TV, press **HELP** on the remote control and select [Help Guide].

## Location of the identification label

Labels for the TV Model No. and Power Supply rating are located on the rear of the TV.

## IMPORTANT NOTICE

### Owner's Record

The model and serial numbers are located at the side and rear of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this TV.

Model Name

\_\_\_\_\_

Serial No.

\_\_\_\_\_

## For models with supplied plug adaptor:

This plug adaptor is not for the use in Chile, Paraguay and Uruguay. Please use this plug adaptor in the countries where it is necessary.

## ADVERTENCIA

Para reducir el riesgo de incendio o descargas eléctricas, no exponga este producto a la humedad ni a la lluvia.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

El producto no debe estar expuesto a goteos ni salpicaduras, ni se deben colocar sobre él objetos con líquidos como floreros.

## PRECAUCIÓN

Para evitar descargas eléctricas y exposición a contactos eléctricos, no utilice este enchufe de corriente alterna con un cable de extensión, receptáculo u otro tomacorriente a menos que los contactos eléctricos puedan ser introducidos completamente.

- Operate the TV only on 110 V - 240 V AC

## Seguridad

- Utilice el cable de alimentación de ca especificado por Sony y que corresponda al voltaje de la zona donde vaya a utilizarlo.
- Por razones de seguridad, el enchufe está diseñado de tal forma que sólo puede conectarse en una dirección en los tomacorrientes de pared. Si no puede introducir completamente los contactos del enchufe en el tomacorriente, póngase en contacto con su distribuidor.
- Si se introduce algún objeto sólido o cae líquido en la unidad, desenchufe el televisor inmediatamente y haga que sea revisado por personal especializado antes de volver a operarlo.
- Desconecte el televisor si no va a utilizarlo durante algunos días. Para ello, tire del enchufe, nunca del cable.
- Consulte la información sobre seguridad en Folleto de instrucciones de seguridad.

## Safety Information

### WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

 
- Using cabinets or stands recommended by the manufacturer of the television set.
  - Only using furniture that can safely support the television set.
  - Ensuring the television set is not overhanging the edge of the supporting furniture.
  - Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
  - Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
  - Educating children about the dangers of climbing on furniture to reach the television set or its controls.
- If your existing television set is being retained and relocated, the same considerations as above should be applied.

### Before setting up your TV

Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. See page 12 (Installing the TV to the Wall) if you want to mount the TV to a wall. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand. You will need a Phillips screwdriver (not supplied) and the supplied screws to complete the task. Look for the Setup Guide.

Be sure to consider the following while setting up your TV:

- Disconnect all cables when carrying the TV.
- Carry the TV with the adequate number of people; larger size TVs require two or more people.
- Correct hand placement while carrying the TV is very important for safety and to avoid damage.

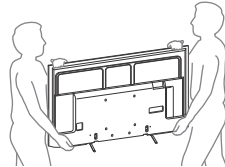

- Ensure your TV has adequate ventilation, see page 13.
- For best picture quality, do not expose the screen to direct illumination or sunlight.
- Avoid installing the TV in a room with reflective wall and floor materials.
- Avoid moving the TV from a cold area to a warm area. Sudden room temperature changes may cause moisture condensation. This may cause the TV to show poor picture and/or poor color. Should this occur, allow moisture to evaporate completely before powering the TV on.

### Securing the TV



Sony strongly recommends taking measures to prevent the TV from toppling over. Unsecured TVs may topple and result in property damage, serious bodily injury or even death.

## Preventing the TV from Toppling

- Secure the TV to a wall and/or stand.
- Do not allow children to play or climb on furniture and TV sets.
- Avoid placing or hanging items on the TV.
- Never install the TV on:
  - slippery, unstable and/or uneven surfaces.
  - furniture that can easily be used as steps, such as a chest of drawers.
- Install the TV where it cannot be pulled, pushed, or knocked over.
- Route all AC power cords and connecting cables so that they are not accessible to curious children.

 
## Recommended Measures to Secure the TV

Consider the following measures when securing your TV to a Stand (not supplied).

### 1 Secure the Stand for the TV.

Make sure the Stand can adequately support the weight of the TV. Use two angle braces (not supplied) to secure the stand. For each angle brace use the appropriate hardware to:


- Attach one side of the angle brace to the wall stud.
- Attach the other side to the Stand.

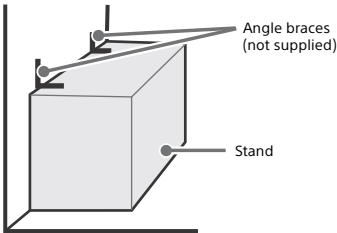


### 2 Secure the TV to the Stand.

Use the optional hardware listed as follows (not supplied):

 - M6 machine screw (screwed into the TV's rear cover)
- A screw or similar (attach it to the Stand)
- Rope or chain (strong enough to support the weight of the TV). Make sure that there is no excess slack in the rope or chain.


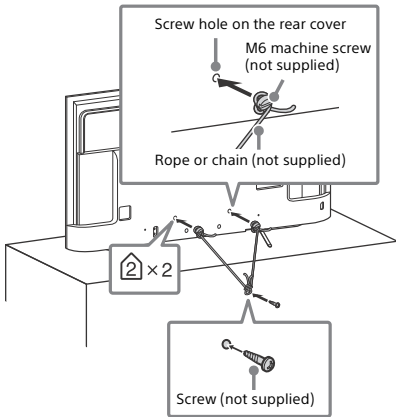


 The length of the M6 machine screw differs depending on the rope or chain diameter. Please see below illustration.

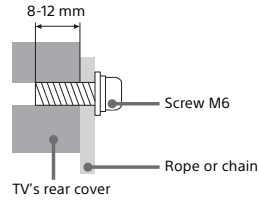


### 3 Anchor the TV to the wall by using bolts, wall anchor and chain (or rope).

  M6 eye bolts (not supplied)

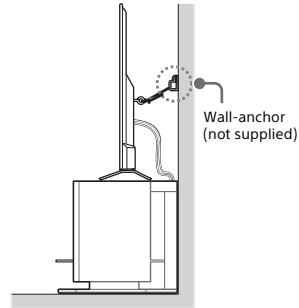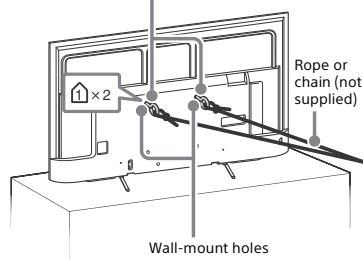

 Please see below illustration for M6 eye bolt length.

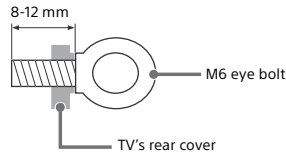

### Note

- Securing the TV to the stand without securing the TV and the stand to the wall provides minimum protection against the TV toppling over. For further protection, be sure to follow the three measures recommended.

## Precautions

### How to care for your BRAVIA TV

Safety is very important. Please read and follow the safety documentation (Safety Booklet) separately provided.

Unplug the TV and other connected equipment from the wall outlet before you begin cleaning your TV.



- Wipe the LCD screen gently with a soft cloth.

- Stubborn stains may be removed with a cloth slightly moistened with a solution of mild soap and warm water.

 


- If using a chemically pretreated cloth, please follow the instruction provided on the package.
- Never spray water or detergent directly on the TV set. It may drip to the bottom of the screen or exterior parts and enter the TV set, and may cause damage to the TV set.
- Never use strong solvents such as a thinner, alcohol or benzine for cleaning.
- Do not plug in the TV into the wall outlet until the moisture from cleaning has evaporated.
- Do not touch the TV if your hand is covered in any chemical substance such as hand cream or sunblock.

The TV should also be placed on a stable surface to prevent it from toppling over (see page 4). If you have young children or pets at home, check regularly to ensure the TV is securely fastened.

### Recommendation for an F type plug

Projection of the inner wire from the connection part must be less than 1.5 mm.



(Reference drawing for an F type plug)

## La experiencia de TV BRAVIA® 4K

¡Gracias por elegir a Sony! Su nuevo TV BRAVIA® le brinda una "Experiencia de TV 4K". Este documento le ayudará a aprovechar su TV al máximo.

Registre su TV en:

<http://esupport.sony.com/LA/perl/registration.pl>

## Los cuatro pasos para una experiencia de TV 4K

TV, fuente, sonido y configuración.

### 1 TV

Ahora que ya hizo la mejor elección en tecnología LCD TV con retroiluminación LED, retire todos los accesorios del empaque antes de configurar su TV.

### 2 Fuente

Para disfrutar los increíbles detalles de su TV BRAVIA debe tener acceso a programación HD, la cual se puede obtener de las siguientes maneras:

- Solicitando a su proveedor servicio de alta definición (4K).

- Recibiendo emisiones de HD por aire a través de una antena para TV de alta definición (HD) conectada directamente a la parte posterior del TV. Visite <http://www.antennaweb.org> para recibir más información sobre la selección y configuración de antena.

- A través de los reproductores Blu-ray Disc™ de super alta resolución ó demás equipos HD de Sony.

### 3 Sonido






Complete la experiencia de alta definición con un sistema de sonido envolvente BRAVIA Sync™ o un receptor de audio/video de Sony.

### 4 Ajustes

Instale su TV y conecte sus fuentes. Consulte la página 10 para ver ejemplos de diagramas de conexión. Para obtener la más alta calidad de experiencia 4K, utilice los cables de HDMI (Interfaz multimedia de alta definición) de Sony.

Este TV muestra todas las señales de entrada de video en una resolución de 3 840 puntos × 2 160 líneas.

The following chart shows the high-definition (HD) and standard-definition (SD) video formats supported by your BRAVIA TV inputs.

	INPUT	VIDEO	AUDIO	SUPPORTED FORMATS							PC*3	
				4K*1	1080/24p/30p	1080p*1	1080i	720/24p/30p	720p*1	480p/576p*2		480i/576i*2
4K/HD	HDMI			✓	✓	✓	✓	✓	✓	✓	✓	✓
	COMPONENT	 Y P <sub>B</sub> P <sub>R</sub>	 Audio L/R			✓	✓		✓	✓	✓	
SD	VIDEO	 Composite video connection	 Audio L/R								✓	

 
\*1 For details of supported formats, refer to the "Specifications" in this manual.

\*2 576i, 576p: Not available with X757D/X707D model series.

\*3 For supported PC formats refer to the Help Guide.

# Parts and Controls

## Controls and Indicators

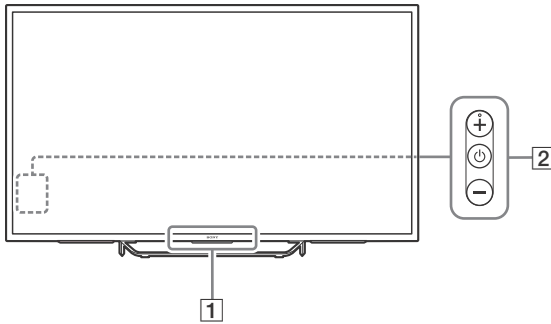


### 1 Remote Control sensor\* / Light sensor\* / Illumination LED

The illumination LED lights up or blinks according to the status of the TV.


- White  
When turning on the TV/picture off mode/software update, etc.
- Cyan  
When connecting with a mobile device wirelessly.
- Amber  
Timer is set.


### 2 (Power) / + / -

**When the TV is off,**

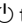Press  to power on.

**When the TV is on,**

Long press  to power off.

Press  repeatedly to change the function, then press + or - button to:

 
- Adjust the volume
- Select the channel
- Select the input source of TV

\* Do not place anything near the sensor.

# Using Remote Control

## Remote Control Parts Description

The remote control shape, location, availability and function of remote control button may vary depending on your region/country/TV model.

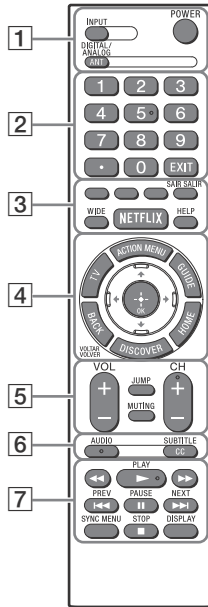

### 1 INPUT

Display and select the input source.

### POWER

Turn on or turn off the TV (standby mode).

### ANT/DIGITAL/ANALOG

Switches to Cable and Antenna channels.

### 2 Number buttons



Use with the 0-9 buttons to select digital channels.

### EXIT/SAIR SALIR

Return to the previous screen or exit from the menu. When an Interactive Application service is available, press to exit from the service.

### 3 Color buttons

Execute corresponding function at that time.

### WIDE

Change the screen format.

### NETFLIX (Only on limited region/country/TV model)

Access the "NETFLIX" online service.

### HELP

Display Help Menu. Help Guide can be accessed from here.



#### 4 ACTION MENU

Display a list of contextual functions.

##### TV

- Switch to a TV channel or input from other applications.
- Turn on the TV to display TV channel or input.

##### GUIDE

Display the digital program guide.

##### BACK/VOLVAR VOLVER

Return to previous screen.

##### HOME

Display the TV Home Menu.

##### DISCOVER

Bring up the Content Bar to search for content.

▲/▼/◀/▶/⊕ (Item select/Enter)

#### 5 VOL +/- (Volume)

Adjust the volume.

##### JUMP

Jump back and forth between two channels or inputs. The TV alternates between the current channel or input and the last channel or input that was selected.

##### MUTING

Mute the sound. Press again to restore the sound.

##### CH +/- (Channel)

Select the channel.

#### 6 AUDIO

Change the language for the program currently being viewed.

##### CC/SUBTITLE

Turn subtitles on or off (when the feature is available).

#### 7 ◀◀/▶▶/▶▶/◀◀/⏸/▶▶/■

Operate media contents on TV and connected BRAVIA Sync-compatible device.

##### SYNC MENU

 
Display the BRAVIA Sync Menu.

##### DISPLAY

Display information about the channel/program/input you are viewing.

#### Guidelines for IR Remote Control

- Point your remote control directly at the IR sensor located on your TV.
- Make sure that no objects are blocking the path between the remote control and the IR sensor on your TV.

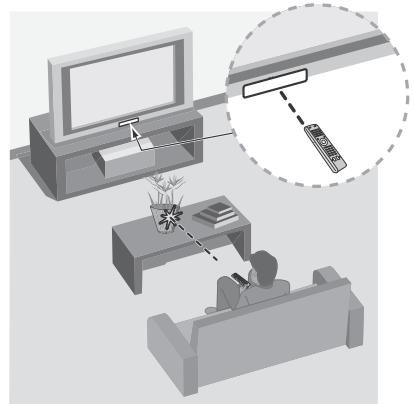


- Fluorescent lamps can interfere with your remote control; try turning off the fluorescent lamps.
- If you are having problems with the remote control, reinsert or replace your batteries and make sure that they are correctly inserted.

# Connection Diagram

 For more information on connections, refer to the Help Guide (page 2).

**Note**

- When connecting the cable to the Cable/Antenna, input finger tighten only, over tightening the connection can damage the TV.

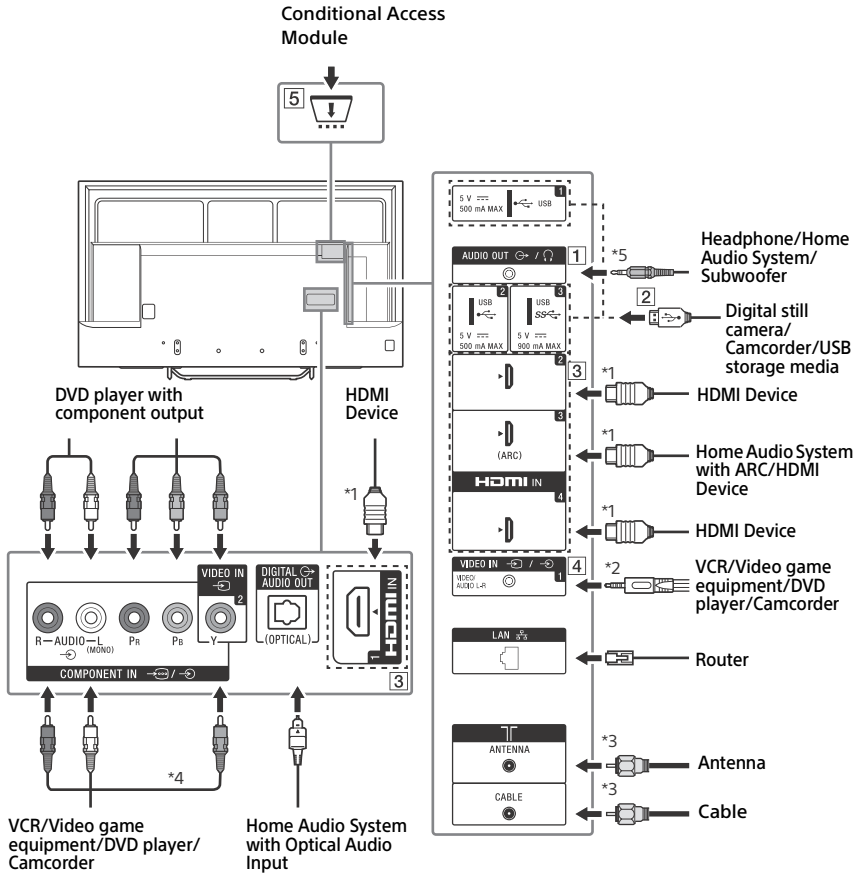

### 1 AUDIO OUT\*5

- To listen to the TV's sound through the connected equipment, press **HOME**. Select [Settings] → [Sound] → [Headphone/Audio out] and then select the desired item.

### 2 **USB 1/2, SS USB 3**

- Connecting a large USB device may interfere with other connected devices beside it.
- When connecting a large USB device, connect to the USB 1 port.

### 3 **HDMI IN 1/2/3/4**

 
 
- If connecting a digital audio system that is compatible with Audio Return Channel (ARC) technology, use HDMI IN 3. If not, an additional connection with DIGITAL AUDIO OUT (OPTICAL) is necessary.

### 4 **VIDEO IN 1**

- For a composite connection, use the supplied Analog Extension Cable\*6.

### 5 **CAM (Conditional Access Module)\*6**

- Provides access to pay TV services. For details, refer to the instruction manual supplied with your CAM.
- Do not insert the smart card directly into the TV CAM slot. It must be fitted into the Conditional Access Module provided by your authorised dealer.
- CAM is not supported in some countries/areas. Check with your authorised dealer.
- A CAM message may appear when you switch to a digital program after using the Internet video.

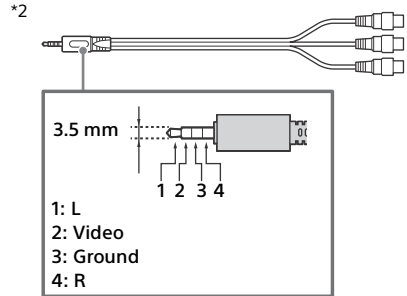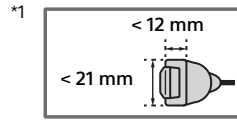

\*4 When connecting mono equipment, connect to the L (MONO) audio jack (socket).

\*5 Supports 3-pole stereo mini jack only.

\*6 Only on limited region/country/TV model.


## Installing the TV to the Wall

 This TV's instruction manual only shows the steps on preparing the installation of the TV before installing to the wall.

Your TV can be mounted on a wall using a Wall-Mount Bracket (not supplied) out of the box as packaged. If the Table-Top Stand is attached to the TV, the TV may require detaching the Table-Top Stand; see page 12 (Detaching the Table-Top Stand from the TV). Prepare the TV for the Wall-Mount Bracket before making cable connections.

**For product protection and safety reasons, Sony strongly recommends that installation of your TV on the wall be performed by qualified professionals. Do not attempt to install it yourself.**

- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
- The length of the screw for Wall-Mount Bracket differs depending on the Wall-Mount Bracket thickness. Please see below illustration.

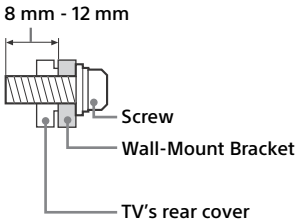


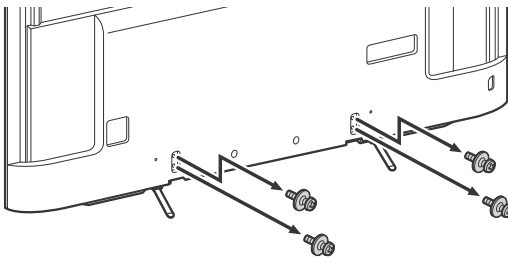 
- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

### Note

- Read the supplied Safety Booklet for additional safety information.

## Detaching the Table-Top Stand from the TV

To detach the Table-Top Stand from the TV, remove the screws .



 
### Note

- Do not remove the Table-Top Stand for any reason other than to install corresponding accessories on the TV.
- Be sure the TV is vertical before turning on. To avoid uneven picture uniformity do not power on the TV with the LCD panel facing down.
- When attaching the Table-Top Stand again, be sure to fasten the screws (previously removed) to the original holes on the rear of the TV.

## Installing the TV against a wall or enclosed area


Make sure that your TV has adequate ventilation. Allow enough space around the TV as shown in the illustration.

### Installed with stand

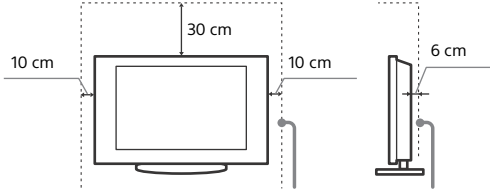

Leave at least this much space around the set.


### Installed on the wall

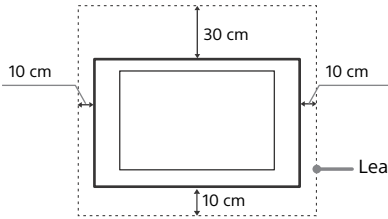 

Leave at least this much space around the set.

### Never install the TV set as follows:

 Air circulation is blocked. Air circulation is blocked.

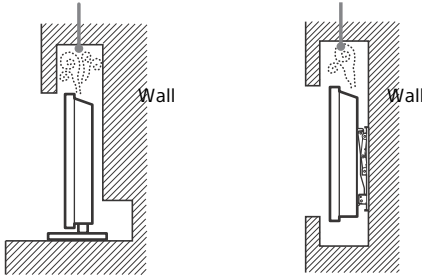


### Note

- Inadequate ventilation can lead to overheating of the TV and may cause damage to your TV or cause a fire.

## Troubleshooting

In order to keep your TV software up-to-date, it is necessary to download the latest software information via the digital broadcasting system or internet and to update the software. Select [Update Now] to start a software update. The illumination LED flashes white while the software is updating.

 The following screen with [Updating...] will appear while software is updating.

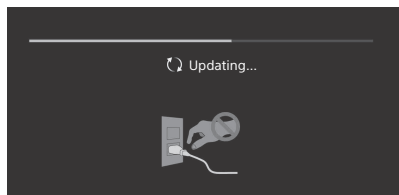

Do not unplug the AC power cord during the software update. If you do, the software update may not finish completely, and it may cause a software malfunction. Software updates can take up to 30 minutes. If you do not wish to update the software automatically, press **HOME** and select [Help] → [System software update] → [Automatic software download] → [Off].

When you plug in TV, the TV may not be able to turn on for a while even if you press the power button on the remote control or the TV, because it takes time to initialize the system. Wait for about one minute, then operate it again. When you turn on by pressing the power button on the remote control or the TV, it takes some time to turn on the illumination LED and for the remote control to be functional.

**When the illumination LED is flashing red, count how many times it flashes (interval time is three seconds).**

If the illumination LED flashes red, reset the TV by disconnecting the AC power cord for two minutes, then turn on the TV.


If the problem persists, contact Sony Customer Support (information provided on the front cover) with the number of times the illumination LED flashes red (interval time is three seconds). Disconnect the AC power cord, and contact Sony Customer Support.

**When the illumination LED is not flashing, check the items as follows.**

You can also refer to troubleshooting in the Help Guide or perform self-diagnosis by selecting [Help] → [Self diagnostics]. If the problem persists, contact Sony Customer Support (information provided on the front cover).

## Troubles and Solutions

**There is no picture (screen is dark) and no sound.**

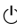- Check the cable/antenna connection.
- Connect the TV to AC power, and press the  button on the TV or **POWER** button on the remote control.

**Some programs cannot be tuned.**

- Check the cable/antenna connection.

**The remote control does not function.**

- Replace the batteries.

**The [Parental lock (Broadcast)] password has been forgotten.**

- For X757D/X707D model series, enter 9999 for the PIN code. Update PIN code by selecting [Settings] → [Parental lock (Broadcast)] → [Change password].
- For X755D/X705D model series, enter 4357 instead.

**The TV and its surroundings become warm.**

- When the TV is used for an extended period of time, the TV and its surroundings may become warm to the touch. This is not a malfunction of the TV.

**How to reset the TV to factory settings**

- Turn on the TV. You can reset the TV to factory settings by pressing **HOME**, then select [Settings] → [Storage & reset] → [Factory data reset].  
WARNING: The reset will clear all of your customized settings including the [Parental lock (Broadcast)] setting.
- For security purposes, be sure to remove all personal and account information before discarding, selling or passing your TV to someone else by: unlinking/unregistering, signing out of and deactivating all network services as well as factory reset the TV.


**Frozen audio or video, a blank screen, or the TV does not respond to TV or remote control buttons.**

- Perform a simple reset of the TV by unplugging the AC power cord for two minutes, then plug it in again.

**The  $\odot$ , +, and - buttons cannot be located on the TV.**


- See below illustration for location of the buttons on the TV.

 Rear of TV

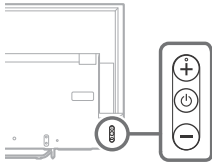

**The illumination LED is turned on.**

 - If you do not wish to light up the illumination LED, you can turn it off. Press **HOME**, then select [Settings] → [Illumination LED] → [Off].

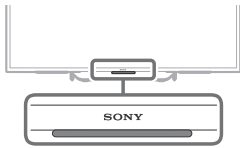

**Cannot connect to a wireless router by WPS (Wi-Fi Protected Setup).**

- If you use WEP security, select [Easy] → [Wi-Fi] → [Connect by scan list]. Then, select the network name (SSID) you want to connect.

**Cannot find the required network name in network setup.**

- Select [[Manual entry]] and press  $\oplus$  to enter network name.

## Specifications

### System

Television system

Analogue:

Depending on your TV model  
NTSC / PAL-M / PAL-N

Digital:

Depending on your TV model  
DVB-T2/T  
SBTVD  
J.83B (Only on limited region/country.)

Channel coverage

Depending on your TV model  
Analogue: UHF/VHF/Cable  
Digital: UHF/VHF/Cable

Panel system

LCD (Liquid Crystal Display) Panel, LED Backlight

Speaker output

10 W + 10 W

Wireless technology

Protocol IEEE802.11ac/a/b/g/n  
Bluetooth Version 4.1

### Input/Output jacks

ANTENNA/CABLE

75-ohm external terminal for RF inputs

$\ominus$  /  $\oplus$  VIDEO IN 1

Video / Audio input (mini jack)

$\ominus$  /  $\oplus$  COMPONENT IN (for X755D/X705D model series)

YPbPr (Component Video): 1080p (50, 60 Hz), 1080i (50, 60 Hz), 720p (50, 60 Hz), 576p, 576i, 480p, 480i  
Audio input (phono pin jack)

$\ominus$  /  $\oplus$  COMPONENT IN (for X757D/X707D model series)

YPbPr (Component Video): 1080p (60 Hz), 1080i (60 Hz), 720p (60 Hz), 480p, 480i  
Audio input (phono pin jack)

$\ominus$  VIDEO IN 2

Video input (common phono pin with Y input)

HDMI IN 1/2/3/4 (Support 4K resolution, HDCP 2.2-compatible) (for X755D/X705D model series)

Video:

4096 × 2160p (50, 60 Hz)<sup>\*1, \*2</sup>, 4096 × 2160p (24 Hz)<sup>\*1</sup>, 3840 × 2160p (50, 60 Hz)<sup>\*2</sup>, 3840 × 2160p (24, 25, 30 Hz), 1080p (30, 50, 60 Hz), 1080/24p, 1080i (50, 60 Hz), 720p (30, 50, 60 Hz), 720/24p, 576p, 576i, 480p, 480i, PC Formats

HDMI IN 1/2/3/4 (Support 4K resolution, HDCP 2.2-compatible) (for X757D/X707D model series)

Video:

4096 × 2160p (60 Hz)\*<sup>1</sup>, \*<sup>2</sup>, 4096 × 2160p (24 Hz)\*<sup>1</sup>, 3840 × 2160p (60 Hz)\*<sup>2</sup>, 3840 × 2160p (24, 30 Hz), 1080p (30, 60 Hz), 1080/24p, 1080i (60 Hz), 720p (30, 60 Hz), 720/24p, 480p, 480i,

PC Formats

\*<sup>1</sup> 3840 × 2160p is displayed when

4096 × 2160p is input

\*<sup>2</sup> HDMI IN 2 / 3 only.

Audio: 5.1 channel linear PCM: 32, 44.1, 48, 88.2, 96, 176.4 and 192 kHz, 16, 20 and 24 bits, Dolby Digital, Dolby Digital Plus and DTS ARC (Audio Return Channel) (HDMI IN 3 only) (Two channel linear PCM, Dolby Digital, Dolby Digital Plus, DTS)

⊖ DIGITAL AUDIO OUT (OPTICAL)

Digital optical jack (Two channel linear PCM, Dolby Digital, DTS)

AUDIO OUT ⊖ / 🔊 (Stereo mini jack)

Headphone, Audio output, Subwoofer



CAM (Conditional Access Module) slot

(Only on limited region/country.)

• 1, • 2, SS • 3

USB port 1 and 2 support High Speed USB (USB2.0).

USB port 3 supports Super Speed USB (USB3.0).



LAN

10BASE-T/100BASE-TX connector (Connection speed may differ depending on the network environment. 10BASE-T/100BASE-TX communication rate and communication quality are not guaranteed for this TV.)

Home Network

Refer to the Help Guide for supported formats.

## Others

Optional accessories

Voice Remote Control: RMF-TX200B

Wireless Subwoofer: SWF-BR100 (Only on limited region/country/TV model.)

Operating temperature

0 °C – 40 °C

## Power and others

Power requirement

110 V - 240 V AC, 50/60 Hz

Power consumption

in use

XBR-65X757D/65X755D: 193 W

XBR-55X707D/55X705D: 171 W

XBR-49X707D/49X705D: 138 W

in standby\*

Less than 0.50 W

Screen size (measured diagonally) (Approx.)

XBR-65X757D/65X755D: 163.9 cm /

64.5 inches (65" class)

XBR-55X707D/55X705D: 138.8 cm /

54.6 inches (55" class)

XBR-49X707D/49X705D: 123.2 cm /

48.5 inches (49" class)

Display resolution

3,840 dots (horizontal) × 2,160 lines (vertical)

Output Rating

USB 1

5 V, ---, 500 mA MAX

USB 2

5 V, ---, 500 mA MAX

USB 3

5 V, ---, 900 mA MAX

## Dimensions (Approx.)

with stand

XBR-65X757D: 1,463 × 901 × 295 mm

XBR-65X755D: 1,463 × 901 × 295 mm

XBR-55X707D: 1,245 × 770 × 235 mm

XBR-55X705D: 1,245 × 770 × 235 mm

XBR-49X707D: 1,107 × 690 × 235 mm

XBR-49X705D: 1,107 × 690 × 235 mm

without stand

XBR-65X757D: 1,463 × 852 × 80 mm

XBR-65X755D: 1,463 × 852 × 80 mm

XBR-55X707D: 1,245 × 730 × 78 mm

XBR-55X705D: 1,245 × 730 × 78 mm

XBR-49X707D: 1,107 × 651 × 78 mm

XBR-49X705D: 1,107 × 651 × 78 mm

wall-mount hole pattern

XBR-65X757D: 300 × 300 mm

XBR-65X755D: 300 × 300 mm

XBR-55X707D: 200 × 200 mm

XBR-55X705D: 200 × 200 mm

XBR-49X707D: 200 × 200 mm

XBR-49X705D: 200 × 200 mm

wall-mount screw size (mm)

M6 (length: see diagram on page 12.)



## Mass (Approx.)

with stand

XBR-65X757D: 22.7 kg  
XBR-65X755D: 22.7 kg  
XBR-55X707D: 17.8 kg  
XBR-55X705D: 17.8 kg  
XBR-49X707D: 14.1 kg  
XBR-49X705D: 14.1 kg

without stand



XBR-65X757D: 21.5 kg  
XBR-65X755D: 21.5 kg  
XBR-55X707D: 16.9 kg  
XBR-55X705D: 16.9 kg  
XBR-49X707D: 13.2 kg  
XBR-49X705D: 13.2 kg

\* Standby power consumption will increase when your TV is connected to the network.

### Note

- Do not remove the dummy card from TV CAM (Conditional Access Module) slot other than to insert a smart card fitted in CAM.
- Optional accessories availability depends on countries/region/TV model/stock.
- Design and specifications are subject to change without notice.

## Licensing Information

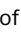- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.
- "BRAVIA" and BRAVIA, S-Force, Motionflow, BRAVIA Sync, and  are trademarks or registered marks of Sony Corporation.
- Gracenote, Gracenote eyeQ, Gracenote VideoID, Gracenote Video Explore, the Gracenote logo and logotype, and the "Powered by Gracenote" logo are either registered trademarks or trademarks of Gracenote in the United States and/or other countries.
- Opera® Devices SDK from Opera Software ASA. Copyright 1995-2015 Opera Software ASA. All rights reserved.
- Wi-Fi, Wi-Fi Direct, Miracast, Wi-Fi Protected Setup and Wi-Fi CERTIFIED Logo are trademarks or registered trademarks of Wi-Fi Alliance.
- For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Digital Surround is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.
- TUXERA is a registered trademark of Tuxera Inc. in the US and other countries.
- USB-IF SuperSpeed USB Trident logo is a registered trademark of USB Implementers Forum, Inc. 

**HDMI™**  
HIGH-DEFINITION MULTIMEDIA INTERFACE



YOUR DATA - WHERE YOU WANT IT

**4K**

Resolución real:  
3 840 x 2 160 píxeles



## For Your Convenience

<b>Online Registration:</b>	Be sure to register your TV. <a href="http://esupport.sony.com/LA/perl/registration.pl">http://esupport.sony.com/LA/perl/registration.pl</a>
<b>Software Updates:</b>	Your TV is capable of receiving software updates. For the latest information about software updates for your TV, visit: <a href="http://esupport.sony.com/LA/">http://esupport.sony.com/LA/</a>  NOTE: If your TV is connected to the Internet, you can check for software updates by selecting [Help], [System software update] and then [Check for a system software update].

