

RM-VW1KE

Instructions Mode d'emploi Instrucciones

©1990 by Sony Corporation Printed in Japan

English

This unit allows you to control Sony GV-200/300.

Before Using **A**


The battery is already installed. Remove the insulating sheet before you using the unit.

How to Use **B**

- a** To select a channel.
Press channel number buttons and ENTER
- b** To record.
Press ► PLAY while pressing ● REC.

Precautions

- Do not connect the receiver during Video Walkman operation as it may cause sound distortion. When connecting the receiver, be sure to turn off the power or turn down the volume in advance.
- Do not let liquid or solid objects fall into the unit.
- Keep the unit away from extremely hot or humid places, or a place subject to direct sunlight.
- Do not let sunlight or light from a powerful artificial light source fall directly on the remote sensor on the Receiver as this may interfere with operation or damage the sensor.
- In order to save power of the Video Walkman, disconnect the receiver when the remote controller is not used.

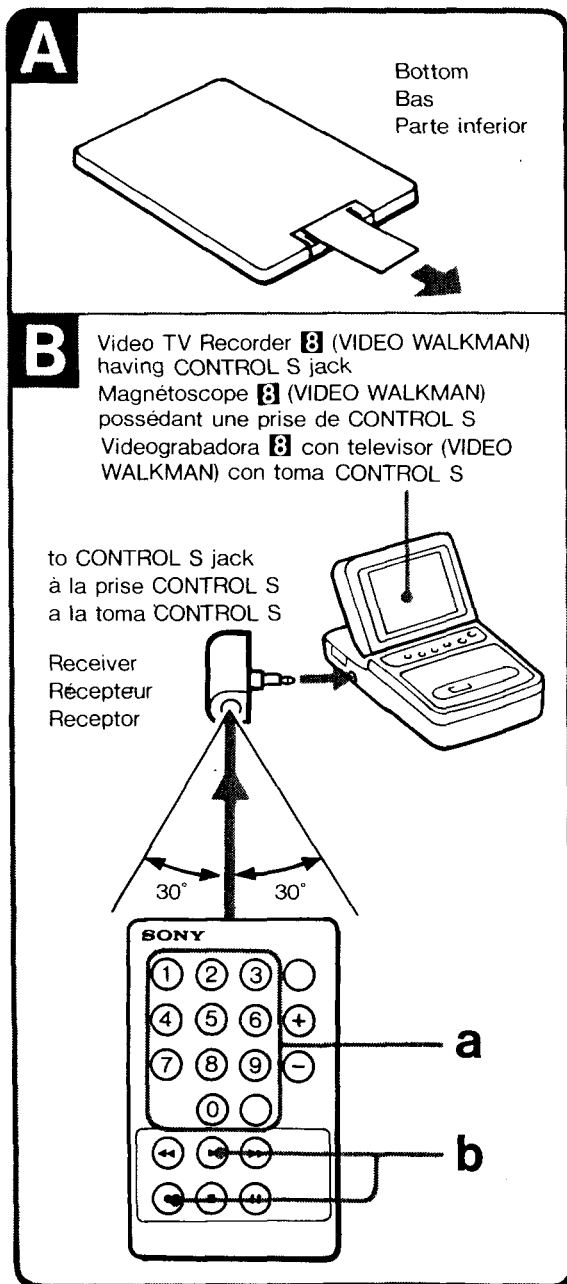

Replacing the battery

- 1 Pull out the battery case.
- 2 CR2025 lithium battery.
(Install with the + side facing up.)

If the range over which the remote control will operate becomes noticeably short, replace the battery.

Replace the battery with a Sony CR2025 or Duracell DL-2025 lithium battery. Use of another battery may present a risk of fire or explosion.

Replace the battery only with one of the same type and rating.

Notes on Lithium Battery

- Keep the lithium battery out of the reach of children.
Should the battery be swallowed, immediately consult a doctor.
- Wipe the battery with a dry cloth to assure a good contact.
- Be sure to observe the correct polarity when installing the battery.
- Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.

WARNING

Battery may explode if mistreated.
Do not recharge, disassemble or dispose of in fire.

Specifications

Operable range	Approx. 5m
Power requirements	3V DC Lithium battery CR2025 (1)
Battery life	Approx. six months (varies depending upon how often the unit is used)
Dimensions	Receiver: 17.0 × 37.5 × 37.5 mm (w/h/d) ($\frac{1}{16}$ × 1½ × 1½ in.) Remote Commander: 54 × 85.5 × 4.9 mm (w/h/d) (2¼ × 3¾ × 7/32 in.)
Weight	Receiver: Approx. 8g (0.3oz) Remote Commander: Approx. 30g (1oz) incl. battery

Design and specifications are subject to change without notice.