

SA-W441/SA-W442/SA-W541/SA-W542


Active Super Woofer

Operating Instructions

Warning

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

For the connections and the operations of this unit, please see the "Operating Instruction" of HCD-441 or HCD-541.

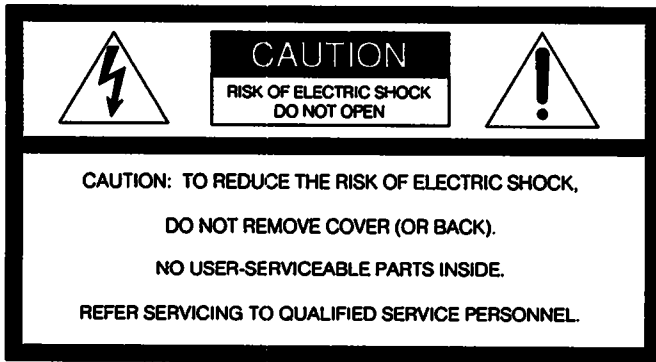

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

* The graphical symbols are on the rear enclosure.

Owner's Record

The model and serial number is located at the rear. Record this serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

SA-W441/SA-W442

Serial No. _____

SA-W541/SA-W542

Serial No. _____

Precautions

On safety

- Operate the unit only on 120 V AC, 60 Hz.
- Should any solid object or liquid fall into the unit, unplug it and have it checked by qualified personnel before operating it any further.
- Unplug the unit from the wall outlet if it is not to be used for an extended period of time. To disconnect the cord, pull it out by grasping the plug. Never pull the cord itself.

On installation

- Place the unit on a level surface.
- Do not install the unit in a location near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Good air circulation is essential to prevent internal heat buildup in the unit. Place the unit in a location with adequate air circulation. Do not cover the ventilation holes on the rear panel.

On cleaning the cabinet

Clean the cabinet, panel and controls with a soft cloth lightly moistened with mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.

On repacking

Do not throw away the carton and the packing material. It makes an ideal container to transport the unit in.

If you have any question or problem concerning your unit, please consult your nearest Sony dealer.

For detailed precautions, see the leaflet "IMPORTANT SAFEGUARDS".

Specifications

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 8-ohm loads, both channels driven, from 70 - 20,000 Hz; rated 100 watts per channel minimum RMS power, with less than 0.9% total harmonic distortion from 250 milliwatts to rated output.

Amplifier section

Overall output

SA-W441/W442: 120 W + 120 W (front, at 1 kHz, 8 ohms)
40 W (super woofer, at 40 Hz, 4 ohms)

SA-W541/W542: 120 W + 120 W (front, at rear/center off at 1 kHz, 8 ohms)
20 W + 20 W (rear, at center off at 1 kHz, 8 ohms)
40 W (center, at rear off at 1 kHz, 6 ohms)
40 W (super woofer, at rear/center off at 40 Hz 4 ohms)

Harmonic distortion

SA-W441/W442: Less than 0.9 % (at 1 kHz, 8 ohms loads, front: 120 W + 120 W, super woofer off)

SA-W541/W542: Less than 0.9 % (at 1 kHz, 8 ohms loads, front: 120 W + 120 W, rear/center/super woofer off)

Output

FRONT SPEAKERS:

Accept speakers of 8 - 16 ohms

REAR SPEAKERS:

(SA-W541/W542)

Accept speakers of 8 - 16 ohms

CENTER SPEAKER:

(SA-W541/W542)

Accept speaker of 6 - 16 ohms

HEADPHONES:

Accepts low and high impedance Headphones

Speaker section

Type Active super woofer (magnetically shielded design)

Speaker unit Woofer: 20 cm (8 inches) cone type

Reproduction frequency range 25 Hz to 150 Hz

General

Power requirements

120 V AC, 60 Hz

Power consumption

SA-W441/W442: 230 W

SA-W541/W542: 280 W

Dimensions

Approx. 500 x 475 x 475 mm (w/h/d)

(19³/₄ x 18³/₄ x 18³/₄ inches)

(including projecting parts and controls)

Mass

SA-W441/W442: Approx. 30.3 kg (66 lb 13 oz)

SA-W541/W542: Approx. 31.0 kg (68 lb 6 oz)