 


## Corrections


Please correct the supplied Operating Instructions as follows:

### “AUDIO SETUP” menu (page 65)

#### Incorrect

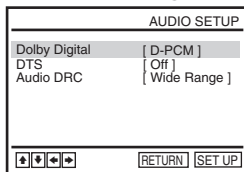

#### Correct

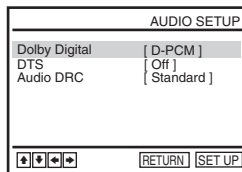

### Menu choices • Audio DRC (Dynamic Range Control) (Page 66)

#### Incorrect

Wide Range	Gives you the feeling of being at alive performance.
TV Mode	Makes the low sounds clear even if you turn the volume down.

#### Correct

Standard	Normally select this position.
Wide Range	Gives you the feeling of being at alive performance.

### DVD Troubleshooting “The sound volume is low.” (page 113)

**Incorrect** The sound volume is low on some DVDs. The sound volume may improve if you set “Audio DRC” to “TV Mode” (page 66).

**Correct** The sound volume is low on some DVDs. The sound volume may improve if you set “Audio DRC” to “Wide Range” (page 66).