

## Corrections

Please correct the supplied Operating Instructions as follows:

**To locate a point quickly by playing a disc in fast forward or fast reverse in continuous play mode (DVD, VIDEO CD and CD only) (page 32 for SLV-D500P/page 29 for SLV-D300P)**

Incorrect

×2 → ×4 → ×8 → ×16 → ×32 → ×128

(DVD only)

For CD, the searching speed does not change (×8 play).

Correct

×2 → FF1/FR1 → FF2/FR2 → FF3/FR3 → FF4/FR4 → FF5/FR5 (DVD only)

For CD, the searching speed does not change (FF2/FR2 play).

**Notes (page 33 for SLV-D500P/page 30 for SLV-D300P)**

Incorrect

When playing a chapter with multi-angles on a DVD in slow motion, you cannot change the slow motion playback speed (1/2 only).

Correct

When playing a chapter with multi-angles on a DVD in slow motion, you can change the slow motion playback speed.