

SONY

3-245-410-11(1)

USB Mouse

Operating Instructions

Mode d'emploi

Manual de instrucciones

SMU-S1

Sony Corporation © 2002 Printed in China

English

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

For customers in the U.S.A.

Owner’s Record

The model number and the serial number are located on the bottom of the mouse. Record the serial number in the space provided below. Refer to this number whenever you call your Sony dealer regarding this product.

Model No. SMU-S1

Serial No. _____

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

If you have any questions about this product, you may call: Sony Direct Response Center 1-(800)-222-7669 or write to: Sony Direct Response Center 12451 Gateway Blvd. Fort Myers, FL 33913

Declaration of Conformity
Trade Name : SONY
Model No. : SMU-S1
Responsible Party : Sony Electronics Inc.
Address : 680 Kinderkamack Road, Oradell, NJ 07649 USA
Telephone No. : 201-930-6972
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries.
- All other names of systems and products are trademarks or registered trademarks of their respective owners. ™ and ® marks are omitted in this manual.
- Microsoft® Windows® XP Home Edition and Microsoft® Windows® XP Professional are mentioned as Windows XP in this manual.
- Microsoft® Windows® 2000 Professional is mentioned as Windows 2000 in this manual.
- Microsoft® Windows® Millennium Edition is mentioned as Windows Me in this manual.
- Microsoft® Windows® 98 Second Edition is mentioned as Windows 98 SE in this manual.

 
<div><ul style="list-style-type: none">- Copyright laws prohibit reproducing the software supplied with this mouse or the manual accompanying it in whole or in part, or renting the software without the permission of the copyright holder.- In no event will SONY be liable for any financial damages, or loss of profits, including claims made by third parties, arising out of the use of the software supplied with this mouse.- In the event a problem occurs with this product as a result of defective manufacturing, SONY will replace it. However, SONY bears no other responsibility.- The software provided with this mouse cannot be used with equipment other than that which is so designated.- Please note that, due to continued efforts to improve quality, the specifications of the software supplied with this mouse may be changed without notice.</div>
--

Unpacking Your Mouse

Check that the package contains the components listed below.


If anything is missing, contact the Sony dealer where you purchased this product or a Sony service representative serving your local area.

- Mouse SMU-S1

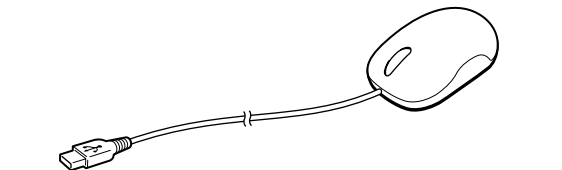

- Operating instructions (this manual)
- Warranty

 Identifying the Parts

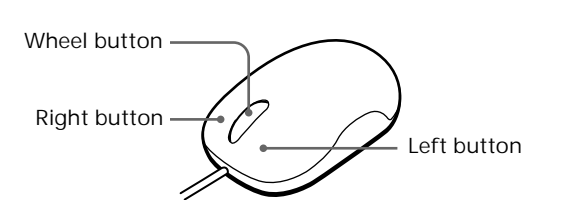

Specifications

Connector

USB A plug

Resolving power

400 count/inch

Supported models

OS-preinstalled computers (This mouse is not guaranteed to operate with OS-upgraded computers.)

Supported OS

Windows XP, Windows 2000, Windows Me, and Windows 98 SE (This mouse is not usable for Windows 98, Windows 95, and Windows NT4.0.)

Cord length

Approx. 1 m (39 ⁷/₈ in.)

Operating temperature

5°C to 35°C (41°F to 95°F) (temperature gradient less than 10°C (18°F)/hour)

Operating humidity

20% to 80% (not condensed), provided that humidity is less than 65% at 35°C (95°F) (hygrometer reading of less than 29°C (84°F))

Storage temperature

–10°C to 60°C (14°F to 140°F) (temperature gradient less than 10°C (18°F)/hour)

Storage humidity

10% to 90 % (not condensed), provided that humidity is less than 20% at 60°C (140°F) (hygrometer reading of less than 35°C (95°F))

Dimensions

Approx. 58 × 28 × 96 mm (2 ⁷/₈ × 1 ¹/₈ × 3 ⁷/₈ in.) (w/h/d)

Mass

Approx. 55 g (1.94 oz.) (excluding the cord)

Design and specifications are subject to change without notice.

When Using your computer

Connecting the mouse

You can use this mouse by connecting it to the USB port of your computer.

When connecting the mouse to the USB port

Connect this mouse to the USB port of your computer. The mouse is recognized by your computer, and is ready for use.

Note

When you connect this mouse to your computer, or when you start up your computer, do not move this mouse until it is identified.

- 1 Start up your computer.
- 2 Connect this mouse to the USB port of your computer. Your computer automatically recognizes the mouse, allowing you to use it.

Notes

- Some computers may require installing an OS disk. In this case, follow the directions shown on your computer.
- Depending on the condition of the computer or OS, the operation of this mouse may become unstable or impossible. In such a case, refer to “Troubleshooting.”
- After disconnecting this mouse from the USB port, wait about five seconds to reconnect it. (If you reconnect it immediately, it may not be recognized.)



You can connect/disconnect this mouse without turning off the power of your computer.

Troubleshooting

If you experience any of the following difficulties while using this mouse, refer to this troubleshooting guide to help remedy the problem. If the problem persists, consult your nearest Sony dealer.

My mouse does not work.

- The mouse is not recognized by your computer through the USB port to which the mouse is connected.
 - ➔After disconnecting the mouse from the USB port, reconnect it after waiting about five seconds.
 - ➔When your computer has more than one USB port, try to connect the mouse to other USB ports. (After disconnecting the USB equipment including the mouse from the USB port, reconnect it after waiting about five seconds.)
 - ➔When you have connected a USB hub to your computer, try to connect the mouse to other USB ports of the USB hub. (After disconnecting the USB equipment including the mouse from the USB port, reconnect it after waiting about five seconds.)
 - ➔Turn off the power of your computer while the mouse is connected to it, then start it up again after waiting about 30 seconds. (If your mouse does not work even after trying this remedy, repeat this procedure several times.)

- The USB port is disabled by your computer.
 - ➔Double-click the [System] icon in the [Control Panel], and click [Device Manager]. If [!] is displayed for the USB device icon or the mouse icon, choose [!] and click [Delete], then restart your computer.
- The USB port is disabled in the BIOS settings.
 - ➔Check the BIOS settings in the default settings of your computer. The USB port may have been disabled. Enable the USB port, following the manual etc. of your computer.

- The mouse is connected through a USB hub or a keyboard.
 - ➔Connect the mouse directly to your computer.

The [Found New Hardware] wizard appears when I connect this mouse to my computer.

- Your computer has more than one USB port.
 - ➔The USB equipment driver may be installed for every port. Click [Cancel] on the [Found New Hardware] wizard and reconnect the mouse to the USB port for which the driver is already installed. Otherwise, install the driver for all the USB ports to which you wish to connect the mouse.

The mouse property settings are disabled.

- More than one mouse is connected to the USB ports.
 - ➔Disconnect all the mice other than this one.

The cursor does not move even though the mouse works.

- The mouse is in the auto scroll mode.
 - ➔Press the wheel button to exit this mode.
- The sensor is not working properly.
 - ➔From the nature of the optical reading sensor, it may not work properly depending on the locations where it is used. Use this mouse in the location where the sensor works properly.

Nothing happens when I press the buttons of the mouse.

- The USB connector is not connected properly.
 - ➔After closing all the applications, reconnect the USB connector.
- This mouse does not support the OS of your computer.
 - ➔Use the OS that this mouse supports.
- The USB root hub is not recognized correctly.
 - ➔Carry out backup of data before installation. Install the Windows correctly again.

The scrolling features do not work.

- This mouse does not support the OS of your computer.
 - ➔Use the OS that this mouse supports.
- The application that does not support the scrolling features is open.
 - ➔The scrolling features work only with the applications that use scroll bars.
 - ➔Some applications do not support the scrolling features.

Even while my mouse is in use, the display gets dark, or the computer enters the System Suspend mode or the System Hibernation mode.

- Depending on the USB equipment you use, computers may enter the System Suspend mode or the System Hibernation mode even while the USB equipment is being used.
 - ➔To prevent your notebook computer from entering these modes, change the power management settings of the computer. For details, refer to the manual or online manual of your notebook computer.
 - ➔Touch the touchpad or press any key to exit these modes.

The computer does not return from the Video Standby mode.

- ➔Touch the touchpad or press any key to exit these modes.

Precautions

CAUTION

Your health may be affected if you do not follow the caution below.

Prolonged use of this product may strain your wrist or arm.

If you feel any pain during use, stop immediately and take a rest. If the pain persists, even after a prolonged rest, consult a doctor.

On safety

Should any solid object or liquid fall into the casing, disconnect the USB mouse and have it checked by qualified personnel before continuing to use it.

On placement

Do not place the USB mouse in a location where it is:

- On an unstable surface
- On the rug or carpet
- In very humid areas or where there is no ventilation
- Subject to excessive dust
- Subject to direct sunlight or extreme heat
- Extremely cold
- In a car with the windows closed.

On operation

If the USB mouse is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the inside of the mouse. If this occurs, the mouse may not work properly.

In this case, wait about 30 minutes for the moisture to evaporate. If the mouse does not work properly after one hour, consult your nearest Sony dealer.

Français

AVERTISSEMENT

Pour prévenir tout risque d'incendie ou d'électrocution, garder cet appareil à l'abri de la pluie et de l'humidité.

 
- Microsoft et Windows sont des marques déposées de Microsoft Corporation aux États-Unis et/ou dans d'autres pays.
- Tous les autres noms de systèmes et de produits sont des marques de commerce ou des marques déposées de leurs propriétaires respectifs. Les symboles ™ et ® ne sont pas utilisés dans le présent mode d'emploi.
- Microsoft® Windows® XP Édition familiale et Microsoft® Windows® XP Professionnel sont mentionnés sous l'appellation “Windows XP” dans le présent mode d'emploi.
- Microsoft® Windows® 2000 Professionnel est mentionné sous l'appellation “Windows 2000” dans le présent mode d'emploi.
- Microsoft® Windows® Millennium Edition est mentionné sous l'appellation “Windows Me” dans le présent mode d'emploi.
- Microsoft® Windows® 98 Deuxième Édition est mentionné sous l'appellation “Windows 98 SE” dans le présent mode d'emploi.

<div><ul style="list-style-type: none">- Les lois sur les droits d'auteur interdisent la reproduction du mode d'emploi et du logiciel fournis avec cette souris, en tout ou en partie, ainsi que la location du logiciel, sans l'autorisation du détenteur des droits d'auteur.- SONY ne peut en aucun cas être tenu responsable de quelque dommage financier ou perte de profits que ce soit, y compris des réclamations faites par des tiers, survenant à la suite de l'utilisation du logiciel fourni avec cette souris.- Si un problème lié au produit survient suite à un défaut de fabrication, SONY s'engage à le remplacer. Toutefois, SONY n'accepte aucune autre responsabilité.- Le logiciel fourni avec cette souris ne peut pas être utilisé avec des appareils autres que ceux désignés pour une utilisation avec cette souris.- Veuillez noter que, suite à des efforts continus pour améliorer la qualité, les caractéristiques techniques du logiciel fourni avec cette souris sont sujettes à modification sans préavis.</div>
--

Déballage de votre souris


Vérifiez que l'emballage contient les éléments cités ci-dessous. S'il manque l'un de ces éléments, contactez le détaillant Sony auprès duquel vous avez acheté ce produit ou le représentant du service après-vente Sony de votre région.

- Souris SMU-S1

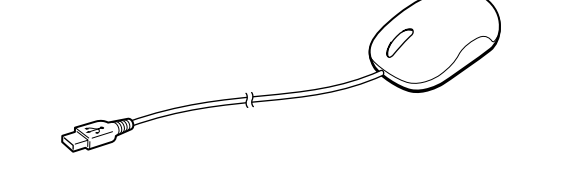

- Mode d'emploi (le présent document)
- Garantie

 Identification des éléments de la souris

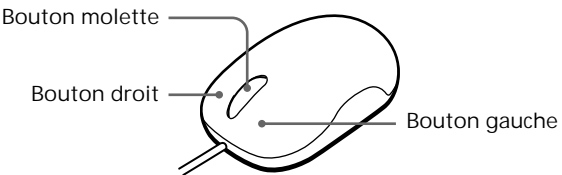

Caractéristiques techniques

Connecteur

Fiche USB type A

Pouvoir de résolution

400 cpi

Modèles pris en charge

Ordinateurs avec système d'exploitation préinstallé (le fonctionnement de cette souris n'est pas garanti sur des ordinateurs dont le système d'exploitation a été mis à niveau).

Systèmes d'exploitation pris en charge

Windows XP, Windows 2000, Windows Me et Windows 98 SE (cette souris ne peut pas être utilisée avec Windows 98, Windows 95 et Windows NT 4.0).

Longueur du cordon

Environ 1 m (39 ⁷/₈ po.)

Température de fonctionnement

5 °C à 35 °C (41 °F à 95 °F) (variations de température inférieures à 10 °C (18 °F) par heure)

Humidité de fonctionnement

20 % à 80 % (non condensée), tant que l'humidité reste inférieure à 65 % à 35 °C (95 °F) (lecture d'hygrométrie inférieure à 29 °C (84 °F))

Température d'entreposage

–10 °C à 60 °C (14 °F à 140 °F) (variations de température inférieures à 10 °C (18 °F) par heure)

Humidité d'entreposage

10 % à 90 % (non condensée), tant que l'humidité reste inférieure à 20 % à 60 °C (140 °F) (lecture d'hygrométrie inférieure à 35 °C (95 °F))

Dimensions

Environ 58 × 28 × 96 mm

(2 ⁷/₈ × 1 ¹/₈ × 3 ⁷/₈ po.) (l/h/p)

Masse

Environ 55 g (1,94 on.) (cordon exclu)

La conception et les caractéristiques techniques sont sujettes à modification sans préavis.

Voir au verso.

