


**Easy setup guide for speaker system**

Refer to the illustration below for speaker connections (A-H).

**You can setup the speakers easily by selecting the speaker pattern.**

Use the buttons on the receiver for the operation.

- 1 Find your speaker pattern by referring to the illustration at right. You can use the flow chart at right.
- 2 Press I/⏻ to turn on the system.
- 3 Press MAIN MENU repeatedly to select "<SET UP>".
- 4 Press < or > repeatedly to select "EASY SET". If it does not appear, select "NORM SET" and turn the -/+ jog dial to select "EASY SET".
- 5 Press < or > repeatedly to select "SP. PAT. X-X".
- 6 Turn the -/+ jog dial to select your speaker pattern, then press ENTER.

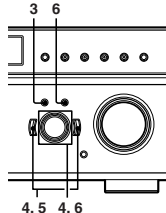


**FM Stereo FM-AM Receiver**

**STR-DV10**

**Easy Setup Guide**


This Easy Setup Guide explains how to connect the DVD player, TV, speakers, and sub woofer so you can enjoy multi channel surround sound from the DVD player. For details, refer to the operating instructions supplied with the receiver.

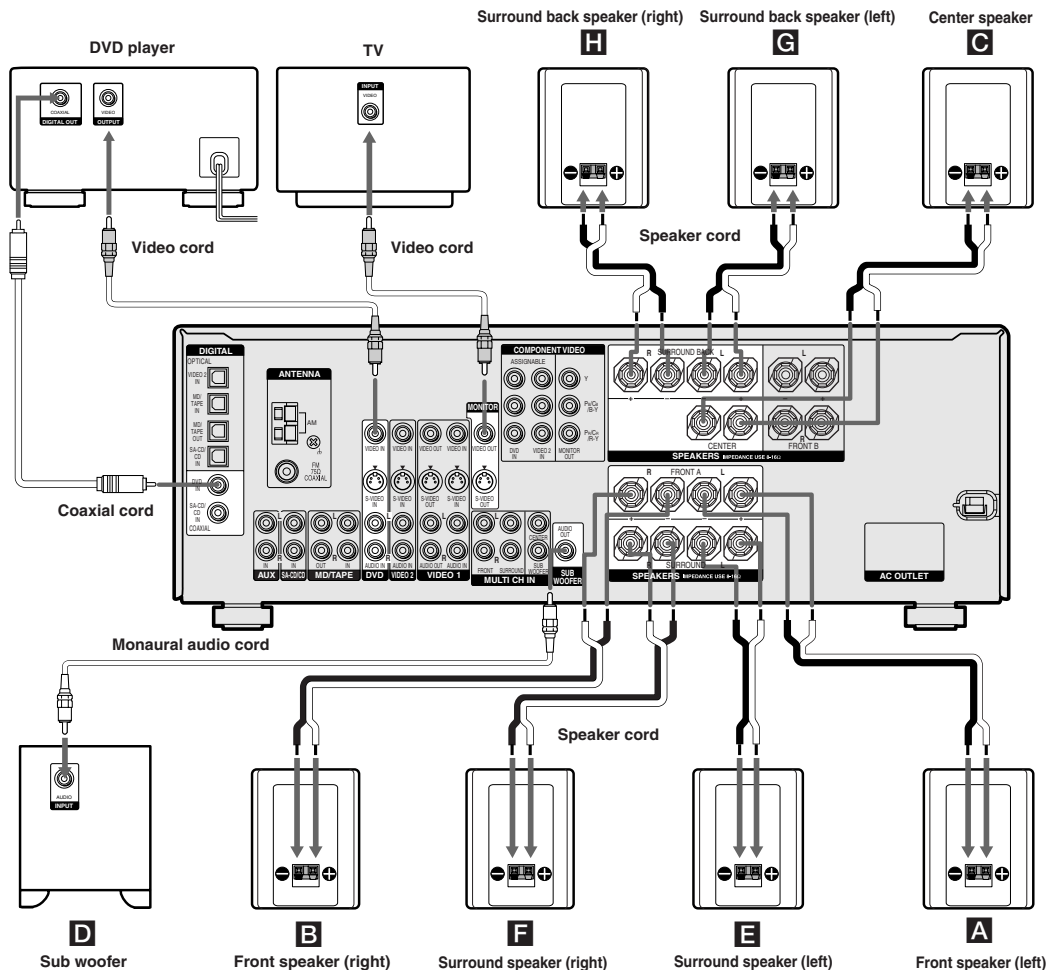

**What is your speaker pattern ?**

The speaker pattern depends on the number of speakers you have.

- A Front speaker (L)
- B Front speaker (R)
- C Center speaker
- D Sub woofer
- E Surround speaker (L)
- F Surround speaker (R)
- G Surround back speaker (L)
- H Surround back speaker (R)

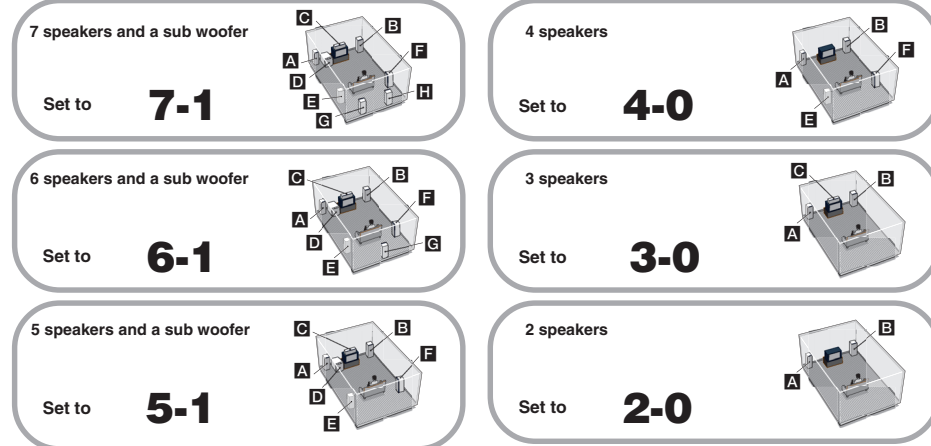

Refer to the illustration above, follow → (yes) if you have the speakers and follow - - - - → (no) if you do not.

