

SONY

3-786-484-21(1)




Cassette-corder




Operating Instructions

Before opening the unit, please read this manual thoroughly and save it for future reference.

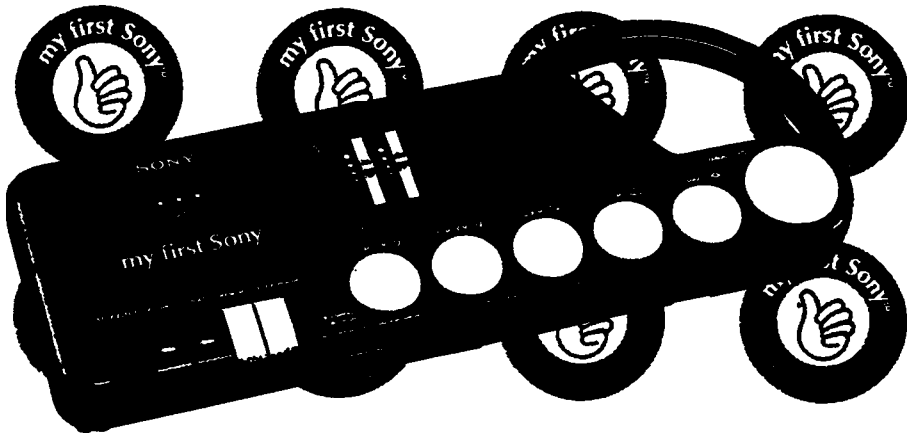


How to Use the Sound Pads

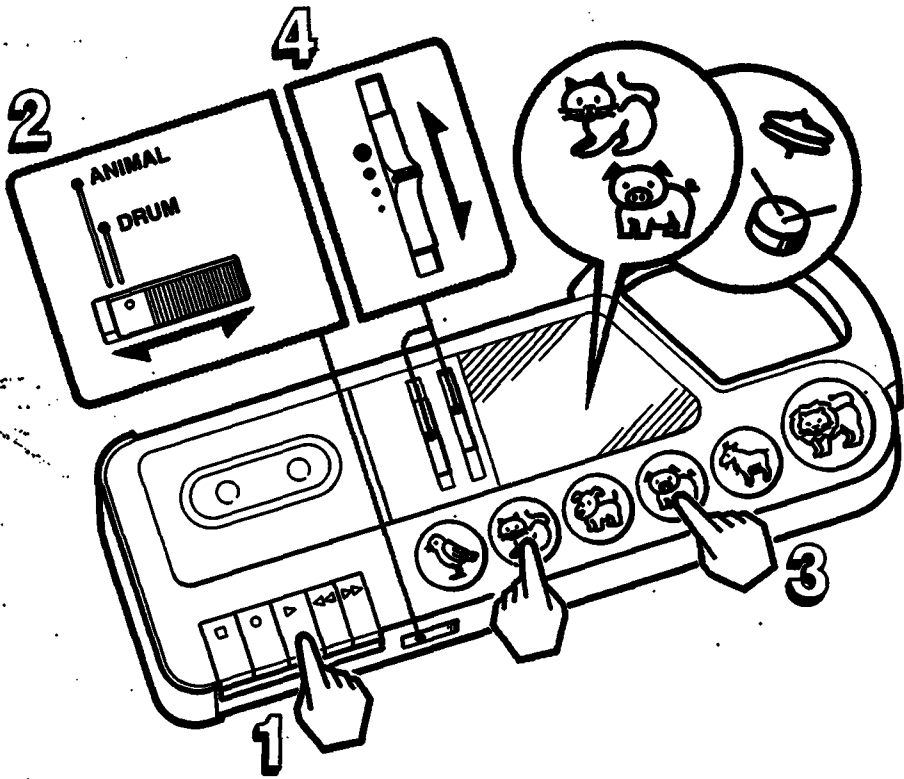


You can arrange tape sound or your voice through the microphone with the sound pads.

Inserting Batteries

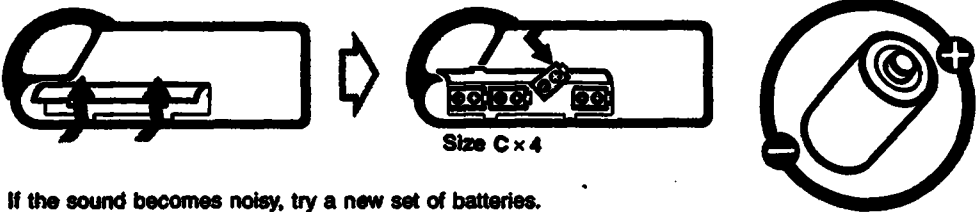


If the sound becomes noisy, try a new set of batteries.

Playing a Tape

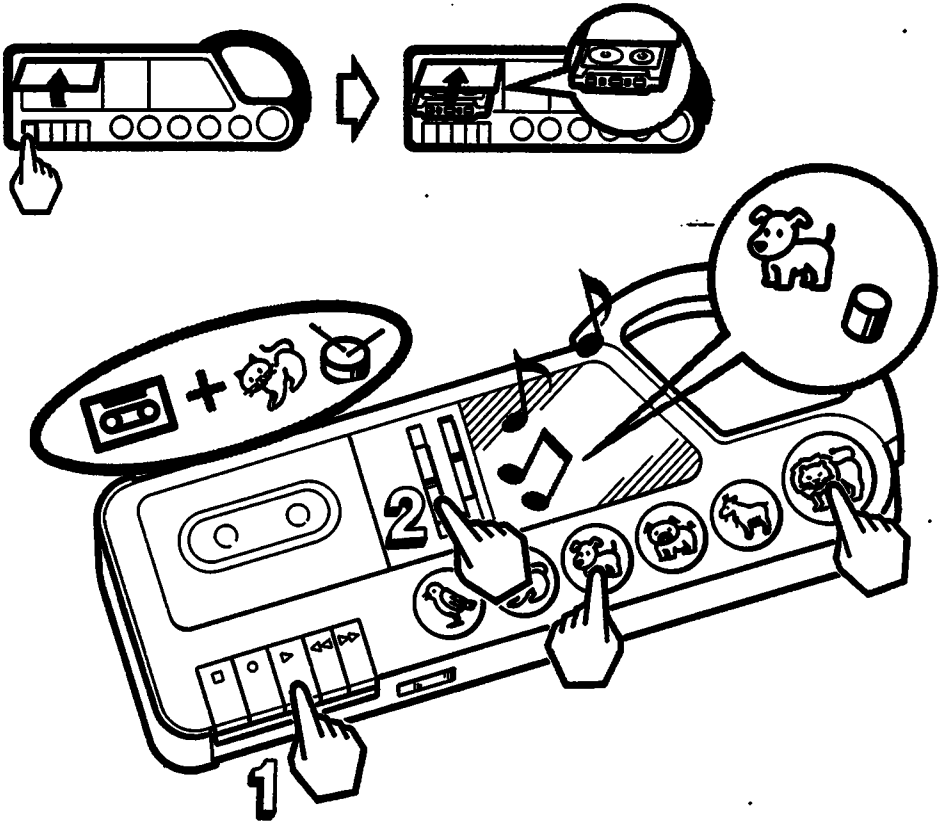

To stop the tape, press the ■ button.
To take out the cassette, press the ■ button again.



Singing Along or Recording

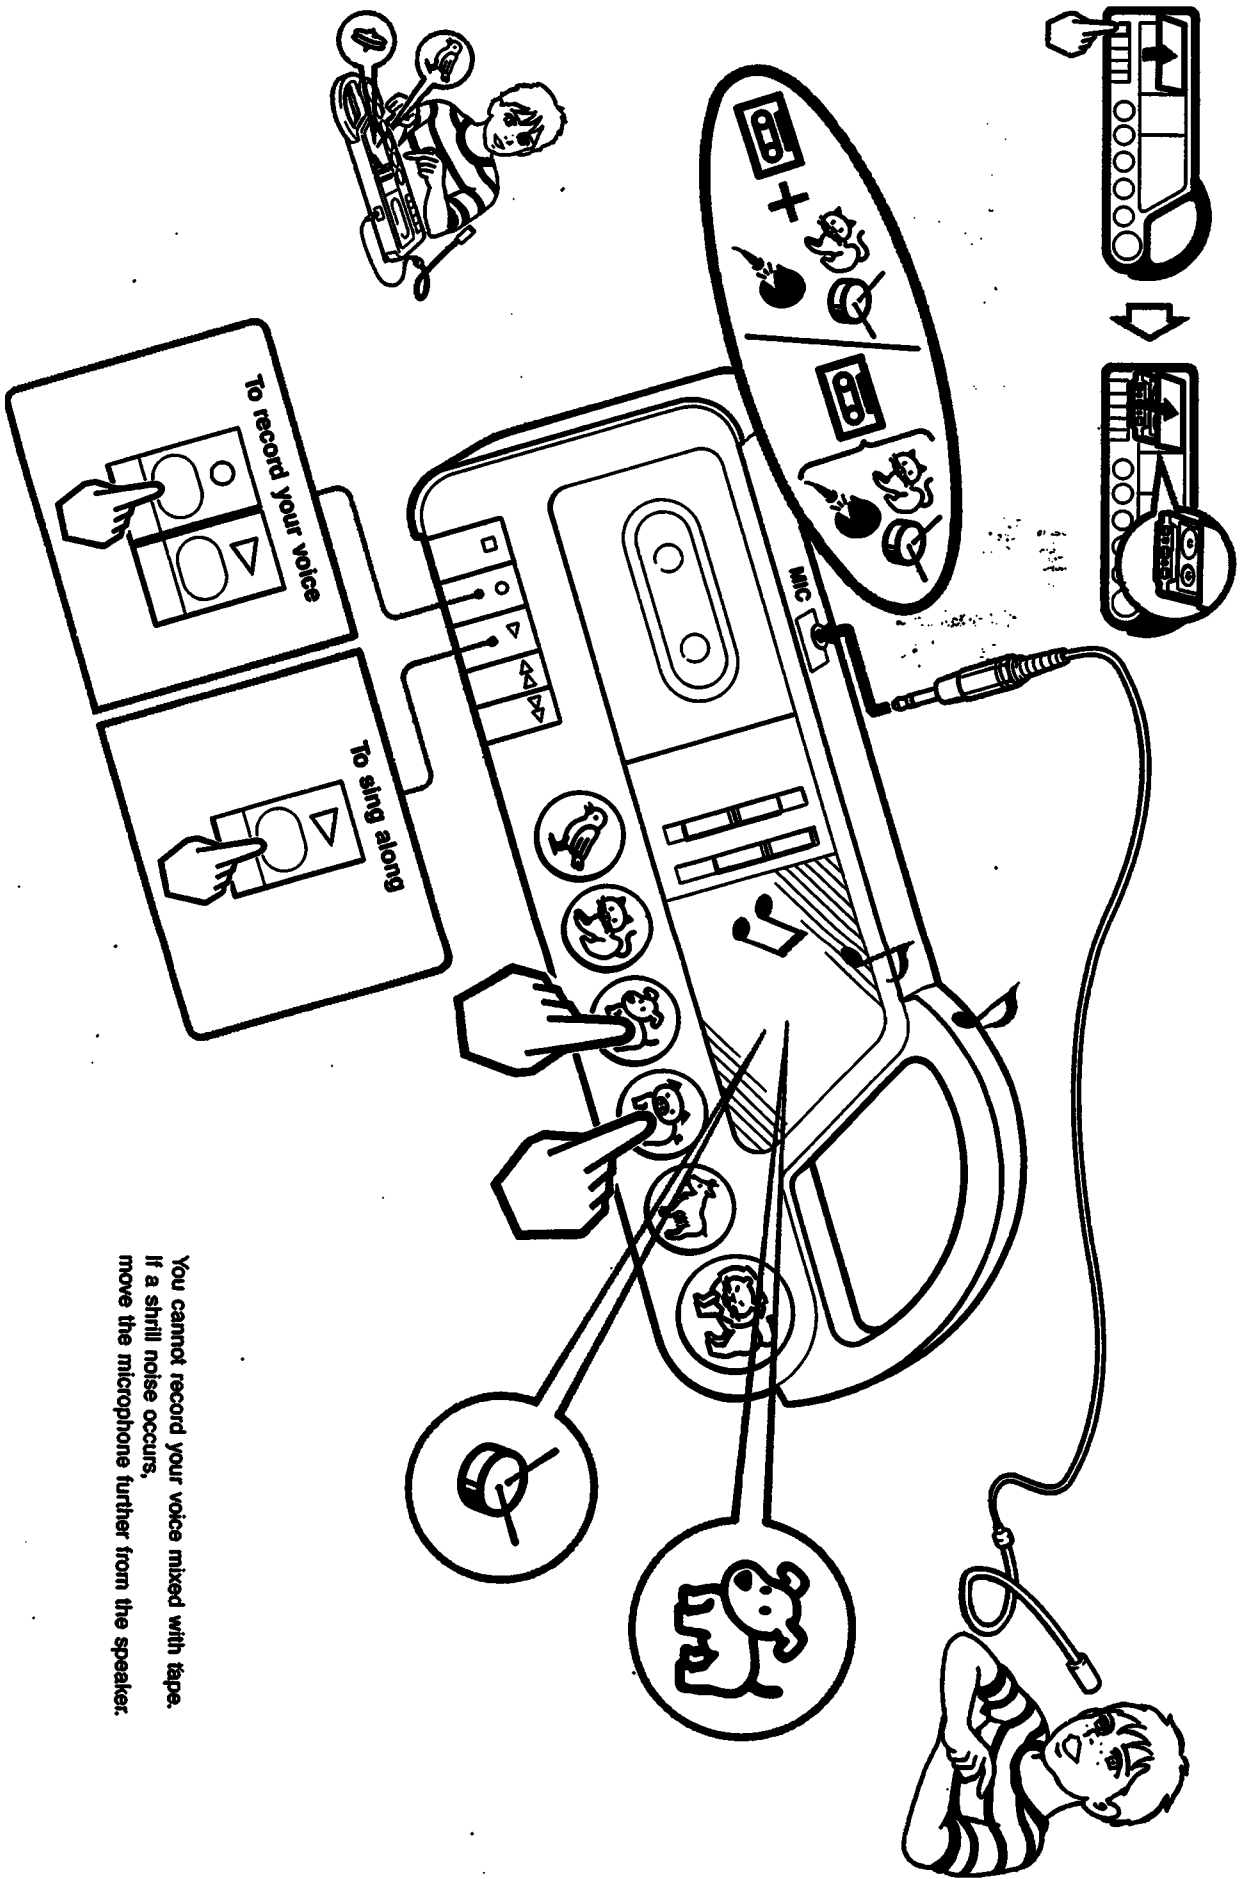

You cannot record your voice mixed with tape.
If a shrill noise occurs,
move the microphone further from the speaker.

Head Cleaning

If sound drop-outs or excessive noise occurs,
clean the areas shown.

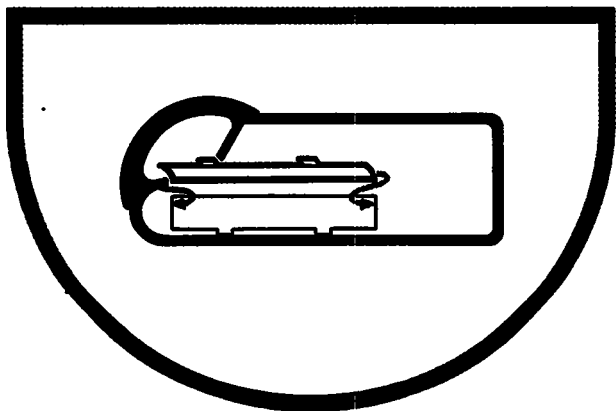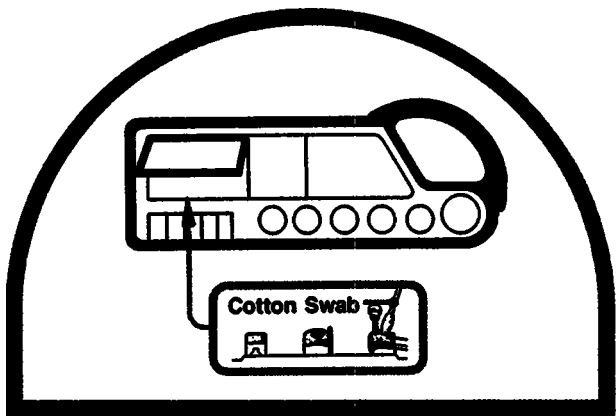

If the Battery Compartment Lid
Is Removed

Owner's Record

The model number is located at the rear of the unit and the serial number in the battery compartment. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this unit.

Model No. TCN-DMO

Serial number _____

SOUND PAD VOLUME control


MASTER VOLUME control

Id
on

Precautions

- Do not wind the microphone cable around your neck.
- Do not touch the tape running area inside the cassette compartment.
- Take care to keep the recorder dry and clean.

If you have any problem concerning your recorder, please consult your Sony dealer.

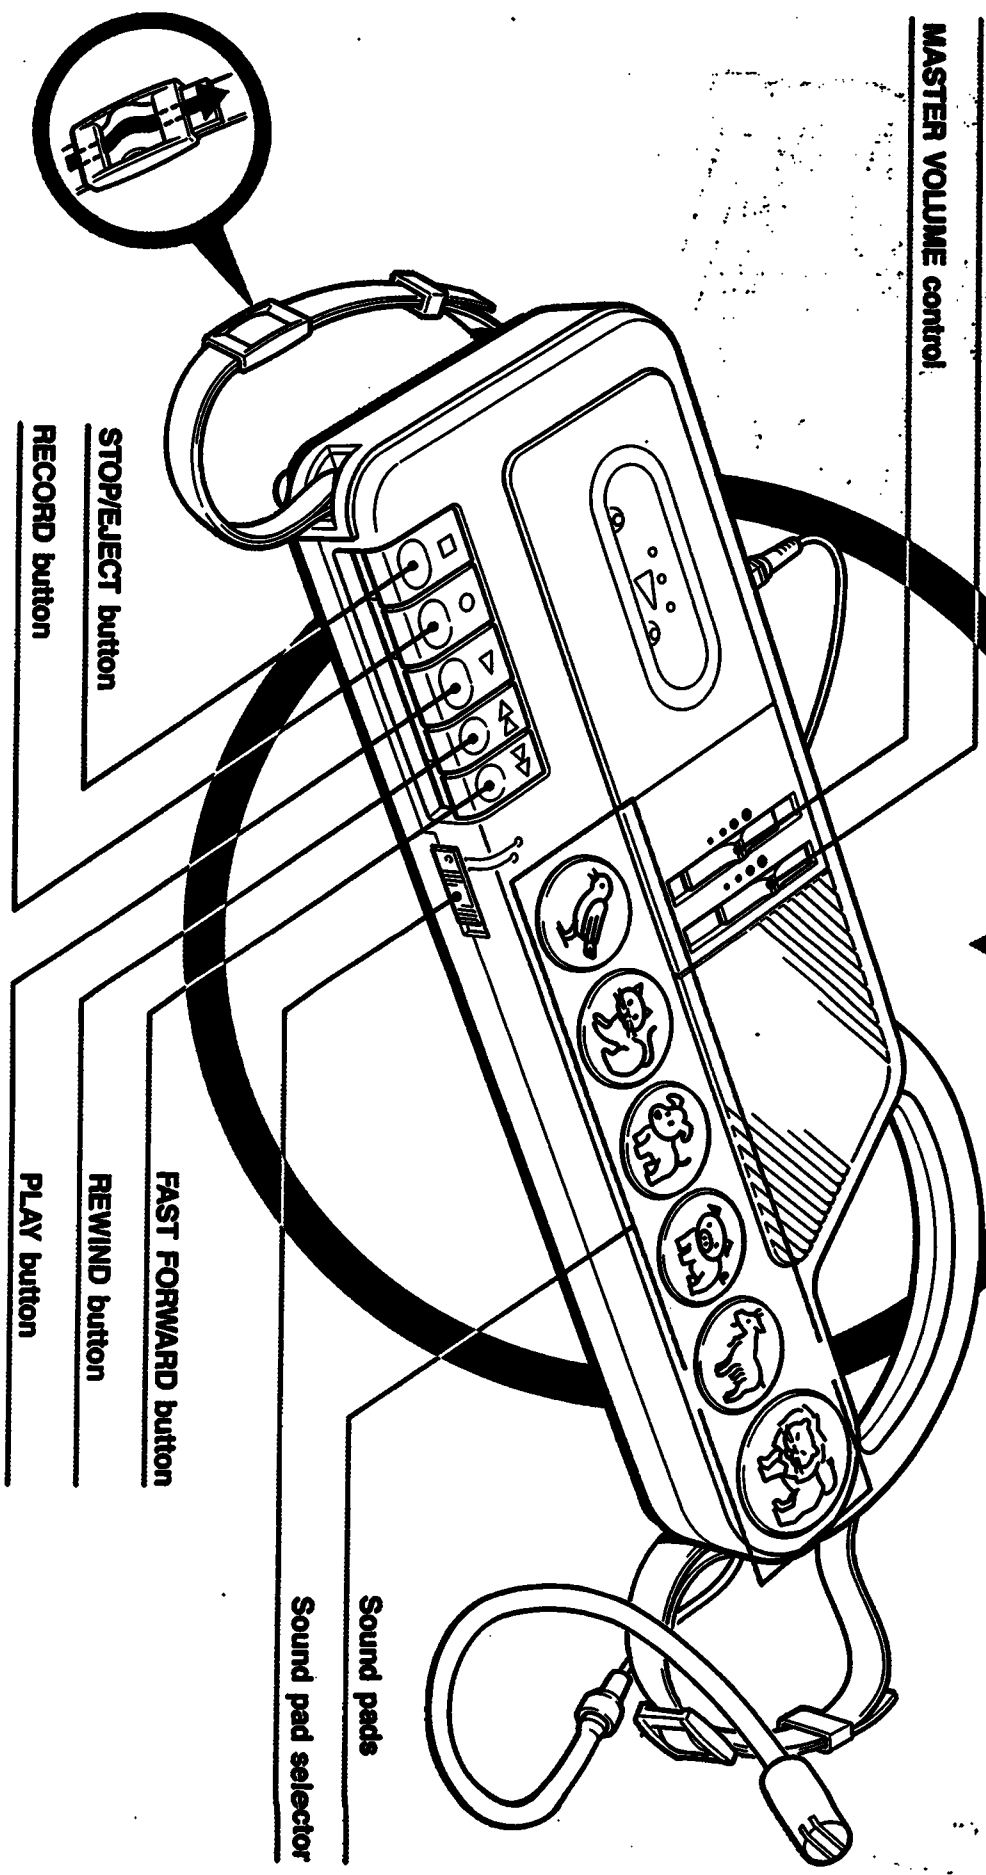

Sound pads
Sound pad selector

FAST FORWARD button

REWIND button

PLAY button

STOP/EJECT button

RECORD button