

Quick Start Guide




DVDirect

MAKE DVDS WITH THE PUSH OF A BUTTON OR TWO

Synchronized Recording


1

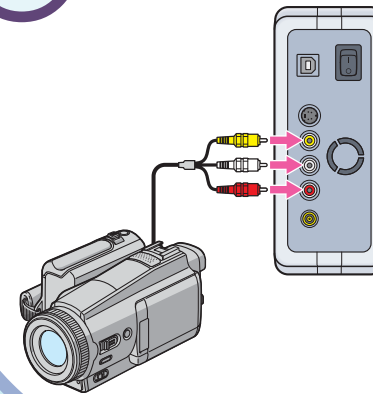

Connect a video camera or VCR.


If the connected device has an S VIDEO jack, use an S video cable.

2

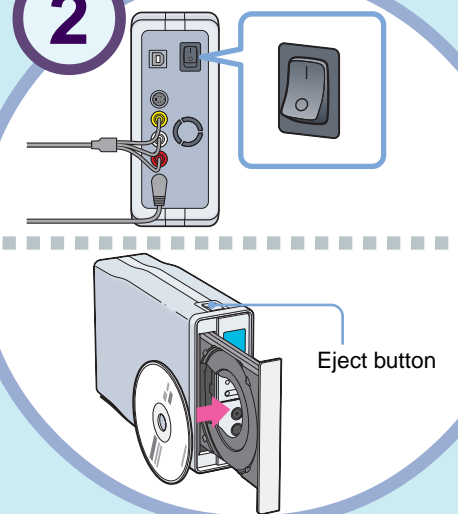


Turn on the drive and insert a disc.

3

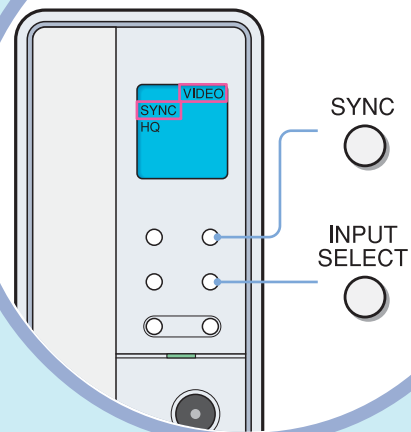


Press [SYNC] to display "SYNC" and press [INPUT SELECT] to display "VIDEO."

4

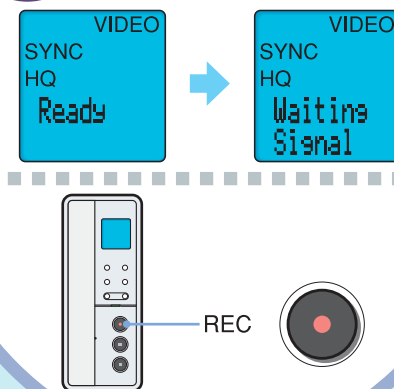

Press [REC] to standby for recording.


5

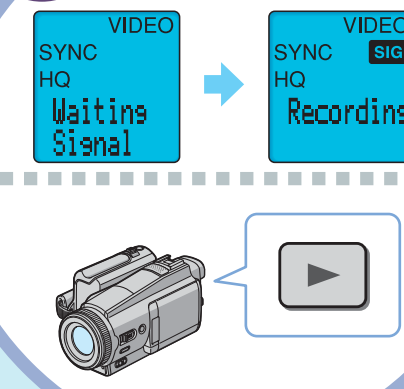

When you start playback on the video device, recording starts automatically.


Recording pauses automatically when you stop playback on the video device.

6

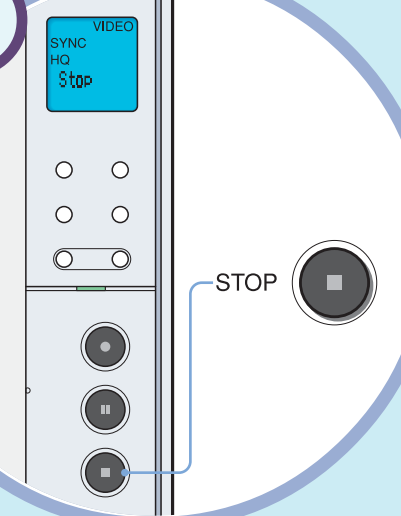


Press [STOP] to stop recording. Recording is completed. Eject the disc.

Manual Recording

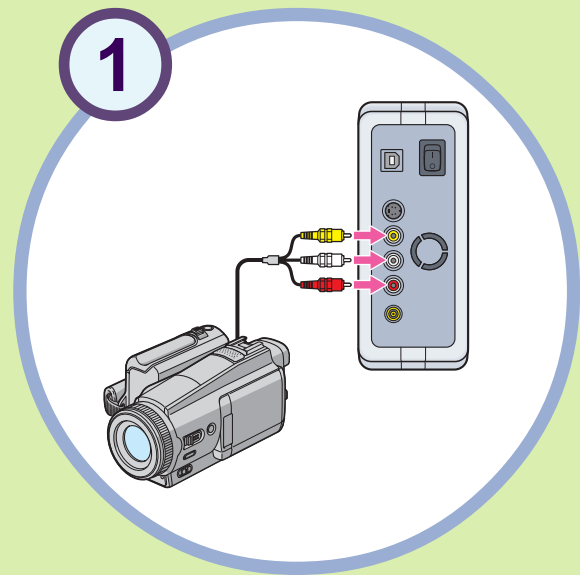


1 Connect a video camera or VCR.


If the connected device has an S VIDEO jack, use an S video cable.

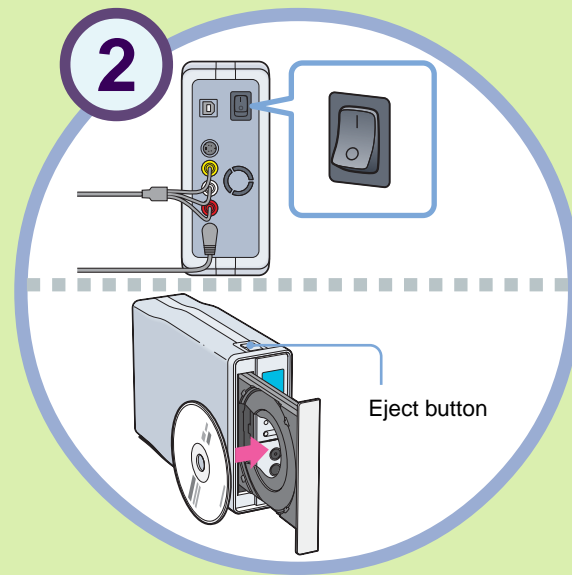


2 Turn on the drive and insert a disc.

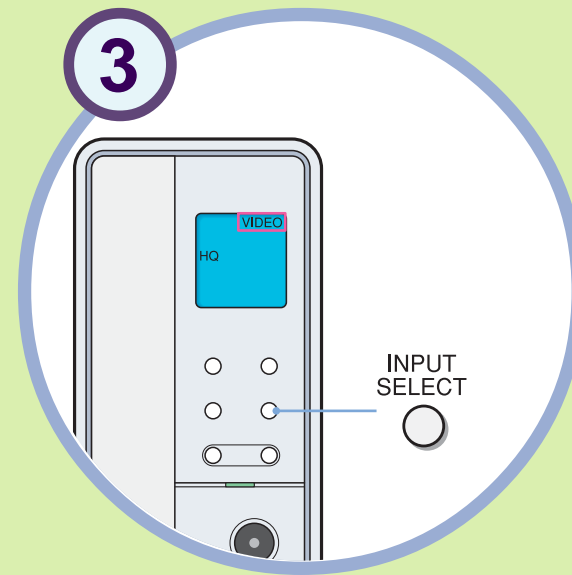


3 Press [INPUT SELECT] to display "VIDEO."

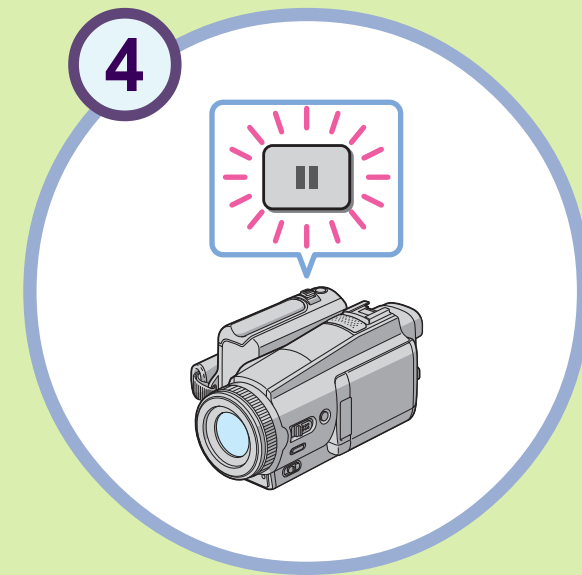

4 Set the video device to the playback pause mode.

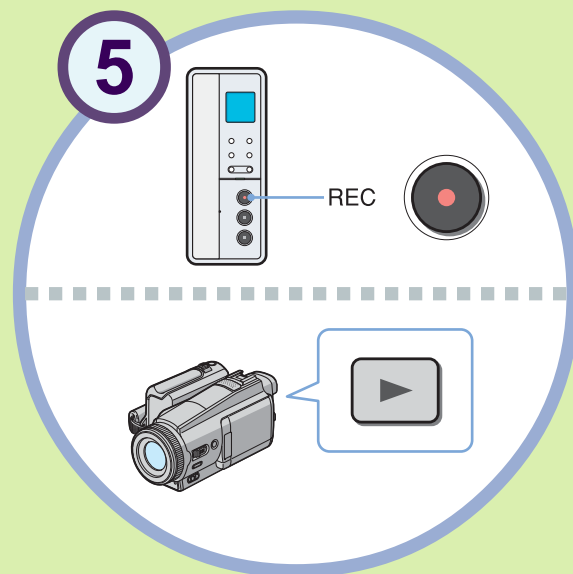

5 Start playback on the video device, and press [REC] to start recording.

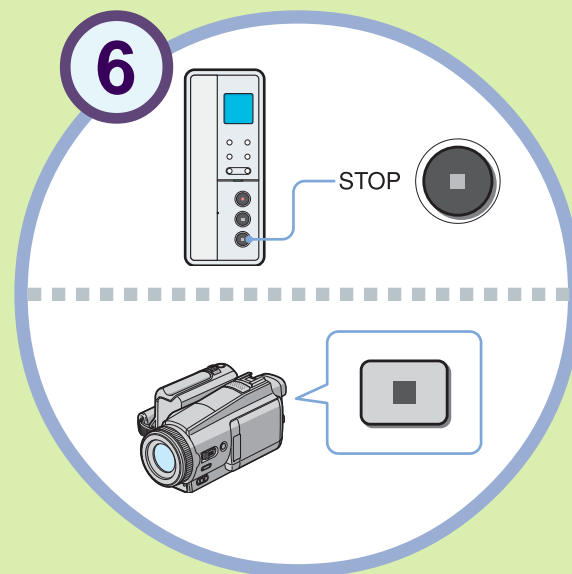

6 Press [STOP] to stop recording, and stop playback on the video device.
Recording is completed. Eject the disc.

QUICK REFERENCE

SYNC	Start Recording	Stop Recording
ON	Press "REC" to standby for incoming signal → start the source (VCR etc.) When signal is detected recording starts.	Press "STOP"
OFF	Press "REC" → start the source (VCR etc.)	If DVD+R is used, DVDDirect will ask "Finalize?" when ejecting Ⓢ to select [Yes] → Ⓣ

Function	Operation	Note
Finalize disc	Press Ⓣ until "Finalize?" → Ⓢ to select [Yes] → Ⓣ → Ⓢ to select [Yes] → Ⓣ	Finalize disc makes it compatible with DVD players. Finalized disc cannot be incrementally written.
Erase All	Press Ⓣ until "Erase All?" → Ⓢ to select [Yes] → Ⓣ → Ⓢ to select [Yes] → Ⓣ	Erase all contents of a disc. This function only works with DVD+RW.
Auto Play	Press Ⓣ until "Auto Play?" → Ⓢ to select [Yes] → Ⓣ	Resulting disc starts the playback upon insertion to a DVD player.
Auto Chaptering	Press Ⓣ until "Auto Chp" → Ⓢ to select desired time → Ⓣ	Writes in chapter breaks at set time interval (5, 10, 15min, none)

Legend

- Ⓣ FUNCTION/ENTER button
- Ⓢ SELECT button

Note

Refer to Instruction manual for more information.