 
 


Using with Battery

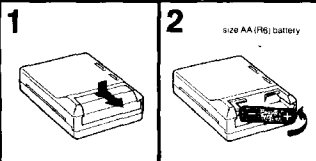

Using with Rechargeable Battery

Use only the supplied battery charger. Otherwise, the battery will be damaged. The supplied rechargeable battery can be recharged approx. 300 times. Charge the battery for approx. 4 hours before use. Approx. 2 hours of playback can be expected.

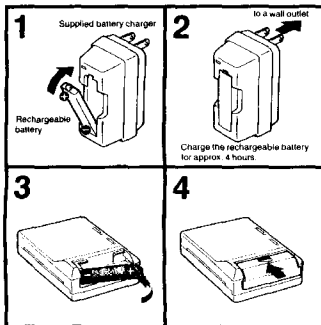

Notes

- The CHARGE indicator lights as long as the charger is plugged in.
- Unplug the battery charger from the wall outlet after the battery is charged for approximately 4 hours. Over charging for more than 20 hours may damage the battery.

Precautions

Notes on battery

- Remove the battery when you will not use the unit for a long time to prevent damage from battery leakage and corrosion.
- The internal battery is disconnected when you plug a cord into DC IN 1.5 V.
- When the sound becomes unstable, try a new battery.

External power sources

- The following external power sources can be connected through the DC IN 1.5 V jack.
- House current using an AC-DIM AC power adaptor
 - 12 V car battery using a DCC-70 car battery cord
 - Two size D (R20) batteries using an EBP-5000 battery case
- The illustration shows the polarity of DC IN 1.5 V jack. Use only a power cord having the same polarity.

Handling your Walkman

- Avoid exposure to temperature extremes, direct sunlight, moisture, sand, dust, or mechanical shock. Never leave in a car parked in the sun.
- You should run the unit for a few minutes before inserting a cassette if it has not been used for a long time.
- We do not recommend the use of cassettes longer than 90 minutes.

 
Tips on headphone listening

- Do not listen with headphones while driving, cycling, etc.
- Listen at a moderate volume to avoid damaging your ears and to avoid disturbing those close to you.


Maintenance

- Prolonged use may contaminate the tape head. If the sound becomes noisy or distorted, clean the head and tape path shown below with alcohol.
- Clean your headphone plug periodically for optimum sound.
- Do not use alcohol, benzene, or thinner to clean the case.

If you have any question or problem concerning your unit, please consult your nearest Sony dealer.

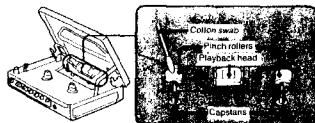

Attaching the Belt Clip

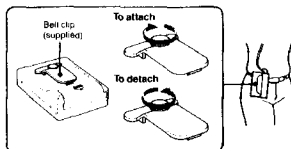 

Specifications

Radio	FM 87.6 - 108 MHz AM 530 - 1710 kHz									
Power requirements	1.5 V DC Battery size AA (R6) + 1 NC-WM rechargeable battery External DC 1.5 V power sources									
Battery life (Approximate hours)	<table border="1"> <tr> <th>Rechargeable NC-WM</th> <th>Playback</th> <th>FM</th> </tr> <tr> <td>Sony Alkaline AA (R6)</td> <td>7 hrs.</td> <td>30 hrs.</td> </tr> <tr> <td>Rechargeable NC-WM</td> <td>2 hrs.</td> <td>8 hrs.</td> </tr> </table>	Rechargeable NC-WM	Playback	FM	Sony Alkaline AA (R6)	7 hrs.	30 hrs.	Rechargeable NC-WM	2 hrs.	8 hrs.
Rechargeable NC-WM	Playback	FM								
Sony Alkaline AA (R6)	7 hrs.	30 hrs.								
Rechargeable NC-WM	2 hrs.	8 hrs.								
Accessories supplied	Standard headphones (open type), 1) Beltclip (1) Battery charger (1) Rechargeable Battery (1)									
Optional accessories*	Rechargeable battery NC-SWM, NC-WM AC power adaptor AC-DIM Car battery cord DCC-70 Battery case EBP-5000									

* Your dealer may not handle these optional accessories. Please ask the dealer for detailed information.

Design and specifications subject to change without notice.

Sony
Radio Cassette Player

WM-AF604

Operating Instructions

Owner's Record

The model number is located at the rear and the serial number is located in the battery compartment. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. WM-AF604 Serial No. _____

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

© 1989 by Sony Corporation Printed in Japan



SONY LIMITED WARRANTY

SONY CORPORATION OF AMERICA ("SONY") warrants this product against defects in material or workmanship as follows:

• A period of 90 days from the date of purchase from SONY and the later change of your SONY authorized service dealer to repair the defective product. After the 90-day period, you are responsible for all repair charges.

• A period of 1 year from the date of purchase from SONY or the later change of your SONY authorized service dealer to repair the defective product. After the 1-year period, you are responsible for all repair charges.

• A period of 1 year from the date of purchase from SONY or the later change of your SONY authorized service dealer to repair the defective product. After the 1-year period, you are responsible for all repair charges.

Label and Parts

• In order to receive service during the initial 90-day period, you must have the product or label the warranty is valid only if the label number appears on the product.

Parts Only

• During the remainder of the warranty period, any defective part that we have replaced is to be replaced (without charge) by SONY or SONY authorized service dealer. This warranty does not cover customer damage, or damage due to acts of God, or accidents, misuse, abuse or negligence by the consumer, or existing for reasons the warranty is voidable in the United States of America.

Exclusion of Warranties

• This warranty does not cover: (a) any product that has been altered in a way that the user is within the warranty period; (b) any product that has been altered in a way that the user is within the warranty period; (c) any product that has been altered in a way that the user is within the warranty period.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR LOSS OF PROFITS OR LOSS OF DATA OR INFORMATION ON THIS PRODUCT. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR LOSS OF PROFITS OR LOSS OF DATA OR INFORMATION ON THIS PRODUCT. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR LOSS OF PROFITS OR LOSS OF DATA OR INFORMATION ON THIS PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. In addition, you agree to indemnify and hold Sony Corporation and its authorized service dealer harmless from and against all claims, damages, losses and expenses, including reasonable attorneys' fees, that may be asserted against them by any third party as a result of your use of this product.

This warranty is void where prohibited by law. It is made in accordance with the laws of the State of California.

For more information, Sony Corporation of America, Inc. is available at the following address:

SONY CORPORATION OF AMERICA
305 Hudson Street, New York, NY 10014

SONY CUSTOMER INFORMATION CENTER
201 930 Sony Road
Sunnyvale, CA 94086

SONY CORPORATION OF AMERICA
305 Hudson Street, New York, NY 10014

SONY CORPORATION OF AMERICA
305 Hudson Street, New York, NY 10014



Sony Service Centers

Address	Address	Address
Alabama Mobile, AL 36611 Montgomery, AL 36104	Arizona Phoenix, AZ 85018 Tucson, AZ 85710	California San Francisco, CA 94102 San Diego, CA 92101 San Jose, CA 95128 Stockton, CA 95210 Tulsa, OK 74103
Colorado Denver, CO 80202	Connecticut Hartford, CT 06103	Florida Fort Lauderdale, FL 33309 Miami, FL 33134 Orlando, FL 32803 Tampa, FL 33607
Illinois Chicago, IL 60601	Indiana Indianapolis, IN 46204	Massachusetts Boston, MA 02108
Michigan Detroit, MI 48202	Minnesota Minneapolis, MN 55402	Mississippi Jackson, MS 39201
Missouri Kansas City, MO 64108 St. Louis, MO 63101	Nebraska Omaha, NE 68102	Nevada Las Vegas, NV 89101
New York New York, NY 10001 Buffalo, NY 14202 Rochester, NY 14602	North Carolina Charlotte, NC 28202 Raleigh, NC 27601	Ohio Cleveland, OH 44102 Columbus, OH 43201 Cincinnati, OH 45201
Pennsylvania Philadelphia, PA 19101 Pittsburgh, PA 15201	Texas Dallas, TX 75201 Houston, TX 77001 San Antonio, TX 78201 Austin, TX 78701	Virginia Richmond, VA 23201 Norfolk, VA 23501
Washington Seattle, WA 98101	Wisconsin Milwaukee, WI 53201	West Virginia Martinsburg, WV 26101



Sony District Service Offices

Address	Address	Address
Atlanta, GA 1175 Peachtree Street, N.E. Atlanta, GA 30309	Chicago, IL 111 N. Dearborn Street Chicago, IL 60610	Los Angeles, CA 1000 Wilshire Blvd. Los Angeles, CA 90017
Denver, CO 1775 Broadway Denver, CO 80202	Houston, TX 1000 West Loop, West Houston, TX 77001	Minneapolis, MN 1000 Hennepin Avenue Minneapolis, MN 55402
Detroit, MI 1000 Woodward Avenue Detroit, MI 48202	New York, NY 1000 Broadway New York, NY 10001	Phoenix, AZ 1000 North Central Avenue Phoenix, AZ 85004
San Francisco, CA 1000 Market Street San Francisco, CA 94102	Portland, OR 1000 Broadway Portland, OR 97201	San Diego, CA 1000 La Jolla Village Drive San Diego, CA 92037

  
Tape Playback

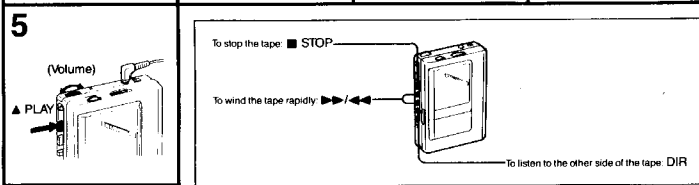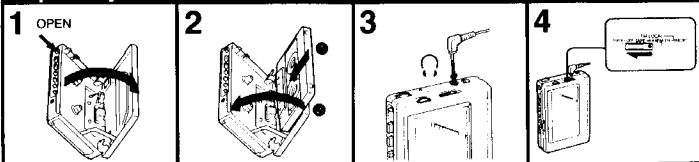

Radio Reception

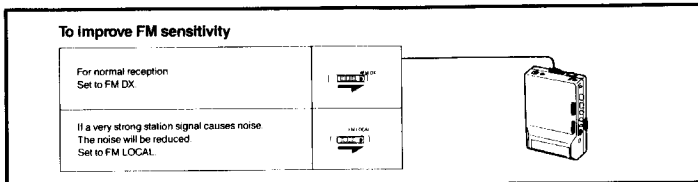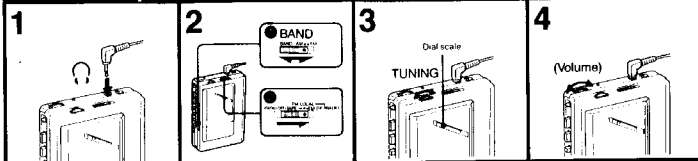  

To improve receiving condition

 

Note: Be sure to remove the cassette tape if it has a metallic cassette shell or metallic labels. Such cassettes may cause interference of difficulty in tuning.

