

SONY

Radio Cassette Player

3-752-762-23 (1)

WM-FX10/FX16

WALKMAN

Operating Instructions

WALKMAN is
a trademark
of Sony Corporation.

©1990 by Sony Corporation Printed in Malaysia

Owner's Record


The model number is located on the bottom and the serial number is located inside the cassette holder. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____

Serial No. _____

You should:

- clean the parts shown periodically.

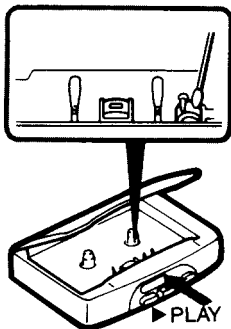

-
- run the Walkman for a few minutes before inserting a cassette if it has not been used for a long time.
 - remove a cassette having a metallic shell or labels if interference in radio reception occurs.

We do not recommend:

- the use of cassettes longer than 90 minutes.
- 2

Notes on batteries

- To prevent damage from battery leakage and corrosion, remove the batteries when you are not going to use your Walkman for a long time.
- When you plug a cord into the DC IN 3V jack (bottom), the internal batteries are automatically disconnected.
- When the sound becomes unstable, insert a new set of batteries.

External power sources

You can connect the following external power sources through the DC IN 3 V jack (bottom). Only use the recommended accessories with your Walkman.

- House current using an AC-D2L AC power adaptor
 - 12 V car battery using a DCC-70 car battery cord
 - Two R20 (size D) batteries using an EBP-500B battery case
- The illustration shows the polarity of DC IN 3 V jack.
- Only use power cords with the same polarity.



Handling your Walkman

- Avoid exposure to temperature extremes, direct sunlight, moisture, sand, dust, or mechanical shock. Never leave the unit in a car parked in the sun.

Notes on Headphones

Road Safety

Do not use headphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in many areas. It can also be potentially dangerous to play your headsets at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damages

Avoid using headphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Caring for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Maintenance

- Prolonged use may contaminate the tape head. If sound drop-outs or excessive noise occurs, clean the head and tape path with alcohol.
- Clean your headphone plug periodically for optimum sound.
- Do not use alcohol, benzine, or thinner to clean the case.

If you have any question or problem concerning your Walkman, please consult your nearest Sony dealer.

Specifications

Radio

FM: 87.6—108 MHz
AM: 530—1,710 kHz
3 V DC Batteries AA (R6) × 2
External DC 3 V power sources

Power requirements

	Playback	Radio
Sony Alkaline AM3 (N)	8 hrs.	30 hrs.
Sony SUM-3 (NS)	3.5 hrs.	15 hrs.

Accessories supplied

Stereo headphones (1) Beltclip (1)

AC power adaptor AC-D2L

Car battery cord DCC-70


Battery case EBP-500B

Your dealer may not handle some of the above listed accessories. Please ask the dealer for detailed information.

Design and specifications subject to change without notice.



Note on stereo headphones (for WM-FX16)

The cord of the headphones is detachable. If the cord becomes detached, reconnect it as illustrated.

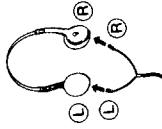


You can:

— wear the Walkman on a belt.

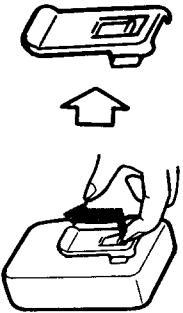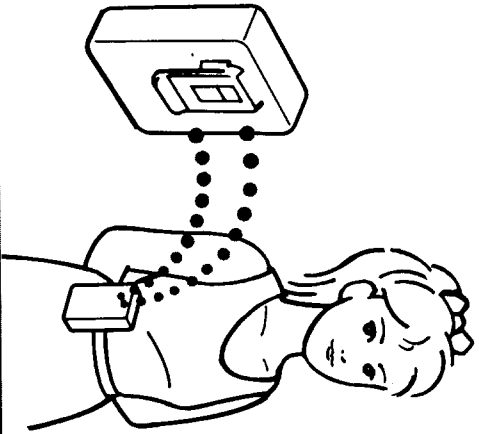


— improve radio reception.

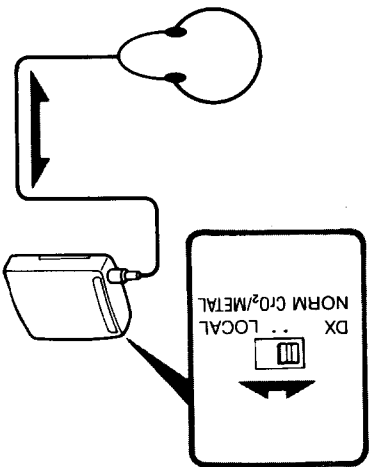

FM





Extend the headphone cord or adjust the DX/LOCAL selector.

AM


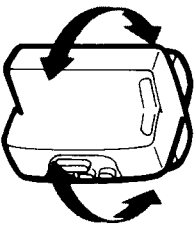


Rotate the Walkman.


START

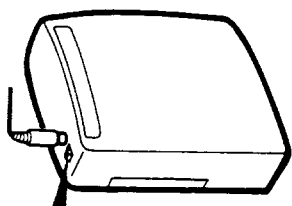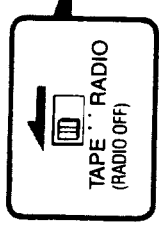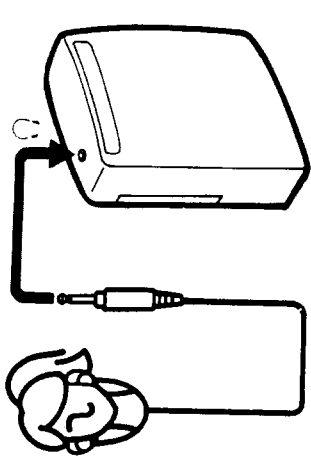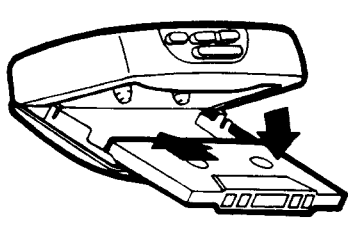





5

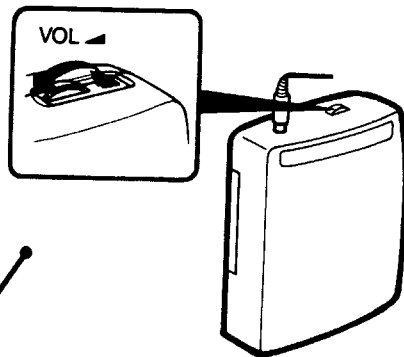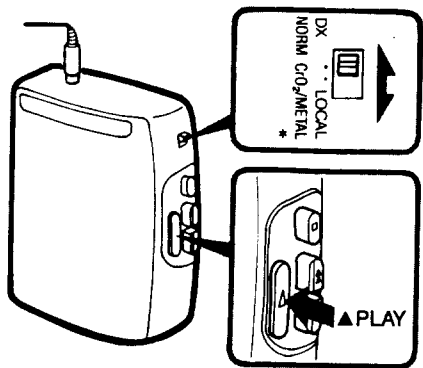









6

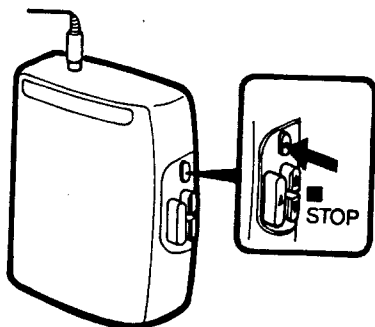

WALKMAN

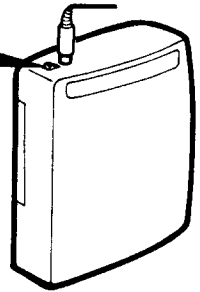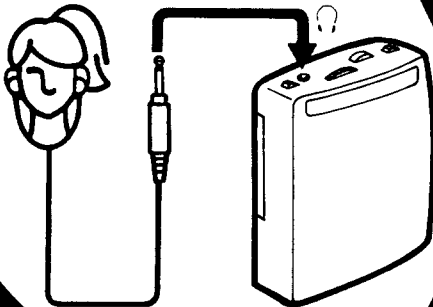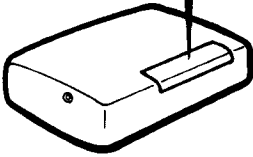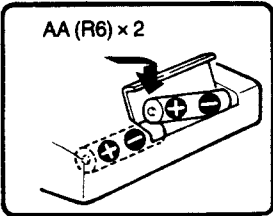

START

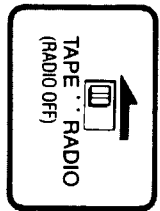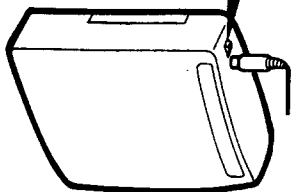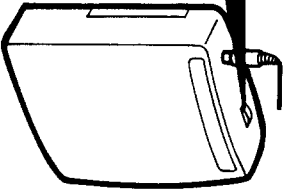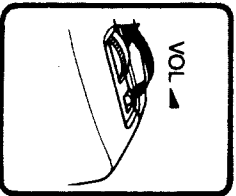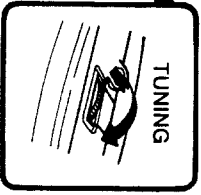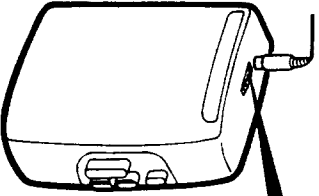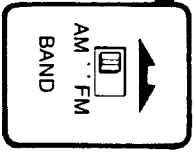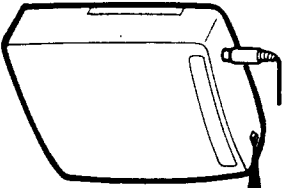

5



TYPE I (normal) → NORM
TYPE II (CrO₂) } → CrO₂/METAL
TYPE IV (metal)




Wind rapidly

stop

MEGA BASS

2X BASS EXPANSION CIRCUIT

For heavy and powerful sound

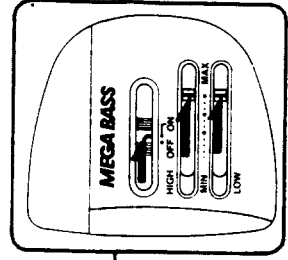

WM-FX16 only

Sony Service Centers

Arizona

Phoenix
2240 North Scottsdale Road
Tempe, AZ 85281
(602) 949-7669

California

Burbank (Los Angeles area)
4100 Riverside Drive, Suite A
Burbank, CA 91505
(818) 842-7669

Costa Mesa (Orange County area)
2729 Bristol Street South
Costa Mesa, CA 92626
(714) 549-4833

San Bruno (San Francisco area)
751 Camino Plaza
San Bruno, CA 94066
(415) 871-2810

San Diego
8975 Complex Drive
San Diego, CA 92123
(619) 279-2724

San Jose
1359 Old Oakland Road
San Jose, CA 95112
(408) 280-7669

Colorado

Denver
Havana Place Center
10740 East Iliff Avenue
Aurora, CO 80014
(303) 755-7669

Florida

Fort Lauderdale
3904 North 29th Avenue
Hollywood, FL 33020
(305) 920-5600

Georgia

Atlanta
120 Interstate North Parkway East
Suite 410
Atlanta, GA 30339
(404) 953-5871

Hawaii

Honolulu
950 Mapunapuna Street
Honolulu, HI 96819
(808) 834-6622

Illinois

Niles (Chicago N.W.)
7540 Caldwell Avenue
Niles, IL 60648
(312) 647-2400

Westmont (Chicago S.W.)
6036-38 South Cass Avenue
Westmont, IL 60559
(312) 968-0049

Kansas

Kansas City
11712 West 95 Street
Overland Park
KS 66214
(913) 888-2622

Maryland (Washington D.C.)

Washington D.C.
1358 Holton Lane
Langley Park, MD 20783
(301) 438-3500/01

Massachusetts

Boston
390 University Avenue
128 Westwood Industrial Center
Westwood, MA 02090
(617) 328-5130

Michigan

Detroit
24301 Indoplex Circle
Farmington Hills, MI 48018
(313) 477-1900

Minnesota

Minneapolis
4300 W. 36¹/₂ Street
St. Louis Park, MN 55416
(612) 920-8000

Missouri

St. Louis
12462-D Natural Bridge Road
Bridgeton, MO 63044
(314) 291-2201

New Jersey

Englewood Cliffs (N.Y. Metro. area)
41 Sylvan Avenue
Englewood Cliffs, NJ 07632
(201) 585-1974

Mahwah (N.Y. Metropolitan Area)
386 Route 17 South
Mahwah, NJ 07430
(201) 529-1655

Ohio

Cleveland
6370 York Road
Parma Heights, OH 44130
(216) 846-7669

Pennsylvania

Philadelphia
10360 Drummond Road
Philadelphia, PA 19154
(215) 632-0850/1

Pittsburgh
Wexford Plaza
10610 Perry Highway (Rt. 19N)
Wexford, PA 15090
(412) 935-8466

Texas

Dallas
401 Preston Valley Shopping Center
Dallas, TX 75230
(214) 661-3537

Houston
5747 Richmond Avenue
Houston, TX 77057
(713) 783-8761

Washington

Seattle
515 South Michigan Street
Seattle, WA 98108
(206) 762-8500

Sony District Service Offices

Western Zone

Western District
Sony Service Company
2729 Bristol Street South
Costa Mesa, CA 92626
(714) 549-4836

Northwestern District
Sony Service Company
1359 Old Oakland Road
San Jose, CA 95112
(408) 280-7675

Southwestern District
Sony Service Company
3201 Premier Dr., Suite 100
Irving, TX 75063
(214) 550-5200

Central Zone

Mid-West District
Sony Service Company
7540 Caldwell Avenue
Niles, IL 60648
(312) 647-2424

East Central District
Sony Service Company
24301 Indoplex Circle
Farmington Hills, MI 48018
(313) 477-4805

Eastern Zone

Eastern District
Sony Service Company
386 Route 17 South
Mahwah, NJ 07430
(201) 529-1616

Mid-Atlantic District
Sony Service Company
10360 Drummond Road
Philadelphia, PA 19154
(215) 632-7997

Southeastern District
Sony Service Company
3904 North 29th Avenue
Hollywood, FL 33020
(305) 920-5656

SONY

PERSONAL/PORTABLE AUDIO PRODUCTS

LIMITED WARRANTY

SONY CORPORATION OF AMERICA ("SONY") warrants this product against defects in material or workmanship, as follows:

1. For a period of 90 days from the date of retail purchase, SONY shall at its sole and absolute option either repair the defective product at no charge or replace the defective product with the same model or its equivalent model at no charge through a SONY SERVICE CENTER.

To obtain warranty service during the initial 90-day period, you must take the product, or deliver the product prepaid, to one of the SONY SERVICE CENTERS located in the United States.

2. After the initial 90-day period, SONY will supply, at no charge, new or rebuilt replacements for defective parts for a period of 1 year from the date of retail purchase.

Labor for removal and installation of these parts is available from your SONY authorized service facility or SONY SERVICE CENTER, at your expense.

Proof of purchase in the form of a bill of sale or receipted invoice, which indicates that the product is within the warranty period, must be presented to obtain warranty service. SONY suggests that the purchaser retain the dealer's dated bill of sale as evidence of the date of retail purchase.

This warranty does not cover cosmetic damage, and damage to any part of the product, including the antenna, which results from acts of God, accident, misuse, abuse, improper maintenance, or connection to an improper voltage supply.

This warranty is valid only if the serial number appears on the product. This warranty is valid only in the United States of America.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract with the Sony Partnership sw within 90 days of the date of sale, the limitation on how long an implied warranty lasts does not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Please refer to the list of SONY SERVICE CENTERS for the SONY SERVICE CENTER nearest you.

For your convenience, Sony Corporation of America has established the Customer Information Center to supply you with product or service information.

SONY CUSTOMER INFORMATION CENTER
201-930-SONY (7669)

or write to:

SONY CUSTOMER INFORMATION CENTER
Sony Drive, Mail Drop M-1
Park Ridge, New Jersey 07656

SONY CORPORATION OF AMERICA
Sony Drive, Park Ridge, New Jersey 07656