



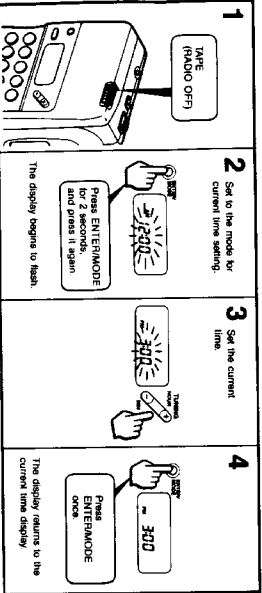



## Clock Operation

Before operation, insert the batteries.


You can change the operation mode in sequence by pressing the ENTERTAINMODE button.

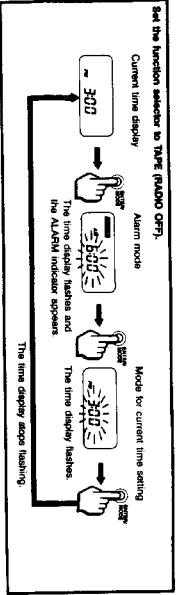

- \* If you keep pressing the HOUR and MIN (minute) buttons, the digits advance in sequence.
- \* The hour display does not advance even when the minute display returns to "00" after "59".
- \* To change the hour display: The hour display is on a 12-hour cycle. To change it to 24-hour cycle, press TUNING - for about 2 seconds. To return it to 12-hour cycle, press TUNING + for about 2 seconds.

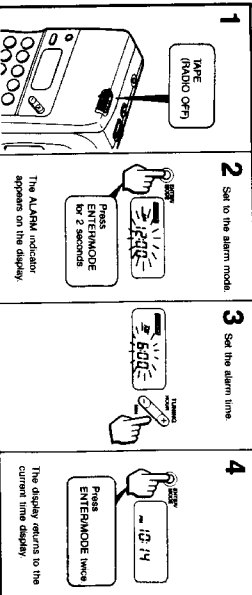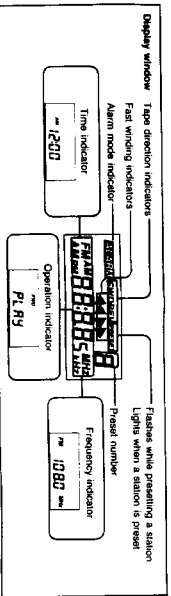

- \* The ALARM indicator appears on the display regardless of the current time once you set the alarm.
- \* You can also hear the alarm through the headphones.

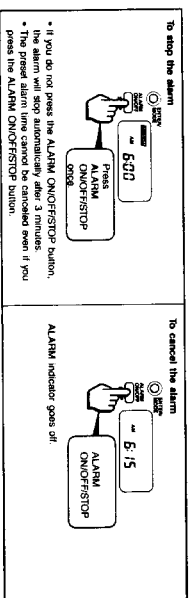


- \* If you do not press the ALARM ON/OFF/STOP button, the alarm will stop automatically after 3 minutes.
- \* The preset alarm time cannot be cancelled even if you press the ALARM ON/OFF/STOP button.

**Note of stereo headphones**

The earphone cord is detachable when you attach it. pay attention to the ① and ② marks. Connect the same marks.





# Installing Batteries

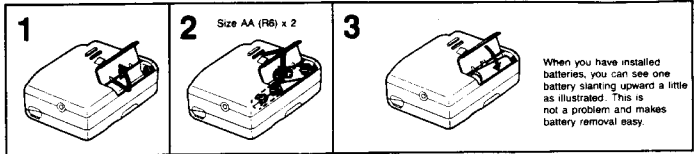


## Notes on batteries

- Remove the batteries when you will not use the unit for a long time to prevent damage from battery leakage and corrosion.
- The internal batteries are disconnected when you plug a cord into DC IN 3 V.
- When the batteries are run down, the sound becomes unstable. Try a new set of batteries in this case.

If the battery compartment lid is detached by an accidental drop, excessive force etc., attach it as illustrated in the numbered order.

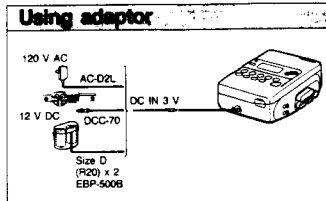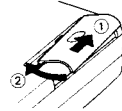

# Tape Playback

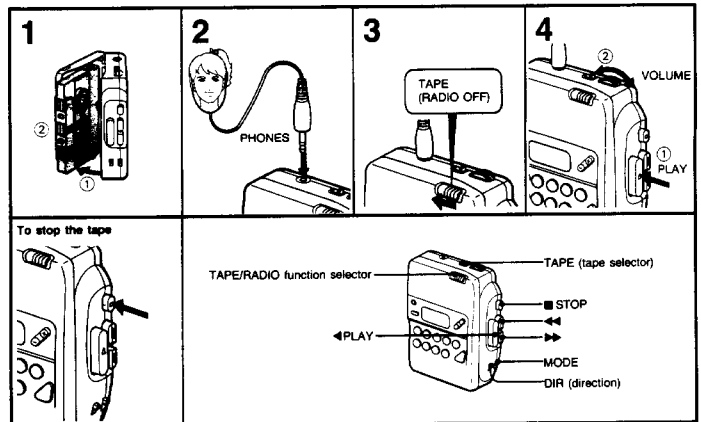







## Notes on playback

- At the end of the tape, ◀PLAY will be released automatically in case that the MODE selector is set to ▷. After winding the tape with ◀◀ or ▶▶, you must press ■ STOP.
- Do not open the cassette holder while the tape is running.
- The DIR selector functions even in the stop mode.




- The sheet inside the cassette holder protects the mechanism when the unit is transported without a cassette inside. Remove the sheet before using the unit.
- When the batteries are exhausted, be sure to press ■ STOP.



# Radio Reception
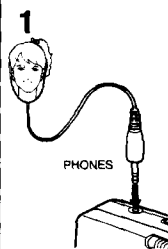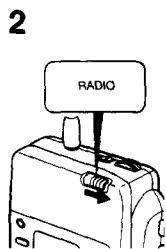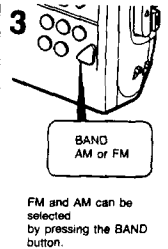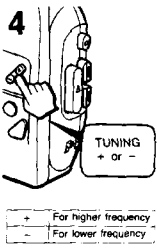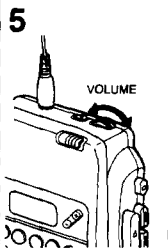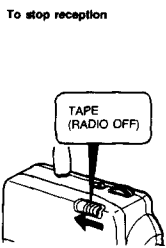
<p><b>1</b></p>  <p>PHONES</p>	<p><b>2</b></p>  <p>RADIO</p>	<p><b>3</b></p>  <p>BAND AM or FM</p> <p>FM and AM can be selected by pressing the BAND button.</p>	<p><b>4</b></p>  <p>TUNING + or -</p> <table border="1"> <tr> <td>+</td> <td>For higher frequency</td> </tr> <tr> <td>-</td> <td>For lower frequency</td> </tr> </table>	+	For higher frequency	-	For lower frequency
+	For higher frequency						
-	For lower frequency						
<p><b>5</b></p>  <p>VOLUME</p>	<p>To stop reception</p>  <p>TAPES (RADIO OFF)</p>	<p><b>Note</b> You should remove the cassette tape if it has a metallic cassette shell or labels. Such cassettes may cause interference or difficulty in tuning.</p>					

**To improve reception:**
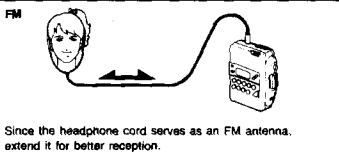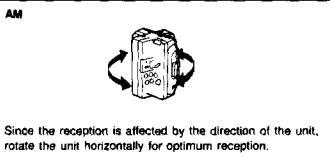
<p><b>FM</b></p>  <p>Since the headphone cord serves as an FM antenna, extend it for better reception.</p>	<p><b>AM</b></p>  <p>Since the reception is affected by the direction of the unit, rotate the unit horizontally for optimum reception.</p>
<p><b>To Improve Reception:</b></p> <p>Use the FM SENS selector (the function selector). For FM reception, normally set to DX. If a very strong station signal causes noise, set to LOCAL. The noise will be reduced.</p>  <p>LOCAL DX or FM SENS</p>	


# Preset Tuning

You can preset up to 9 stations in each band (AM, FM).  
Preset a station while the PRESET indicator flashes for 5 seconds.

## Presetting the Stations

**1** Tune in a desired station.

FM 108.0 MHz

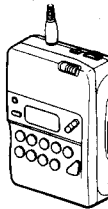

**2**

ENTER/MODE



FM 108.0 MHz

The PRESET indicator appears and begins to flash.

**3**

Put the station into a preset number.

Example: To preset the station on the 1 button.



FM 108.0 MHz



The PRESET indicator stops flashing and lights steadily. The preset number appears. Presetting is completed.

To stop the presetting operation just after pressing the ENTER/MODE button, press the button again. The PRESET indicator goes off.

## Receiving the Preset Stations

**1**

RADIO

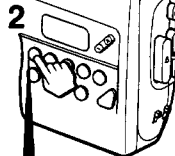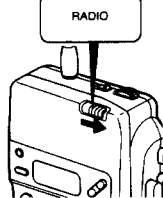

FM 108.0 MHz

Press the button you have preset the station on.

Example: To receive the station preset on the 1 button.

The PRESET indicator and number appear.

## To Use the Unit Abroad

This unit is factory preset to tune in the stations of the frequency range of U.S.A. and Canada. When you use the unit in other countries, change the receivable frequency range.

**1** Turn on the radio.

**2** To use in Japan

Keep ALARM ON/OFF/STOP and then TUNING + pressed for 7 seconds. The receivable frequency range becomes as follows.

FM 76.0 - 90 MHz (100 kHz step)

AM 531 - 1,710 kHz (9 kHz step)

To use in other countries

Keep ALARM ON/OFF/STOP and then TUNING - pressed for 7 seconds. The receivable frequency range becomes as follows.

FM 87.5 - 108 MHz (50 kHz step)

AM 531 - 1,602 kHz (9 kHz step)

To return to the frequency range of U.S.A. and Canada, keep ALARM ON/OFF/STOP pressed for 7 seconds.

When the frequency range has changed, the display turns off and turns on again with beep sound. The display will show the frequency of that you changed to.

**Note**

If you change the frequency range, all preset stations, current time, and alarm time are canceled.

## If the Display Shows Incorrect Information

**1** Turn on the radio.

**2** Keep ALARM pressed for 7 seconds.

The display turns off and turns on again with beep sound. The display will show AM 530 kHz.

All preset stations, current time, and alarm time are canceled.