




CD/DVD Player


Startup Guide / Udhëzuesi i fillimit / Ръководство за стартиране / Vodič za početak rada / Vodič za početak / Alustusjuhend / Pasirengimo darbui vadovas / Sākšanas norādījumi / Водич за почеток / Navodila za namestitev / Vodič za početak

1


A

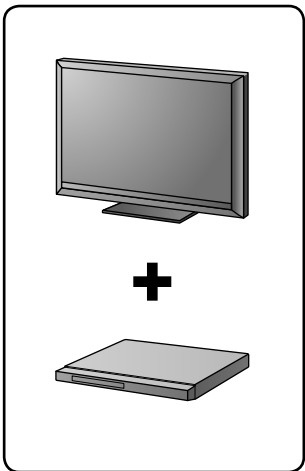


■ SCART

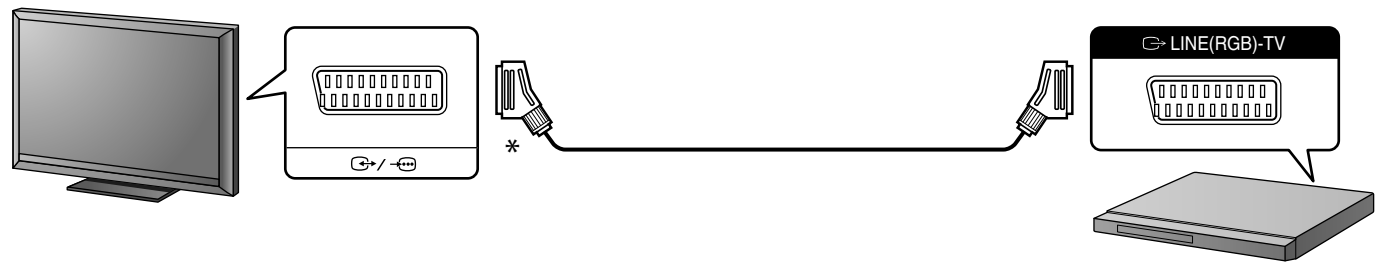

B

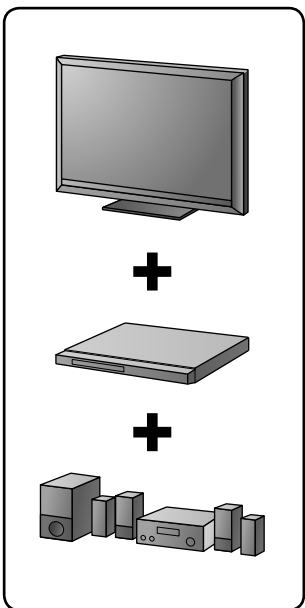


■ COAXIAL

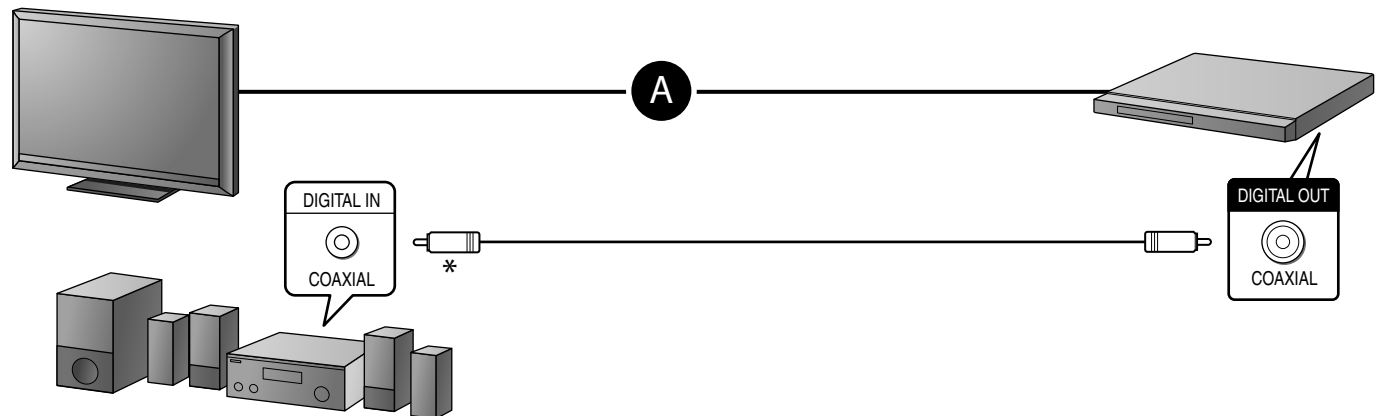


* Not supplied / Nuk jepet / Не е включено в комплекта / Nije priložen / Nije priloženo / pole kaasas / Nepridedamas / Komplektācijā nav iekļauts / Не се доставува / ni priloženo / Ne isporučuje se

2



1

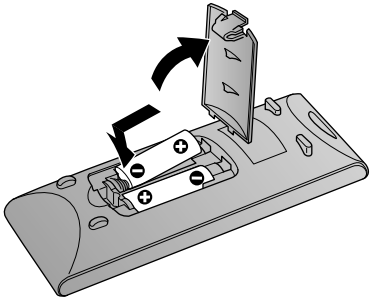

2

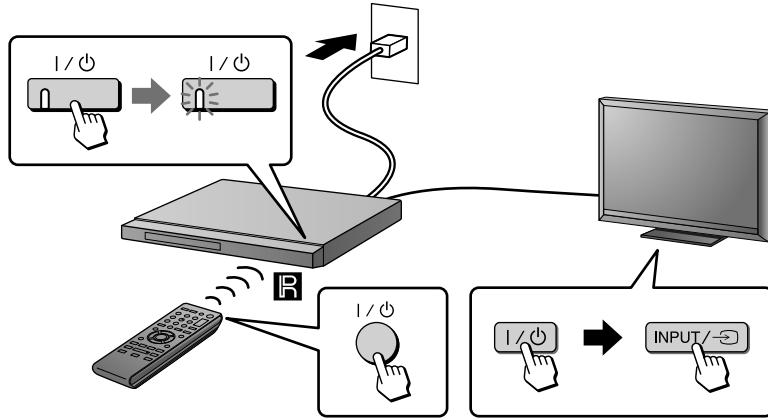


3

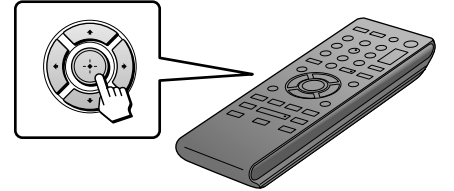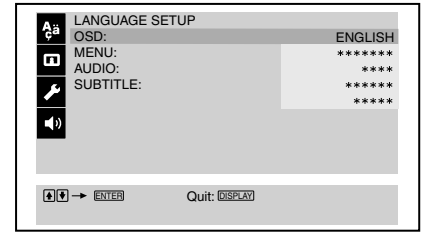

3

1

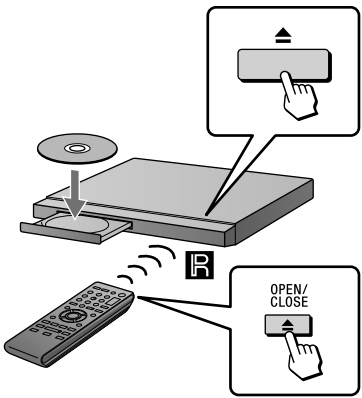

2

