

# CD/DVD Player

Reference Guide

DVP-SR700H



# WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

The mains lead must be changed only at a qualified service shop.

Batteries or batteries installed apparatus shall not be exposed to excessive heat such as sunshine, fire or the like.

## CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD player is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.

## Precautions

- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off.
- Do not install this player in a confined space, such as a bookshelf or similar unit.
- Install the player so that the AC power cord (mains lead) can be unplugged from the wall socket immediately in the event of trouble.
- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.

## Lightning

For added protection for this set during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it

from the wall outlet. This will prevent damage to the set due to lightning and power-line surges.

## Note about the discs

Do not use the following discs:

- A disc that has a non-standard shape (e.g., card, heart).
- A disc with a label or sticker on it.

## Region code

Your player has a region code printed on the back of the unit and only will play commercial DVDs (playback only) labelled with identical region codes. This system is used to protect copyrights.

Commercial DVDs labelled  will also play on this player.

Depending on the commercial DVD, there may be no region code indication, even though playing the commercial DVD is prohibited by area restrictions.



Region code

## Copyrights

- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- Manufactured under license under U.S. Patent # 5,451,942 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks and DTS Digital Out and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.
- “DVD+RW,” “DVD-RW,” “DVD+R,” “DVD+R DL,” “DVD-R,” “DVD VIDEO,” and “CD” logos are trademarks.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- This DVD player incorporates High-Definition Multimedia Interface (HDMI™) technology. HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- DivX®, DivX Certified® and associated logos are registered

trademarks of DivX, Inc. and are used under license.

- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER FOR DECODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD (“MPEG-4 VIDEO”) THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

## About this manual

“DVD” may be used as a general term for commercial DVDs, DVD+RWs/DVD+Rs/DVD+R DLs (+VR mode) and DVD-RWs/DVD-Rs/DVD-R DLs (VR mode, video mode).


# Playback

## Control Menu display

Use the Control Menu to select a function and to view related information.

### Press DISPLAY.

To change the Control Menu display, press DISPLAY again.

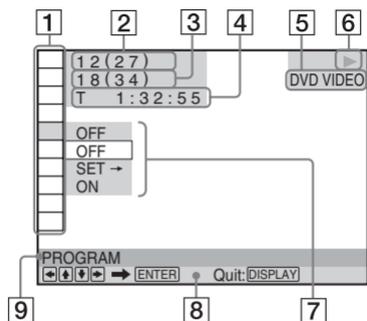

- 1 Control Menu items
- 2 Currently playing title/Total number of titles
- 3 Currently playing chapter/Total number of chapters
- 4 Playing time
- 5 Selected media type
- 6 Playback status
- 7 Selected item icon/menu options
- 8 Operation message
- 9 Selected Control Menu item

## Menu list

Item	Item Name, Function
	<b>TITLE/SCENE/TRACK</b>
	<b>CHAPTER/INDEX</b>
	<b>TRACK</b>

Selects the title, scene, track, chapter, or index to be played.

## TIME/TEXT

Checks the elapsed time and the remaining playback time.

Input the time code for picture and music search (DVD and DivX video files only).

## DISC/USB

Selects either "USB" or "DISC" to be played.

## REC TO USB

Rips a CD, or copies photo, music and video files to a USB device (page 7).

## ORIGINAL/PLAY LIST

Selects the type of title (DVD-VR mode) to be played: ORIGINAL, or edited PLAY LIST.

## PROGRAM\*<sup>1, \*2</sup>

Selects the title, chapter, or track to play in the order you want.

- 1 Select "SET →," then press ENTER and select the title (T), chapter (C), or track (T) you want to programme, and press ENTER.
- 2 Repeat selecting the title, chapter, or track.
- 3 Press .

## SHUFFLE\*<sup>1, \*2</sup>

Plays the title, chapter or track in random order.

## REPEAT\*<sup>1, \*2</sup>

Plays all titles/tracks/albums or a single title/chapter/track/album/file repeatedly.

## A-B REPEAT\*<sup>1, \*2</sup>

Specifies the parts you want to play repeatedly.

- 1 During playback, select "SET →," then press ENTER.  
The "A-B REPEAT" setting bar appears.
- 2 When you find the starting point (point A), press ENTER.
- 3 When you reach the ending point (point B), press ENTER again.

## PARENTAL CONTROL

Set to prohibit playback on this player.

**ON →**: Sets the playback restrictions so that the player will not play inappropriate discs (Custom Parental Control).

**PLAYER →**: Playback of some DVD VIDEOS can be limited according to a predetermined level such as the age of the users. Scenes may be blocked or replaced with different scenes (Parental Control).

**PASSWORD →**: Enter a 4-digit password using the number buttons. Also use this menu to change the password.

**OFF** →: Turns off the Custom Parental Control function.

## Parental Control (limited playback)

You can set a playback limitation level.

- 1 Select "PLAYER →," then press ENTER.  
Enter or re-enter your 4-digit password, then press ENTER.
- 2 Press **↑/↓** to select "STANDARD," then press ENTER.  
Press **↑/↓** to select an area, then press ENTER.  
When you select "OTHERS →," select and enter a standard code. See "PARENTAL CONTROL AREA CODE LIST" at the end of this manual.
- 3 Press **↑/↓** to select "LEVEL," then press ENTER.  
Press **↑/↓** to select the level, then press ENTER.  
Parental Control setting is complete.  
The lower the value, the stricter the limitation.  
To turn off the Parental Control function, set "LEVEL" to "OFF."

If you forget your password, enter "199703" in the password box, press ENTER, and then enter a new 4-digit password.

## SETUP

**QUICK:** Use Quick Setup to choose the desired language of the on-screen display, the aspect ratio of the TV and the audio output signal.

**CUSTOM:** In addition to the Quick Setup setting, you can adjust various other settings (page 8).

**RESET:** Returns the settings in "SETUP" to the default setting.

## ZOOM\*1

Magnifies the image up to four times the original size, scroll using **←/↑/↓/→**.

## ANGLE

Changes the angle.

## CUSTOM PICTURE MODE

Selects the picture quality that best suits the programme you are watching.

**STANDARD:** Displays a standard picture.

**DYNAMIC 1:** Produces a bold dynamic picture by increasing the picture contrast and the colour intensity.

**DYNAMIC 2:** Produces a more dynamic picture than DYNAMIC 1 by further increasing the picture contrast and colour intensity.

**CINEMA 1:** Enhances details in dark areas by increasing the black level.

**CINEMA 2:** White colours become brighter and black colours become richer, and the colour contrast is increased.

**MEMORY** →: Adjusts the picture in greater detail.

## SHARPNESS

Exaggerates the outline of the image to produce a sharper picture.

**OFF:** Cancels this option.

1: Enhances the outline.

2: Enhances the outline more than 1.

## AV SYNC

Adjust the delay between the picture and sound. This function is not effective when:

- you use the DIGITAL OUT (COAXIAL) jack, and set "DOLBY DIGITAL," "MPEG," or "DTS" in "AUDIO SETUP" to "DOLBY DIGITAL," "MPEG," or "ON" respectively (page 9).
- you connect a Dolby Digital or DTS-compliant device via the HDMI OUT jack, and set "DOLBY DIGITAL," "MPEG," or "DTS" in "AUDIO SETUP" to "DOLBY DIGITAL," "MPEG," or "ON" respectively (page 9).

1 Select "SET →," then press ENTER.

The "AV SYNC" adjustment bar appears.

2 Press **→** repeatedly to adjust the delay.

Each time you press **←/→**, the delay is adjusted by 10 milliseconds.

3 Press ENTER.

The selected setting takes effect.

To reset the "AV SYNC" setting, press CLEAR in step 2.

## TVS (TV Virtual Surround)

Selects surround sound effect when connecting a stereo TV or 2 front speakers. This only works when playing a multichannel Dolby audio sound track. Furthermore, if the player is set up to output the signal from the DIGITAL OUT (COAXIAL)/HDMI OUT jack, the surround effect will only be heard when "DOLBY DIGITAL" is set to "D-PCM" and "MPEG" is set to "PCM" in "AUDIO SETUP" (page 9).

**OFF:** Cancels the setting.

**TVS DYNAMIC THEATER/  
TVS DYNAMIC/**

**TVS WIDE:** These modes are effective when the distance between the front L and R speakers is short, such as with built-in speakers on a stereo TV.

**TVS NIGHT:** This feature is useful when you want to hear the dialogue and enjoy the surround sound effects of "TVS WIDE" at low volume.

**TVS STANDARD:** Use this setting when you want to use TVS with 2 separate speakers.

\*<sup>1</sup> To return to normal play, select "OFF" or press CLEAR.

\*<sup>2</sup> The play mode is cancelled when:  
– you open the disc tray.  
– you turn off the player.

#### ◆ Items for DATA discs or USB

---

Item	Item Name, Function
------	---------------------

---

	<b>ALBUM</b>
--	--------------

Selects the album that contains music and photo files to be played.

	<b>FILE</b>
--	-------------

Selects the photo file to be played.

	<b>ALBUM</b>
--	--------------

Selects the album that contains video file to be played.

	<b>FILE</b>
--	-------------

Selects the video file to be played.

	<b>DATE</b>
--	-------------

Displays the date the picture was taken by a digital camera.

	<b>INTERVAL*</b>
--	------------------

Specifies the duration for which the slides are displayed on the screen.

	<b>EFFECT*</b>
--	----------------

Selects the effects to be used for changing slides during a slide show.

**MODE 1:** The images randomly cycle through the effects.

**MODE 2:** The image sweeps in from top left to bottom right.

**MODE 3:** The image sweeps in from top to bottom.

**MODE 4:** The image sweeps in from left to right.

**MODE 5:** The image stretches out from the centre of the screen.

**OFF:** Turns off this function.

---

---

## MEDIA

Selects the media type you want to play.

**VIDEO:** Plays video files.

**PHOTO (MUSIC):** Plays photo and music files as a slide show. You can view a slideshow with sound when music and photo files are placed in the same album. If the playing time of either music or photos is longer, the longer one continues without sound or image.

**PHOTO (BGM):** Plays photo files with the player's internal background sound. To choose the melody of the background sound, press AUDIO repeatedly while viewing the image.

**MUSIC:** Plays music files. Press SUBTITLE while playing music files that contain unsynchronized lyric information. The player supports MP3 ID3 Lyrics only.

\* Depending on the file, this function may not be possible.

---

## To change the colour system

If the on-screen menu of the player does not appear on the connected TV, switch the player's colour system to match the colour system of the TV (NTSC or PAL).

First turn off the player by pressing . Next press DISPLAY, enter "0" using the number button, and then press  on the remote. The player turns back on, and the name of the colour system will appear on the front panel display.

---

## To play VIDEO CDs with PBC functions

When you start playing a VIDEO CD with PBC (Playback control) functions, the menu for your selection appears.

### To play without using PBC

Press /  or the number buttons while the player is stopped to select a track, then press  or ENTER. To return to PBC playback, press  twice, then press .

---

## To lock the disc tray (Child Lock)

You can lock the disc tray to prevent it being opened by mistake.

When the player is in standby mode, press in order, **RETURN**, **ENTER**, and **POWER** on the remote.

The player turns on and “**LOCKED**” appears on the front panel display. The **POWER** button on the player does not work while the Child Lock is set.

## To unlock the disc tray

When the player is in standby mode, press in order, **RETURN**, **ENTER**, and **POWER** on the remote again.

---

## Controlling TVs with the remote

You can control the sound level, input source, and power switch of your Sony TV with the supplied remote.

If your TV is listed in the table below, set the appropriate manufacturer’s code.

When you replace the batteries of the remote, set the appropriate code number again.

- 1 While holding down TV **POWER**, press the number buttons to select your TV’s manufacturer’s code.
- 2 Release TV **POWER**.

### Code numbers of controllable TVs

Sony	01 (default)
Hitachi	24
JVC	33
LG/Goldstar	76
Panasonic	17, 49
Philips	06, 08, 72
Samsung	71
Sharp	29
Toshiba	38

---

## Viewing a high quality slide show (PhotoTV HD)

If you have a Sony TV that is compatible with “PhotoTV HD,” you can enjoy the best quality images. “PhotoTV HD” is activated when the player is connected to a TV by an HDMI cord and “JPEG RESOLUTION” in “HDMI SETUP” is set to “PhotoTV HD” (page 9).

---

## About the CONTROL FOR HDMI functions

You can control the player by connecting to a TV compatible with the CONTROL FOR HDMI function with an HDMI cord (not supplied).

### To enjoy the features

- One-Touch Play  
With one touch of the **▶** button on the remote, the player and your TV automatically turn on and the TV’s input is switched to the player. Playback starts automatically.  
The TV’s input will also switch to the player automatically, in the following cases:
  - You press the **▶**, **TOP MENU**, **MENU**, or **DISPLAY** button on the remote.  
Note that these buttons are not effective when you play audio CD or music files in “MUSIC” mode.
  - If a disc with auto play function is loaded.
  - If you push the disc tray to close.
- System-Power Off  
When you turn the TV off by using the **POWER** button on the TV’s remote, the components compatible with CONTROL FOR HDMI function turn off automatically.

### About ‘BRAVIA Sync’ display

You can control the player by connecting to a Sony TV (compatible with ‘BRAVIA Sync’ only) and selecting the SYNC MENU button on the TV’s remote/option menu.

Some TVs may have other buttons available to turn on the ‘BRAVIA Sync’ display, or require setting on the TV. Depending on the TV, the setting display may appear before the ‘BRAVIA Sync’ display. Refer also to the operating instructions supplied with the TV. The ‘BRAVIA Sync’ display will show different items depending on the disc type.



(Example: ‘BRAVIA Sync’ display when playing a DVD VIDEO)

Select an item using **←/↑/↓/→** and then press **ENTER**.

- When playing a DVD VIDEO: Displays **MENU** and **TOP MENU**.

- When playing in DVD-VR mode: Displays **◀◀**, **▶▶**, and chapter number.
- When playing a CD, VIDEO CD or Super VCD (without PBC): Displays **◀◀**, **▶▶**, and track number.
- When playing a VIDEO CD or Super VCD (with PBC): Displays **◀◀**, **▶▶** and scene number. When the disc's menu appears, you can select an item by pressing **↑/↓**.
- When playing video, photo, and music files: Displays MENU and PICT. NAVI (Picture Navigation).

### To change the display

Press the SYNC MENU button on the TV's remote repeatedly to turn on or change the display. 'BRAVIA Sync' display and Control Menu are displayed alternately.


### To turn off the display

Press the RETURN or SYNC MENU button on the TV's remote repeatedly.

## Ripping a CD or copying data files to a USB device

You can rip a CD or copy\* data files to a USB device. You cannot rip a CD or copy data files while playing back a disc.

\* Depending on the disc, copying may not be possible.

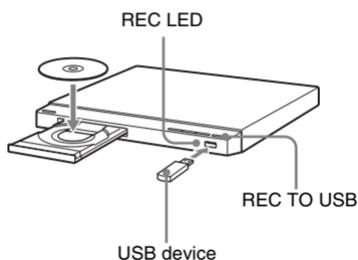

- 1 Insert a disc into the disc tray, and then connect a USB device to the USB jack.
- 2 Press DISPLAY.  
The Control Menu display appears.
- 3 Press **↑/↓** to select "REC TO USB."
- 4 Press **↑/↓** to select the items to copy, and press ENTER.  
When ripping a CD, select "DISC" or "TRACK."  
When copying data files, select "DISC," "ALBUM," "TRACK," or "FILE."  
If you select "DISC," go to step 6.

- 5 Press **←/↑/↓/→** to select albums, tracks or files, and press ENTER.  
When selecting albums, tracks or files, the REC LED indicator flashes.  
The number of selected albums, tracks or files is displayed in the front panel display in recording standby mode.
- 6 Press **▶**.  
When ripping a CD or copying data files, the REC LED indicator stays lit.  
Recording is started. Recording progress is displayed. After recording finishes, "Completed" is displayed.

### To record simply

You can rip a CD or copy data files simply by pressing the REC TO USB button. When pressing the REC TO USB button, the display appears. Press **▶** according to the display. Recording is started.

### To erase "ALBUM," "TRACK," or "FILE"

Press CLEAR. Follow the displayed message.

### To remove the USB device

Stop playback, ripping a CD, or copying/erasing data files, and then disconnect the USB device from the USB jack. Do not remove the USB device during operation, as data corruption may occur.

### To change LUN

For some devices, LUN (Logical Unit Number) may appear. To change the LUN or original storage, press **||▶ ●▶** when the list of albums or tracks is displayed.

### About supported USB devices

- This player supports USB Mass Storage Class only.
- This player supports FAT format USB device only.
- Some USB devices may not work with this player.

# CUSTOM Menu

You can adjust various settings. Press DISPLAY when the player is in stop mode, select  (SETUP), and then select "CUSTOM." The CUSTOM menu appears.

## Menu list

Item	Item Name, Function
------	---------------------

A	LANGUAGE SETUP
---	----------------

**OSD (On-Screen Display):** Switches the display language on the screen.

**MENU\*<sup>1</sup>:** Selects the desired language for the disc's menu (DVD VIDEO only).

**AUDIO\*<sup>1</sup>:** Switches the language of the sound track. When you select "ORIGINAL," the language given priority in the disc is selected. (DVD VIDEO only)

**SUBTITLE\*<sup>1</sup>:** Switches the language of the subtitle recorded on the DVD VIDEO. When you select "AUDIO FOLLOW," the language for the subtitles changes according to the language you selected for the sound track. (DVD VIDEO only)

S	SCREEN SETUP
---	--------------

**TV TYPE:** Selects the aspect ratio of the connected TV.

16:9



4:3 LETTER BOX



4:3 PAN SCAN



**COLOR SYSTEM (VIDEO CD):** Selects the colour system when you play a VIDEO CD. If your TV is the DUAL system, select "AUTO."

**SCREEN SAVER:** When set to "ON," the screen saver appears when the player is in pause or stop mode for 15 minutes. Press  to turn off the screen saver.

**BACKGROUND:** Selects the background colour or picture on the TV screen. If you set "JACKET PICTURE," even though the disc does not contain a jacket picture, the "GRAPHICS" picture appears.

**PROGRESSIVE (COMPONENT OUT ONLY)\*<sup>2</sup>:** Sets to "ON" if your TV accepts progressive format signals.

**MODE (PROGRESSIVE):** This setting is effective only when you set "PROGRESSIVE (COMPONENT OUT ONLY)" to "ON." If you select "AUTO," the player detects the format (film-based or video-based), and converts to the appropriate version.

**4:3 OUTPUT:** This setting is effective only when you set "TV TYPE" to "16:9." Select "FULL" when you can change the aspect ratio on your TV.



## CUSTOM SETUP

**AUTO STANDBY:** Sets the Auto Standby setting on or off. If you select "ON," the player enters standby mode when left in stop mode for more than 30 minutes.

**AUTO PLAY:** When set to "ON," the player automatically starts playback when the player is turned on by a timer (not supplied).

**PAUSE MODE:** Selects the picture in pause mode. Normally select "AUTO." When the picture is output in high resolution, set to "FRAME." (DVD only)

**TRACK SELECTION:** Gives the sound track which contains the highest number of channels priority when you play a DVD VIDEO on which multiple audio formats (PCM, MPEG audio, DTS, or Dolby Digital format) are recorded. If you select "AUTO," priority is given. (DVD VIDEO only)

**IMAGE QUALITY:** Selects the priority display to either high quality image or quick speed. (Photo files only)

**MULTI-DISC RESUME:** Switches the Multi-disc Resume setting on or off. Resume playback can be stored in memory for up to 6 different DVD VIDEOS/VIDEO CDs. If you start the settings again, the resume point is cleared. (DVD VIDEO/VIDEO CD only)

**DivX<sup>®</sup> VOD:** Displays the registration code and deactivation code for this player. For more information, go to <http://www.divx.com/vod> on the Internet. You can play DivX video files as many times as the preset number. The following occurrences are counted:

- when the disc tray is opened.
- when another file is played.
- when a USB device is removed.
- when the "DISC/USB" or "MEDIA" setting is changed.

– when the player is turned off(including the Auto Standby function).

## **AUDIO SETUP**

**AUDIO DRC (Dynamic Range Control)\*3:** Set according to the surrounding environment. Set to “TV MODE” when the smallest sounds are indiscernible, or set to “WIDE RANGE” when the listening environment is good, for example, in a home movie theatre.

**DOWNMIX\*3:** Switches the method for mixing down to 2 channels when you play a DVD which has rear sound elements (channels), or is recorded in Dolby Digital format.

Normally select “DOLBY SURROUND.”

**DIGITAL OUT:** Selects if audio signals are output via the DIGITAL OUT (COAXIAL)/HDMI OUT jack. When you select “ON,” set also the following “DOLBY DIGITAL,” “MPEG,” “DTS,” or “48kHz/96kHz PCM.”

**DOLBY DIGITAL:** Selects the type of Dolby Digital signal. Set to “D-PCM” when the player is connected to an audio component without a built-in Dolby Digital decoder.

**MPEG:** Selects the type of MPEG audio signal. Set to “MPEG” when the player is connected to an audio component with a built-in MPEG decoder.

**DTS:** Selects the type of DTS audio signal. Set to “ON” when you play a DVD VIDEO with DTS sound tracks. Do not set to “ON” when you connect the player to an audio component without a DTS decoder.

**48kHz/96kHz PCM:** Selects the sampling frequency of the digital audio output signal. (DVD VIDEO only)

## **HDMI SETUP**

You can adjust items related to HDMI connection.

**HDMI RESOLUTION\*2:** Selects the type of video signal output from the HDMI OUT jack. If “AUTO (1920×1080p)” (default) is selected, the player outputs video signals of the highest resolution acceptable for your TV. If the picture is not clear, unnatural or otherwise not to your satisfaction, try another option that suits the disc, TV/projector, etc. For details, refer also to the instruction manual supplied with the TV/projector, etc.

You cannot select this when “JPEG RESOLUTION” is set to “PhotoTV HD.”

**JPEG RESOLUTION:** Selects the type of JPEG resolution so that you can enjoy a high picture quality via HDMI connection.

This setting is effective only when you set “TV TYPE” to “16:9.” You cannot select this when “HDMI RESOLUTION” is set to “720×480/576p.” “(1920×1080i) HD  ” and “(1920×1080i) HD” are effective only when you set “HDMI RESOLUTION” to “1920×1080i.” If you set this setting to “PhotoTV HD,” “(1920×1080i) HD  ” or “(1920×1080i) HD,” the effect, rotation, and zoom functions are not available.

**YCbCr/RGB (HDMI):** Selects the type of HDMI signal output from the HDMI OUT jack. Set to “RGB” if the playback picture is distorted. You cannot select this when “JPEG RESOLUTION” is set to “PhotoTV HD.”

**AUDIO (HDMI):** Selects the type of audio signal output from the HDMI OUT jack. Set to “PCM” if you connect the player to a TV that is not compatible with DOLBY DIGITAL/DTS/MPEG signals.

**CONTROL FOR HDMI:** Switches the Control For HDMI setting on or off. Set to “ON” when you use the Control For HDMI function.

**LANGUAGE FOLLOW:** Switches the languages of the DVD player to the same as the current TV OSD language. You cannot select this when “CONTROL FOR HDMI” is set to “OFF.”

\*1 When you select “OTHERS →,” select and enter a language code. See “LANGUAGE CODE LIST” at the end of this manual.

\*2 If the picture does not appear normally or goes blank, reset the setting. Press  to turn off, enter “369,” and then press  to turn on the player again.

\*3 This function affects the output from the following jacks:  
– AUDIO OUT L/R jacks.  
– DIGITAL OUT (COAXIAL)/HDMI OUT jack only when “DOLBY DIGITAL” is set to “D-PCM.”

---

## Information

---

### Troubleshooting

---

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

---

#### The power is not turned on.

- Check that the power cord (mains lead) is connected securely.

---

#### There is no picture/picture noise appears.

- Re-connect the connecting cord securely.
- The connecting cords are damaged.
- Check the connection to your TV and switch the input selector on your TV so that the signal from the player appears on the TV screen.
- Change the colour system of the player (page 5).
- The disc is dirty or flawed.
- Press **I/⏻** to turn off the player, and enter "369" using the number buttons on the remote, then press **I/⏻** to turn on the player again.

---

#### There is no sound.

- Re-connect the connecting cord securely.
- The connecting cord is damaged.
- The player is in pause mode or in Slow-motion Play mode.
- The player is in fast forward or fast reverse mode.

---

#### The remote does not function.

- The batteries in the remote are weak.
- The remote is not pointed at the remote sensor  on the player.
- When you operate the player by pressing buttons on the remote in sequence, press the buttons within 5 seconds of each other.

---

#### The disc does not play.

- The disc is turned over.  
Insert the disc with the playback side facing down.
- The disc is skewed.
- The player cannot play certain discs.
- The region code on the DVD does not match the player.
- Moisture has condensed inside the player.

- The player cannot play a recorded disc that is not correctly finalized.

---

#### The player does not operate properly.

- When static electricity, etc., causes the player to operate abnormally, unplug the player.

---

#### The disc tray does not open and "LOCK" (LOCKED) appears on the front panel display.

- Child Lock is set (page 6).

---

#### The disc tray does not open and "E-LOCK" (TRAY LOCKED) appears on the front panel display.

- Contact your Sony dealer or local authorized Sony service facility.

---

#### "C13" appears on the front panel display.

- Clean the disc with a cleaning cloth or check its format.

---

#### "C31" appears on the front panel display.

- Re-insert the disc correctly.

---

#### There is no picture/sound when connected to the HDMI OUT jack.

- Change the "HDMI RESOLUTION" setting in "HDMI SETUP." The problem may be solved.
- The equipment connected to the HDMI OUT jack does not conform to the audio signal format, in this case set "AUDIO (HDMI)" in "HDMI SETUP" to "PCM."
- Try the following: ① Turn the player off and on again. ② Turn the connected equipment off and on again. ③ Disconnect and then connect the HDMI cord again.

---

#### The CONTROL FOR HDMI function does not work.

- Make sure that the TV's input is switched to DVD player so that the signal from the player appears on the TV screen, and "CONTROL FOR HDMI" is set to "ON."

---

#### 'BRAVIA Sync' display does not appear.

- Turn off any display of the DVD player displays. Then, try again.

---

#### Your TV automatically turns on or the TV's input is switched to the player.

- "CONTROL FOR HDMI" is set to "ON."  
Switch this function to "OFF".

---

## Display language on the screen does not switch automatically.

→ Turn off any of the DVD player's display screens, and try again.

---

## The player does not detect a USB device connected to the player.

→ The USB device is not securely connected to the player.

→ The USB device or a cord is damaged.

→ Disc mode has not been switched to USB mode.

---

## Playable file format

Video: MPEG-1 (Cyber-shot data)/MPEG-4 (simple profile)\*<sup>1</sup>/DivX

Photo: JPEG (DCF format)

Music: MP3 (except for mp3PRO)/WMA (except for WMA Pro)\*<sup>1</sup>, \*<sup>2</sup>/AAC\*<sup>1</sup>, \*<sup>2</sup>/LPCM/WAVE

\*<sup>1</sup> Files with copyright protection (Digital Right Management) cannot be played.

\*<sup>2</sup> The player will not play coded files, such as Lossless.

Supported extensions: ".avi", ".divx", ".mpg", ".mpeg", ".mp4", ".jpg", ".mp3", ".wma", ".m4a", ".wav"

Supported discs: DVD, DVD±RW/±R/±R DL, Music CD/Super VCD, CD-R/-RW

- DATA CDs recorded according to ISO 9660 Level 1/Level 2, or its extended format, Joliet.
- DATA DVDs recorded according to UDF.
- The player will play any file in the above, even if the file format differs. Playing such data may generate noise that can result in speaker damage.
- To play a complex hierarchy of folders may take some time. Create albums with no more than two hierarchies.
- Some video, photo, and music files may not play, depending on the encoding/recording condition.
- To start playback and proceed to the next or another album/file may take some time.
- The player will recognize a maximum of 200 albums and 600 files. It can recognize up to 300 music files and 300 photo files when "PHOTO (MUSIC)" is selected.
- When erasing the album, the player may erase unshown files on the list menu of ALBUM at the same time.

- The player may not play a combination of two or more video files.
- The player cannot play a video file of size more than 720 (width) × 576 (height)/2 GB.
- Depending on the file, playback may not be smooth. You are recommended to create the file at a lower bit rate.
- The player may not play back the high bit rate video file on the DATA CD smoothly. You are recommended to play back using DATA DVD.
- When playing visual data that is not supported by MPEG-4 format, only sound will be heard.

## Note about recordable media

Some recordable media cannot be played on this player due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software. The disc will not play if it has not been correctly finalized. Also some DATA discs created in Packet Write format cannot be played.

## For player that cannot play images that contain a copy protection only

Images in DVD-VR mode with CPRM (Content Protection for Recordable Media) protection may not be played.

## Note on playback operations of DVDs and VIDEO CDs

Some playback operations of DVDs and VIDEO CDs may be intentionally set by software producers. Since this player plays DVDs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the operating instructions supplied with the DVDs or VIDEO CDs.

## Note on discs

This unit is designed to playback discs that conform to the Compact Disc (CD) standard. DualDiscs and some music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard. Therefore, these discs may not be compatible with this unit.

---

## Specifications

### System

Laser: Semiconductor laser

### Inputs/Outputs

- AUDIO OUT (L/R): Phono jack
- DIGITAL OUT (COAXIAL): Phono jack
- COMPONENT VIDEO OUT(Y, P<sub>B</sub>, P<sub>R</sub>): Phono jack
- VIDEO OUT: Phono jack
- HDMI OUT: HDMI 19 pin-Standard Connector
- USB: USB jack Type A, maximum current 500 mA (For connecting USB device)

### General

- Power requirements: 110-240 V AC, 50/60 Hz
- Power consumption: 12 W
- Dimensions (approx.): 320 × 38 × 209 mm (width/height/depth) incl. projecting parts
- Mass (approx.): 1.2 kg
- Operating temperature: 5 °C to 35 °C
- Operating humidity: 25 % to 80 %

### Supplied accessories

- Audio/Video cord (phono plug × 3 ↔ phono plug × 3) (1)
- Remote commander (remote) (1)
- R6 (size AA) batteries (2)

Specifications and design are subject to change without notice.





# LANGUAGE CODE LIST

Page 8

Code Language	Code Language	Code Language	Code Language
1027 Afar	1183 Irish	1347 Maori	1507 Samoan
1028 Abkhazian	1186 Scots Gaelic	1349 Macedonian	1508 Shona
1032 Afrikaans	1194 Galician	1350 Malayalam	1509 Somali
1039 Amharic	1196 Guarani	1352 Mongolian	1511 Albanian
1044 Arabic	1203 Gujarati	1353 Moldavian	1512 Serbian
1045 Assamese	1209 Hausa	1356 Marathi	1513 Siswati
1051 Aymara	1217 Hindi	1357 Malay	1514 Sesotho
1052 Azerbaijani	1226 Croatian	1358 Maltese	1515 Sundanese
1053 Bashkir	1229 Hungarian	1363 Burmese	1516 Swedish
1057 Byelorussian	1233 Armenian	1365 Nauru	1517 Swahili
1059 Bulgarian	1235 Interlingua	1369 Nepali	1521 Tamil
1060 Bihari	1239 Interlingue	1376 Dutch	1525 Telugu
1061 Bislama	1245 Inupiak	1379 Norwegian	1527 Tajik
1066 Bengali;	1248 Indonesian	1393 Occitan	1528 Thai
Bangla	1253 Icelandic	1403 (Afan)Oromo	1529 Tigrinya
1067 Tibetan	1254 Italian	1408 Oriya	1531 Turkmen
1070 Breton	1257 Hebrew	1417 Punjabi	1532 Tagalog
1079 Catalan	1261 Japanese	1428 Polish	1534 Setswana
1093 Corsican	1269 Yiddish	1435 Pashto;	1535 Tonga
1097 Czech	1283 Javanese	Pushto	1538 Turkish
1103 Welsh	1287 Georgian	1436 Portuguese	1539 Tsonga
1105 Danish	1297 Kazakh	1463 Quechua	1540 Tatar
1109 German	1298 Greenlandic	1481 Rhaeto-	1543 Twi
1130 Bhutani	1299 Cambodian	Romance	1557 Ukrainian
1142 Greek	1300 Kannada	1482 Kirundi	1564 Urdu
1144 English	1301 Korean	1483 Romanian	1572 Uzbek
1145 Esperanto	1305 Kashmiri	1489 Russian	1581 Vietnamese
1149 Spanish	1307 Kurdish	1491 Kinyarwanda	1587 Volapük
1150 Estonian	1311 Kirghiz	1495 Sanskrit	1613 Wolof
1151 Basque	1313 Latin	1498 Sindhi	1632 Xhosa
1157 Persian	1326 Lingala	1501 Sangho	1665 Yoruba
1165 Finnish	1327 Laothian	1502 Serbo-	1684 Chinese
1166 Fiji	1332 Lithuanian	Croatian	1697 Zulu
1171 Faroese	1334 Latvian;	1503 Singhalese	
1174 French	Lettish	1505 Slovak	
1181 Frisian	1345 Malagasy	1506 Slovenian	1703 Not specified

ISO 639: 1988 (E/F) standard

# PARENTAL CONTROL AREA CODE LIST

Page 3

Code Area	Code Area	Code Area	Code Area
2044 Argentina	2165 Finland	2362 Mexico	2149 Spain
2047 Australia	2174 France	2376 Netherlands	2499 Sweden
2046 Austria	2109 Germany	2390 New Zealand	2086 Switzerland
2057 Belgium	2248 India	2379 Norway	2528 Thailand
2070 Brazil	2238 Indonesia	2427 Pakistan	2184 United Kingdom
2079 Canada	2254 Italy	2424 Philippines	
2090 Chile	2276 Japan	2436 Portugal	
2092 China	2304 Korea	2489 Russia	
2115 Denmark	2363 Malaysia	2501 Singapore	



\* | - 4 1 6 9 9 5 8 6 2 1 \*

4-169-958-62(1)

Printed in China

<http://www.sony.net/>