

CD/DVD Player

Reference Guide _____ GB

دليل المرجع _____ AR

DVP-SR510P/DVP-SR700HP



WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

The mains lead must be changed only at a qualified service shop.

Batteries or batteries installed apparatus shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD player is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.

Precautions

- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off.
- Do not install this player in a confined space, such as a bookshelf or similar unit.
- Install the player so that the AC power cord (mains lead) can be unplugged from the wall socket immediately in the event of trouble.
- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.

Lightning

For added protection for this set during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it

from the wall outlet. This will prevent damage to the set due to lightning and power-line surges.


Note about the discs

Do not use the following discs:

- A disc that has a non-standard shape (e.g., card, heart).
- A disc with a label or sticker on it.

Region code

Your player has a region code printed on the back of the unit and only will play commercial DVDs (playback only) labelled with identical region codes. This system is used to protect copyrights.

Commercial DVDs labelled  will also play on this player.

Depending on the commercial DVD, there may be no region code indication, even though playing the commercial DVD is prohibited by area restrictions.



Region code

Copyrights

- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- Manufactured under license under U.S. Patent #: 5,451,942 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks and DTS Digital Unit and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.
- “DVD+RW,” “DVD-RW,” “DVD+R,” “DVD+R DL,” “DVD-R,” “DVD VIDEO,” and “CD” logos are trademarks.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- This DVD player incorporates High-Definition Multimedia Interface (HDMI™) technology. HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. (DVP-SR700HP only)

- DivX®, DivX Certified® and associated logos are registered trademarks of DivX, Inc. and are used under license.
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER FOR DECODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD (“MPEG-4 VIDEO”) THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

About this manual

- “DVD” may be used as a general term for commercial DVDs, DVD+RWs/DVD+Rs/DVD+R DLs (+VR mode) and DVD-RWs/DVD-Rs/DVD-R DLs (VR mode, video mode).
- The “HDMI,” “BRAVIA Sync” and “PhotoTV HD” logos on the front cover apply to the DVP-SR700HP only.


Playback

Control Menu display

Use the Control Menu to select a function and to view related information.

Press DISPLAY.

To change the Control Menu display, press DISPLAY again.

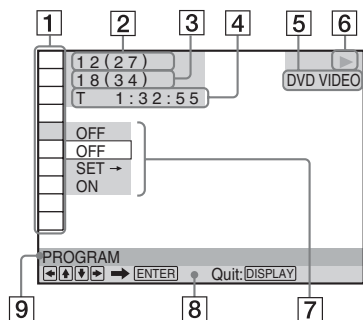

- 1 Control Menu items
- 2 Currently playing title/Total number of titles
- 3 Currently playing chapter/Total number of chapters
- 4 Playing time
- 5 Selected media type
- 6 Playback status
- 7 Selected item icon/menu options
- 8 Operation message
- 9 Selected Control Menu item

Menu list

Item	Item Name, Function
	TITLE/SCENE/TRACK
	CHAPTER/INDEX
	TRACK

Selects the title, scene, track, chapter, or index to be played.

TIME/TEXT

Checks the elapsed time and the remaining playback time.
Input the time code for picture and music search (DVD and DivX video files only).

DISC/USB

Selects either "USB" or "DISC" to be played.

REC TO USB

Rips a CD, or copies photo, music and video files to a USB device (page 7).

ORIGINAL/PLAY LIST

Selects the type of title (DVD-VR mode) to be played: ORIGINAL, or edited PLAY LIST.

PROGRAM*^{1, *2}

Selects the title, chapter, or track to play in the order you want.

- 1 Select "SET →," then press ENTER and select the title (T), chapter (C), or track (T) you want to programme, and press ENTER.
- 2 Repeat selecting the title, chapter, or track.
- 3 Press .

SHUFFLE*^{1, *2}

Plays the title, chapter or track in random order.

REPEAT*^{1, *2}

Plays all titles/tracks/albums or a single title/chapter/track/album/file repeatedly.

A-B REPEAT*^{1, *2}

Specifies the parts you want to play repeatedly.

- 1 During playback, select "SET →," then press ENTER.
The "A-B REPEAT" setting bar appears.
- 2 When you find the starting point (point A), press ENTER.
- 3 When you reach the ending point (point B), press ENTER again.





PARENTAL CONTROL

Set to prohibit playback on this player.
ON →: Sets the playback restrictions so that the player will not play inappropriate discs (Custom Parental Control).
PLAYER →: Playback of some DVD VIDEOS can be limited according to a predetermined level such as the age of the users. Scenes may be blocked or replaced with different scenes (Parental Control).
PASSWORD →: Enter a 4-digit password using the number buttons. Also use this menu to change the password.

OFF →: Turns off the Custom Parental Control function.

Parental Control (limited playback)

You can set a playback limitation level.

- 1 Select "PLAYER →," then press ENTER.
Enter or re-enter your 4-digit password, then press ENTER.
- 2 Press  to select "STANDARD," then press ENTER.
Press  to select an area, then press ENTER.
When you select "OTHERS →," select and enter a standard code. See "PARENTAL CONTROL AREA CODE LIST" at the end of this manual.
- 3 Press  to select "LEVEL," then press ENTER.
Press  to select the level, then press ENTER.
Parental Control setting is complete.
The lower the value, the stricter the limitation.
To turn off the Parental Control function, set "LEVEL" to "OFF."

If you forget your password, enter "199703" in the password box, press ENTER, and then enter a new 4-digit password.


SETUP

QUICK: Use Quick Setup to choose the desired language of the on-screen display, the aspect ratio of the TV and the audio output signal.

CUSTOM: In addition to the Quick Setup setting, you can adjust various other settings (page 8).

RESET: Returns the settings in "SETUP" to the default setting.

ZOOM*¹

Magnifies the image up to four times the original size, scroll using .

ANGLE

Changes the angle.

CUSTOM PICTURE MODE

Selects the picture quality that best suits the programme you are watching.

STANDARD: Displays a standard picture.

DYNAMIC 1: Produces a bold dynamic picture by increasing the picture contrast and the colour intensity.

DYNAMIC 2: Produces a more dynamic picture than DYNAMIC 1 by further increasing the picture contrast and colour intensity.

CINEMA 1: Enhances details in dark areas by increasing the black level.

CINEMA 2: White colours become brighter and black colours become richer, and the colour contrast is increased.

MEMORY →: Adjusts the picture in greater detail.

SHARPNESS

Exaggerates the outline of the image to produce a sharper picture.

OFF: Cancels this option.

1: Enhances the outline.

2: Enhances the outline more than 1.


AV SYNC*³


Adjust the delay between the picture and sound. This function is not effective when:

- you use the DIGITAL OUT (COAXIAL) jack, and set "DOLBY DIGITAL," "MPEG," or "DTS" in "AUDIO SETUP" to "DOLBY DIGITAL," "MPEG," or "ON" respectively (page 9).
- you connect a Dolby Digital or DTS-compliant device via the HDMI OUT jack, and set "DOLBY DIGITAL," "MPEG," or "DTS" in "AUDIO SETUP" to "DOLBY DIGITAL," "MPEG," or "ON" respectively (page 9).

1 Select "SET →," then press ENTER.

The "AV SYNC" adjustment bar appears.

2 Press  repeatedly to adjust the delay.

Each time you press , the delay is adjusted by 10 milliseconds.

3 Press ENTER.

The selected setting takes effect.

To reset the "AV SYNC" setting, press CLEAR in step 2.

TVS (TV Virtual Surround)

Selects surround sound effect when connecting a stereo TV or 2 front speakers. This only works when playing a multichannel Dolby audio sound track. Furthermore, if the player is set up to output the signal from the DIGITAL OUT (COAXIAL)/HDMI OUT jack, the surround effect will only be heard when "DOLBY DIGITAL" is set to "D-PCM" and "MPEG" is set to "PCM" in "AUDIO SETUP" (page 9).

OFF: Cancels the setting.

**TVS DYNAMIC THEATER/
TVS DYNAMIC/**

TVS WIDE: These modes are effective when the distance between the front L and R speakers is short, such as with built-in speakers on a stereo TV.

TVS NIGHT: This feature is useful when you want to hear the dialogue and enjoy the surround sound effects of “TVS WIDE” at low volume.

TVS STANDARD: Use this setting when you want to use TVS with 2 separate speakers.

*1 To return to normal play, select “OFF” or press CLEAR.

*2 The play mode is cancelled when:
– you open the disc tray.
– you turn off the player.

*3 DVP-SR700HP only

◆Items for DATA discs or USB

Item	Item Name, Function
------	---------------------

	ALBUM
--	--------------

Selects the album that contains music and photo files to be played.

	FILE
--	-------------

Selects the photo file to be played.

	ALBUM
--	--------------

Selects the album that contains video file to be played.

	FILE
--	-------------

Selects the video file to be played.

	DATE
--	-------------

Displays the date the picture was taken by a digital camera.

	INTERVAL *1
--	--------------------

Specifies the duration for which the slides are displayed on the screen.

	EFFECT *1
--	------------------

Selects the effects to be used for changing slides during a slide show.

MODE 1: The images randomly cycle through the effects.

MODE 2: The image sweeps in from top left to bottom right.

MODE 3: The image sweeps in from top to bottom.

MODE 4: The image sweeps in from left to right.

MODE 5: The image stretches out from the centre of the screen.

OFF: Turns off this function.

MEDIA

Selects the media type you want to play.

VIDEO: Plays video files.

PHOTO (MUSIC): Plays photo and music files as a slide show. You can view a slideshow with sound when music and photo files are placed in the same album. If the playing time of either music or photos is longer, the longer one continues without sound or image.

PHOTO (BGM)*2: Plays photo files with the player’s internal background sound. To choose the melody of the background sound, press AUDIO repeatedly while viewing the image.

PHOTO*3: Plays photo files.

MUSIC: Plays music files. Press SUBTITLE while playing music files that contain unsynchronized lyric information. The player supports MP3 ID3 Lyrics only.



*1 Depending on the file, this function may not be possible.

*2 DVP-SR700HP only

*3 DVP-SR510P only

To change the colour system





If the on-screen menu of the player does not appear on the connected TV, switch the player’s colour system to match the colour system of the TV (NTSC or PAL).

First turn off the player by pressing . Next press DISPLAY, enter “0” using the number button, and then press  on the remote. The player turns back on, and the name of the colour system will appear on the front panel display.

To play VIDEO CDs with PBC functions

When you start playing a VIDEO CD with PBC (Playback control) functions, the menu for your selection appears.

To play without using PBC

Press  or the number buttons while the player is stopped to select a track, then press  or ENTER. To return to PBC playback, press  twice, then press .

To lock the disc tray (Child Lock)

You can lock the disc tray to prevent it being opened by mistake.

When the player is in standby mode, press in order, **RETURN**, **ENTER**, and **⏻** on the remote.

The player turns on and “**L O C K**” (LOCKED) appears on the front panel display. The **▲** button on the player does not work while the Child Lock is set.

To unlock the disc tray

When the player is in standby mode, press in order, **RETURN**, **ENTER**, and **⏻** on the remote again.

Controlling TVs with the remote

You can control the sound level, input source, and power switch of your Sony TV with the supplied remote.

If your TV is listed in the table below, set the appropriate manufacturer's code.

When you replace the batteries of the remote, set the appropriate code number again.

- 1 While holding down TV **⏻**, press the number buttons to select your TV's manufacturer's code.
- 2 Release TV **⏻**.

Code numbers of controllable TVs

Sony	01 (default)
Hitachi	24
JVC	33
LG/Goldstar	76
Panasonic	17, 49
Philips	06, 08, 72
Samsung	71
Sharp	29
Toshiba	38

Viewing a high quality slide show (PhotoTV HD)

(DVP-SR700HP only)

If you have a Sony TV that is compatible with “PhotoTV HD,” you can enjoy the best quality images. “PhotoTV HD” is activated when the player is connected to a TV by an HDMI cord and “JPEG RESOLUTION” in “HDMI SETUP” is set to “PhotoTV HD” (page 9).

About the CONTROL FOR HDMI functions

(DVP-SR700HP only)

You can control the player by connecting to a TV compatible with the CONTROL FOR HDMI function with an HDMI cord (not supplied).

To enjoy the features

- One-Touch Play
With one touch of the **▶** button on the remote, the player and your TV automatically turn on and the TV's input is switched to the player. Playback starts automatically.
The TV's input will also switch to the player automatically, in the following cases:
 - You press the **▶**, **TOP MENU**, **MENU**, or **DISPLAY** button on the remote.
Note that these buttons are not effective when you play audio CD or music files in “MUSIC” mode.
 - If a disc with auto play function is loaded.
 - If you push the disc tray to close.
- System-Power Off
When you turn the TV off by using the **⏻** button on the TV's remote, the components compatible with CONTROL FOR HDMI function turn off automatically.

About 'BRAVIA Sync' display

You can control the player by connecting to a Sony TV (compatible with 'BRAVIA Sync' only) and selecting the SYNC MENU button on the TV's remote/option menu.

Some TVs may have other buttons available to turn on the 'BRAVIA Sync' display, or require setting on the TV. Depending on the TV, the setting display may appear before the 'BRAVIA Sync' display. Refer also to the operating instructions supplied with the TV. The 'BRAVIA Sync' display will show different items depending on the disc type.



(Example: 'BRAVIA Sync' display when playing a DVD VIDEO)

Select an item using **←/↑/↓/→** and then press **ENTER**.

- When playing a DVD VIDEO: Displays MENU and TOP MENU.
- When playing in DVD-VR mode: Displays ◀◀, ▶▶, and chapter number.
- When playing a CD, VIDEO CD or Super VCD (without PBC): Displays ◀◀, ▶▶, and track number.
- When playing a VIDEO CD or Super VCD (with PBC): Displays ◀◀, ▶▶ and scene number. When the disc's menu appears, you can select an item by pressing ↑/↓.
- When playing video, photo, and music files: Displays MENU and PICT. NAVI (Picture Navigation).

To change the display

Press the SYNC MENU button on the TV's remote repeatedly to turn on or change the display. 'BRAVIA Sync' display and Control Menu are displayed alternately.


To turn off the display

Press the RETURN or SYNC MENU button on the TV's remote repeatedly.

Ripping a CD or copying data files to a USB device

You can rip a CD or copy* data files to a USB device. You cannot rip a CD or copy data files while playing back a disc.

* Depending on the disc, copying may not be possible.

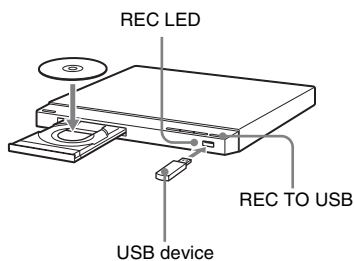

- 1 Insert a disc into the disc tray, and then connect a USB device to the USB jack.
- 2 Press DISPLAY.
The Control Menu display appears.
- 3 Press ↑/↓ to select "REC TO USB."
- 4 Press ↑/↓ to select the items to copy, and press ENTER.
When ripping a CD, select "DISC" or "TRACK."
When copying data files, select "DISC."

"ALBUM," "TRACK," or "FILE."

If you select "DISC," go to step 6.

- 5 Press ←/↑/↓/→ to select albums, tracks or files, and press ENTER.
When selecting albums, tracks or files, the REC LED indicator flashes.
The number of selected albums, tracks or files is displayed in the front panel display in recording standby mode.
- 6 Press ▶.
When ripping a CD or copying data files, the REC LED indicator stays lit.
Recording is started. Recording progress is displayed. After recording finishes, "Completed" is displayed.

To record simply

You can rip a CD or copy data files simply by pressing the REC TO USB button. When pressing the REC TO USB button, the display appears. Press ▶ according to the display. Recording is started.

To erase "ALBUM," "TRACK," or "FILE"

Press CLEAR. Follow the displayed message.

To remove the USB device

Stop playback, ripping a CD, or copying/erasing data files, and then disconnect the USB device from the USB jack. Do not remove the USB device during operation, as data corruption may occur.


To change LUN

For some devices, LUN (Logical Unit Number) may appear. To change the LUN or original storage, press ||▶ ●➡ when the list of albums or tracks is displayed.

About supported USB devices

- This player supports USB Mass Storage Class only.
- This player supports FAT format USB device only.
- Some USB devices may not work with this player.

CUSTOM Menu

You can adjust various settings. Press DISPLAY when the player is in stop mode, select  (SETUP), and then select "CUSTOM." The CUSTOM menu appears.

Menu list

Item	Item Name, Function
------	---------------------

A	LANGUAGE SETUP
---	----------------

OSD (On-Screen Display): Switches the display language on the screen.

MENU*¹: Selects the desired language for the disc's menu (DVD VIDEO only).

AUDIO*¹: Switches the language of the sound track. When you select "ORIGINAL," the language given priority in the disc is selected. (DVD VIDEO only)

SUBTITLE*¹: Switches the language of the subtitle recorded on the DVD VIDEO. When you select "AUDIO FOLLOW," the language for the subtitles changes according to the language you selected for the sound track. (DVD VIDEO only)

P	SCREEN SETUP
---	--------------

TV TYPE: Selects the aspect ratio of the connected TV.

16:9




4:3 LETTER BOX



4:3 PAN SCAN



COLOR SYSTEM (VIDEO CD): Selects the colour system when you play a VIDEO CD. If your TV is the DUAL system, select "AUTO."

SCREEN SAVER: When set to "ON," the screen saver appears when the player is in pause or stop mode for 15 minutes. Press  to turn off the screen saver.

BACKGROUND: Selects the background colour or picture on the TV screen. If you set "JACKET PICTURE," even though the disc does not contain a jacket picture, the "GRAPHICS" picture appears.

PROGRESSIVE (COMPONENT OUT ONLY)*²: Sets to "ON" if your TV aspects progressive format signals.

MODE (PROGRESSIVE): This setting is effective only when you set "PROGRESSIVE (COMPONENT OUT ONLY)" to "ON." If you select "AUTO," the player detects the format (film-based or video-based), and converts to the appropriate version.

4:3 OUTPUT: This setting is effective only when you set "TV TYPE" to "16:9." Select "FULL" when you can change the aspect ratio on your TV.



CUSTOM SETUP

AUTO STANDBY: Sets the Auto Standby setting on or off. If you select "ON," the player enters standby mode when left in stop mode for more than 30 minutes.

AUTO PLAY: When set to "ON," the player automatically starts playback when the player is turned on by a timer (not supplied).

PAUSE MODE: Selects the picture in pause mode. Normally select "AUTO." When the picture is output in high resolution, set to "FRAME." (DVD only)

TRACK SELECTION: Gives the sound track which contains the highest number of channels priority when you play a DVD VIDEO on which multiple audio formats (PCM, MPEG audio, DTS, or Dolby Digital format) are recorded. If you select "AUTO," priority is given. (DVD VIDEO only)

IMAGE QUALITY*³: Selects the priority display to either high quality image or quick speed. (Photo files only)

MULTI-DISC RESUME: Switches the Multi-disc Resume setting on or off. Resume playback can be stored in memory for up to 6 different DVD VIDEOS/VIDEO CDs. If you start the settings again, the resume point is cleared. (DVD VIDEO/VIDEO CD only)

DivX® VOD: Displays the registration code and deactivation code for this player. For more information, go to <http://www.divx.com/vod> on the Internet. You can play DivX video files as many times as the preset number. The following occurrences are counted:

- when the disc tray is opened.
- when another file is played.
- when a USB device is removed.
- when the "DISC/USB" or "MEDIA" setting is changed.

– when the player is turned off(including the Auto Standby function).

AUDIO SETUP

AUDIO DRC (Dynamic Range Control)*4: Set according to the surrounding environment. Set to “TV MODE” when the smallest sounds are indiscernible, or set to “WIDE RANGE” when the listening environment is good, for example, in a home movie theatre.

DOWNMIX*4: Switches the method for mixing down to 2 channels when you play a DVD which has rear sound elements (channels), or is recorded in Dolby Digital format.

Normally select “DOLBY SURROUND.”

DIGITAL OUT: Selects if audio signals are output via the DIGITAL OUT (COAXIAL)/HDMI OUT jack. When you select “ON,” set also the following “DOLBY DIGITAL,” “MPEG,” “DTS,” or “48kHz/96kHz PCM.”

DOLBY DIGITAL: Selects the type of Dolby Digital signal. Set to “D-PCM” when the player is connected to an audio component without a built-in Dolby Digital decoder.

MPEG: Selects the type of MPEG audio signal. Set to “MPEG” when the player is connected to an audio component with a built-in MPEG decoder.

DTS: Selects the type of DTS audio signal. Set to “ON” when you play a DVD VIDEO with DTS sound tracks. Do not set to “ON” when you connect the player to an audio component without a DTS decoder.

48kHz/96kHz PCM: Selects the sampling frequency of the digital audio output signal. (DVD VIDEO only)

HDMI SETUP*3

You can adjust items related to HDMI connection.

HDMI RESOLUTION*2: Selects the type of video signal output from the HDMI OUT jack. If “AUTO (1920×1080p)” (default) is selected, the player outputs video signals of the highest resolution acceptable for your TV. If the picture is not clear, unnatural or otherwise not to your satisfaction, try another option that suits the disc, TV/projector, etc. For details, refer also to the instruction manual supplied with the TV/projector, etc.

You cannot select this when “JPEG RESOLUTION” is set to “PhotoTV HD.”

JPEG RESOLUTION: Selects the type of JPEG resolution so that you can enjoy a high picture quality via HDMI connection.

This setting is effective only when you set “TV TYPE” to “16:9.” You cannot select this when “HDMI RESOLUTION” is set to “720×480/576p.” “(1920×1080i) HD □” and “(1920×1080i) HD” are effective only when you set “HDMI RESOLUTION” to “1920×1080i.” If you set this setting to “PhotoTV HD,” “(1920×1080i) HD □” or “(1920×1080i) HD,” the effect, rotation, and zoom functions are not available.



YCbCr/RGB (HDMI): Selects the type of HDMI signal output from the HDMI OUT jack. Set to “RGB” if the playback picture is distorted. You cannot select this when “JPEG RESOLUTION” is set to “PhotoTV HD.”

AUDIO (HDMI): Selects the type of audio signal output from the HDMI OUT jack. Set to “PCM” if you connect the player to a TV that is not compatible with DOLBY DIGITAL/DTS/MPEG signals.

CONTROL FOR HDMI: Switches the Control For HDMI setting on or off. Set to “ON” when you use the Control For HDMI function.

LANGUAGE FOLLOW: Switches the languages of the DVD player to the same as the current TV OSD language. You cannot select this when “CONTROL FOR HDMI” is set to “OFF.”

*1 When you select “OTHERS →,” select and enter a language code. See “LANGUAGE CODE LIST” at the end of this manual.

*2 If the picture does not appear normally or goes blank, reset the setting. Press  to turn off, enter “369,” and then press  to turn on the player again.

*3 DVP-SR700HP only

*4 This function affects the output from the following jacks:
– AUDIO OUT L/R jacks.
– DIGITAL OUT (COAXIAL)/HDMI OUT jack only when “DOLBY DIGITAL” is set to “D-PCM.”

Information

Troubleshooting

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

The power is not turned on.

- Check that the power cord (mains lead) is connected securely.


There is no picture/picture noise appears.

- Re-connect the connecting cord securely.
- The connecting cords are damaged.
- Check the connection to your TV and switch the input selector on your TV so that the signal from the player appears on the TV screen.
- Change the colour system of the player (page 5).
- The disc is dirty or flawed.
- Press **I/⏻** to turn off the player, and enter “369” using the number buttons on the remote, then press **I/⏻** to turn on the player again.

There is no sound.

- Re-connect the connecting cord securely.
- The connecting cord is damaged.
- The player is in pause mode or in Slow-motion Play mode.
- The player is in fast forward or fast reverse mode.

The remote does not function.

- The batteries in the remote are weak.
- The remote is not pointed at the remote sensor  on the player.
- When you operate the player by pressing buttons on the remote in sequence, press the buttons within 5 seconds of each other.

The disc does not play.

- The disc is turned over.
Insert the disc with the playback side facing down.
- The disc is skewed.
- The player cannot play certain discs.
- The region code on the DVD does not match the player.
- Moisture has condensed inside the player.

- The player cannot play a recorded disc that is not correctly finalized.

The player does not operate properly.

- When static electricity, etc., causes the player to operate abnormally, unplug the player.

The disc tray does not open and “LOCK” (LOCKED) appears on the front panel display.

- Child Lock is set (page 6).

The disc tray does not open and “E-LOCK” (TRAY LOCKED) appears on the front panel display.

- Contact your Sony dealer or local authorized Sony service facility.

“C13” appears on the front panel display.

- Clean the disc with a cleaning cloth or check its format.

“C31” appears on the front panel display.

- Re-insert the disc correctly.

There is no picture/sound when connected to the HDMI OUT jack. (DVP-SR700HP only)

- Change the “HDMI RESOLUTION” setting in “HDMI SETUP.” The problem may be solved.
- The equipment connected to the HDMI OUT jack does not conform to the audio signal format, in this case set “AUDIO (HDMI)” in “HDMI SETUP” to “PCM.”
- Try the following: ① Turn the player off and on again. ② Turn the connected equipment off and on again. ③ Disconnect and then connect the HDMI cord again.

The CONTROL FOR HDMI function does not work. (DVP-SR700HP only)

- Make sure that the TV’s input is switched to DVD player so that the signal from the player appears on the TV screen, and “CONTROL FOR HDMI” is set to “ON.”

‘BRAVIA Sync’ display does not appear. (DVP-SR700HP only)

- Turn off any display of the DVD player displays. Then, try again.

Your TV automatically turns on or the TV's input is switched to the player. (DVP-SR700HP only)

- "CONTROL FOR HDMI" is set to "ON."
Switch this function to "OFF".

Display language on the screen does not switch automatically. (DVP-SR700HP only)

- Turn off any of the DVD player's display screens, and try again.

The player does not detect a USB device connected to the player.

- The USB device is not securely connected to the player.
→ The USB device or a cord is damaged.
→ Disc mode has not been switched to USB mode.

Playable file format

Video: MPEG-1 (Cyber-shot data)/MPEG-4 (simple profile)*¹/DivX

Photo: JPEG (DCF format)

Music: MP3 (except for mp3PRO)/WMA (except for WMA Pro)*¹, *²/AAC*¹, *²/LPCM/WAVE

*¹ Files with copyright protection (Digital Right Management) cannot be played.

*² The player will not play coded files, such as Lossless.

Supported extensions: ".avi", ".divx", ".mpg", ".mpeg", ".mp4", ".jpg", ".mp3", ".wma", ".m4a", ".wav"

Supported discs: DVD, DVD±RW/±R/±R DL, Music CD/Super VCD, CD-R/-RW

- DATA CDs recorded according to ISO 9660 Level 1/Level 2, or its extended format, Joliet.
- DATA DVDs recorded according to UDF.
- The player will play any file in the above, even if the file format differs. Playing such data may generate noise that can result in speaker damage.
- To play a complex hierarchy of folders may take some time. Create albums with no more than two hierarchies.
- Some video, photo, and music files may not play, depending on the encoding/recording condition.

- To start playback and proceed to the next or another album/file may take some time.
- The player will recognize a maximum of 200 albums and 600 files. It can recognize up to 300 music files and 300 photo files when "PHOTO (MUSIC)" is selected.
- When erasing the album, the player may erase unshown files on the list menu of ALBUM at the same time.
- The player may not play a combination of two or more video files.
- The player cannot play a video file of size more than 720 (width) × 576 (height)/2 GB.
- Depending on the file, playback may not be smooth. You are recommended to create the file at a lower bit rate.
- The player may not play back the high bit rate video file on the DATA CD smoothly. You are recommended to play back using DATA DVD.
- When playing visual data that is not supported by MPEG-4 format, only sound will be heard.

Note about recordable media

Some recordable media cannot be played on this player due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software. The disc will not play if it has not been correctly finalized. Also some DATA discs created in Packet Write format cannot be played.

For player that cannot play images that contain a copy protection only

Images in DVD-VR mode with CPRM (Content Protection for Recordable Media) protection may not be played.

Note on playback operations of DVDs and VIDEO CDs

Some playback operations of DVDs and VIDEO CDs may be intentionally set by software producers. Since this player plays DVDs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the operating instructions supplied with the DVDs or VIDEO CDs.

Note on discs

This unit is designed to playback discs that conform to the Compact Disc (CD) standard. DualDiscs and some music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard. Therefore, these discs may not be compatible with this unit.

Specifications

System

Laser: Semiconductor laser

Inputs/Outputs

- AUDIO OUT (L/R): Phono jack
- DIGITAL OUT (COAXIAL): Phono jack
- COMPONENT VIDEO OUT (Y, Pb, Pr): Phono jack
- VIDEO OUT: Phono jack
- HDMI OUT (DVP-SR700HP only): HDMI 19 pin-Standard Connector
- USB: USB jack Type A, maximum current 500 mA (For connecting USB device)

General

- Power requirements: 110-240 V AC, 50/60 Hz
- Power consumption: 12 W
- Dimensions (approx.): 320 × 38 × 209 mm (width/height/depth) incl. projecting parts
- Mass (approx.): 1.2 kg
- Operating temperature: 5 °C to 35 °C
- Operating humidity: 25 % to 80 %

Supplied accessories

- Audio/Video cord (phono plug × 3 ↔ phono plug × 3) (1)
- Remote commander (remote) (1)
- R6 (size AA) batteries (2)
- HDMI cord (1) (DVP-SR700HP only)

Specifications and design are subject to change without notice.

LANGUAGE CODE LIST

Page 8

Code Language	Code Language	Code Language	Code Language
1027 Afar	1183 Irish	1347 Maori	1507 Samoan
1028 Abkhazian	1186 Scots Gaelic	1349 Macedonian	1508 Shona
1032 Afrikaans	1194 Galician	1350 Malayalam	1509 Somali
1039 Amharic	1196 Guarani	1352 Mongolian	1511 Albanian
1044 Arabic	1203 Gujarati	1353 Moldavian	1512 Serbian
1045 Assamese	1209 Hausa	1356 Marathi	1513 Siswati
1051 Aymara	1217 Hindi	1357 Malay	1514 Sesotho
1052 Azerbaijani	1226 Croatian	1358 Maltese	1515 Sundanese
1053 Bashkir	1229 Hungarian	1363 Burmese	1516 Swedish
1057 Byelorussian	1233 Armenian	1365 Nauru	1517 Swahili
1059 Bulgarian	1235 Interlingua	1369 Nepali	1521 Tamil
1060 Bihari	1239 Interlingue	1376 Dutch	1525 Telugu
1061 Bislama	1245 Inupiak	1379 Norwegian	1527 Tajik
1066 Bengali;	1248 Indonesian	1393 Occitan	1528 Thai
Bangla	1253 Icelandic	1403 (Afan)Oromo	1529 Tigrinya
1067 Tibetan	1254 Italian	1408 Oriya	1531 Turkmen
1070 Breton	1257 Hebrew	1417 Punjabi	1532 Tagalog
1079 Catalan	1261 Japanese	1428 Polish	1534 Setswana
1093 Corsican	1269 Yiddish	1435 Pashto;	1535 Tonga
1097 Czech	1283 Javanese	Pushto	1538 Turkish
1103 Welsh	1287 Georgian	1436 Portuguese	1539 Tsonga
1105 Danish	1297 Kazakh	1463 Quechua	1540 Tatar
1109 German	1298 Greenlandic	1481 Rhaeto-	1543 Twi
1130 Bhutani	1299 Cambodian	Romance	1557 Ukrainian
1142 Greek	1300 Kannada	1482 Kirundi	1564 Urdu
1144 English	1301 Korean	1483 Romanian	1572 Uzbek
1145 Esperanto	1305 Kashmiri	1489 Russian	1581 Vietnamese
1149 Spanish	1307 Kurdish	1491 Kinyarwanda	1587 Volapük
1150 Estonian	1311 Kirghiz	1495 Sanskrit	1613 Wolof
1151 Basque	1313 Latin	1498 Sindhi	1632 Xhosa
1157 Persian	1326 Lingala	1501 Sangho	1665 Yoruba
1165 Finnish	1327 Laothian	1502 Serbo-	1684 Chinese
1166 Fiji	1332 Lithuanian	Croatian	1697 Zulu
1171 Faroese	1334 Latvian;	1503 Singhalese	
1174 French	Lettish	1505 Slovak	
1181 Frisian	1345 Malagasy	1506 Slovenian	1703 Not specified

ISO 639: 1988 (E/F) standard

PARENTAL CONTROL AREA CODE LIST

Page 3

Code Area	Code Area	Code Area	Code Area
2044 Argentina	2165 Finland	2362 Mexico	2149 Spain
2047 Australia	2174 France	2376 Netherlands	2499 Sweden
2046 Austria	2109 Germany	2390 New Zealand	2086 Switzerland
2057 Belgium	2248 India	2379 Norway	2528 Thailand
2070 Brazil	2238 Indonesia	2427 Pakistan	2184 United Kingdom
2079 Canada	2254 Italy	2424 Philippines	
2090 Chile	2276 Japan	2436 Portugal	
2092 China	2304 Korea	2489 Russia	
2115 Denmark	2363 Malaysia	2501 Singapore	

قائمة رموز اللغات

الصفحة 8

الرمز اللغة	الرمز اللغة	الرمز اللغة	الرمز اللغة
Samoa 1507	Maori 1347	Irish 1183	Afar 1027
Shona 1508	Macedonian 1349	Scots Gaelic 1186	Abkhazian 1028
Somali 1509	Malayalam 1350	Galician 1194	Afrikaans 1032
Albanian 1511	Mongolian 1352	Guarani 1196	Amharic 1039
Serbian 1512	Moldavian 1353	Gujarati 1203	Arabic 1044
Siswati 1513	Marathi 1356	Hausa 1209	Assamese 1045
Sesotho 1514	Malay 1357	Hindi 1217	Aymara 1051
Sundanese 1515	Maltese 1358	Croatian 1226	Azerbaijani 1052
Swedish 1516	Burmese 1363	Hungarian 1229	Bashkir 1053
Swahili 1517	Nauru 1365	Armenian 1233	Byelorussian 1057
Tamil 1521	Nepali 1369	Interlingua 1235	Bulgarian 1059
Telugu 1525	Dutch 1376	Interlingue 1239	Bihari 1060
Tajik 1527	Norwegian 1379	Inupiak 1245	Bislama 1061
Thai 1528	Occitan 1393	Indonesian 1248	Bengali; 1066
Tigrinya 1529	(Afan)Oromo 1403	Icelandic 1253	Bangla
Turkmen 1531	Oriya 1408	Italian 1254	Tibetan 1067
Tagalog 1532	Punjabi 1417	Hebrew 1257	Breton 1070
Setswana 1534	Polish 1428	Japanese 1261	Catalan 1079
Tonga 1535	Pashto; 1435	Yiddish 1269	Corsican 1093
Turkish 1538	Pushto	Javanese 1283	Czech 1097
Tsonga 1539	Portuguese 1436	Georgian 1287	Welsh 1103
Tatar 1540	Quechua 1463	Kazakh 1297	Danish 1105
Twi 1543	-Rhaeto 1481	Greenlandic 1298	German 1109
Ukrainian 1557	Romance	Cambodian 1299	Bhutani 1130
Urdu 1564	Kirundi 1482	Kannada 1300	Greek 1142
Uzbek 1572	Romanian 1483	Korean 1301	English 1144
Vietnamese 1581	Russian 1489	Kashmiri 1305	Esperanto 1145
Volapük 1587	Kinyarwanda 1491	Kurdish 1307	Spanish 1149
Wolof 1613	Sanskrit 1495	Kirghiz 1311	Estonian 1150
Xhosa 1632	Sindhi 1498	Latin 1313	Basque 1151
Yoruba 1665	Sangho 1501	Lingala 1326	Persian 1157
Chinese 1684	-Serbo 1502	Laothian 1327	Finnish 1165
Zulu 1697	Croatian	Lithuanian 1332	Fiji 1166
	Singhalese 1503	Latvian; 1334	Faroese 1171
	Slovak 1505	Lettish	French 1174
غير محدد 1703	Slovenian 1506	Malagasy 1345	Frisian 1181

1988 (E/F) :ISO 639 قياسي

قائمة رموز منطقة الرقابة الأبوية

الصفحة 3

الرمز المنطقة	الرمز المنطقة	الرمز المنطقة	الرمز المنطقة
Spain 2149	Mexico 2362	Finland 2165	Argentina 2044
Sweden 2499	Netherlands 2376	France 2174	Australia 2047
Switzerland 2086	New Zealand 2390	Germany 2109	Austria 2046
Thailand 2528	Norway 2379	India 2248	Belgium 2057
United 2184	Pakistan 2427	Indonesia 2238	Brazil 2070
Kingdom	Philippines 2424	Italy 2254	Canada 2079
	Portugal 2436	Japan 2276	Chile 2090
	Russia 2489	Korea 2304	China 2092
	Singapore 2501	Malaysia 2363	Denmark 2115

ملاحظة حول الأسطوانات

هذه الوحدة مصممة لعرض الأسطوانات المتوافقة مع معيار الأسطوانة المدمجة (CD). الأسطوانات ثنائية الوجه وبعض الأسطوانات الموسيقية المشفرة بتقنيات حماية حقوق النشر لا تتطابق مع معيار الأسطوانة المدمجة (CD). ولذلك، قد لا تتوافق هذه الأسطوانات مع هذه الوحدة.

المواصفات

النظام

الليزر: ليزر شبه موصل

الإدخال/المخرجات

- AUDIO OUT (L/R): مقبس فونو
- DIGITAL OUT (COAXIAL): مقبس فونو
- COMPONENT VIDEO OUT (Y, PB, PR): مقبس فونو
- VIDEO OUT: مقبس فونو
- HDMI OUT (الطراز DVP-SR700HP فقط): موصل HDMI قياسي ذو 19 سنًا
- USB: مقبس USB من النوع أ، الحد الأقصى للتيار 500 ميلي أمبير (لتوصيل أجهزة USB)

مواصفات عامة

- متطلبات الطاقة: 110-240 فولت تيار متردد، 60/50 هرتز
- استهلاك الطاقة: 12 واط
- الأبعاد (تقريبية): 320 × 38 × 209 مم (العرض/الارتفاع/العمق) بما في ذلك الأجزاء البارزة
- الكتلة (تقريبية): 1.2 كجم
- درجة الحرارة أثناء التشغيل: 5 درجة مئوية إلى 35 درجة مئوية
- الرطوبة أثناء التشغيل: 25% إلى 80%

الملحقات المرفقة

- سلك الصوت/الفيديو (قابس فونو × 3 ↔ قابس فونو (3 × 1))
- وحدة التحكم عن بعد (1)
- بطاريتان طراز R6 (حجم AA) (2)
- سلك HDMI (1) (الطراز DVP-SR700HP فقط)

المواصفات والتصميم عرضة للتغيير دون إشعار مسبق.

- قد يتطلب بدء العرض والانتقال إلى الألبوم/ملف آخر أو تالٍ بعض الوقت.
- يتعرف المشغل على 200 ألبوم و600 ملف بحد أقصى. كما يمكنه التعرف على ما يصل إلى 300 ملف موسيقى و300 ملف صور فوتوغرافية عند اختيار "صورة (موسيقى)".
- عند مسح الألبوم، قد يقوم المشغل بمسح الملفات غير المعروضة على قائمة الألبوم في الوقت نفسه.
- لا يمكن للمشغل عرض مجموعة مختلطة تتكون من ملفي فيديو أو أكثر.
- لا يمكن للمشغل تشغيل ملف فيديو حجمه أكبر من 720 (عرض) × 576 (ارتفاع) أو 2 جيجا بايت.
- وفقاً للملف، قد لا يكون العرض سلساً. نوصيك بعمل الملف بمعدل بت أقل.
- يمكن ألا يقوم المشغل بتشغيل ملف الفيديو ذي معدل البت المرتفع على أسطوانات DATA CD بسلاسة.
- ونوصيك بالعرض باستخدام DATA DVD.
- عند عرض البيانات المرئية غير المدعومة بتنسيق MPEG-4، فلن يتم إخراج أي شيء سوى الصوت.

ملاحظة حول الوسائط القابلة للتسجيل

- لا يمكن عرض بعض الوسائط القابلة للتسجيل على هذا المشغل بسبب جودة التسجيل أو حالة الأسطوانة أو خصائص جهاز التسجيل وبرنامجه الترخيص. لا يمكن عرض الأسطوانة إذا لم يتم تخبئها بصورة صحيحة. وأيضاً لا يمكن تشغيل بعض أسطوانات DATA التي تم إنشاؤها بتنسيق Packet Write.

بالنسبة للمشغل الذي لا يستطيع أن يعرض الصور التي

تحتوي على حماية ضد النشر فقط

- قد لا يتم عرض الصور التي تحتوي على حماية CPRM (حماية المحتويات للوسائط القابلة للتسجيل) في وضع DVD-VR.

ملاحظة حول عمليات العرض لأسطوانات DVD وVIDEO

CD

- قد تكون بعض عمليات عرض أسطوانات DVD مضبوطة بشكل مقصود من قبل منتجي البرامج، بما أن هذا المشغل يعرض أسطوانات DVD وVIDEO CD وفقاً لمحتويات الأسطوانة التي صممها منتجي البرامج، قد لا تتوفر بعض مزايا العرض. أيضاً، ارجع إلى تعليمات التشغيل المرفقة مع أسطوانات DVD أو VIDEO CD.

يتم تشغيل التلفاز بشكل تلقائي أو يتم تحويل مدخلات التلفاز إلى المشغل. (الطرز DVP-SR700HP فقط)
 ← تم ضبط الإعداد "تحكم بـ HDMI" على "تشغيل". قم بضبط هذه الوظيفة على "إغلاق".

لا يتم تحويل لغة العرض على الشاشة بشكل تلقائي.

(الطرز DVP-SR700HP فقط)

← قم بإيقاف تشغيل أية شاشات عرض لمشغل DVD، وحاول مرة أخرى.

لا يكتشف المشغل جهاز USB المتصل بالمشغل.

← لا يتم توصيل جهاز USB بإحكام بالمشغل.

← جهاز USB تالف أو السلك تالف.

← لم يتم تحويل وضع الأسطوانة إلى وضع USB.

تنسيق الملفات القابلة للعرض

فيديو: MPEG-1 (بيانات Cyber-shot)/MPEG-4

(ملف تعريف بسيط) DivX/1*

الصور الفوتوغرافية: JPEG (تنسيق DCF)

الموسيقى: MP3 (باستثناء WMA/mp3) (باستثناء

WAVE/LPCM/2*، AAC/2*، WMA Pro

*1 لا يمكن تشغيل الملفات المحمية بحقوق النشر (إدارة الحقوق الرقمية).

*2 لا يقوم المشغل بعرض الملفات المرزمة، مثل Lossless.

الامتدادات المدعومة: ".avi"، ".divx"، ".mpg"،

".mpeg"، ".mp4"، ".jpg"، ".mp3"، ".wma"،

".m4a"، ".wav"

الأسطوانات المدعومة: DVD±RW/±R/±R DL، DVD،

CD-R/RW، Music CD/Super VCD

• أسطوانات DATA CD المسجلة حسب ISO 9660

المستوى الأول/المستوى الثاني، أو التنسيق الممتد التابع له،

Joliet.

• أسطوانات DATA DVD المسجلة حسب UDF.

• يقوم المشغل بتشغيل أي من الملفات المذكورة أعلاه، حتى

إذا اختلف تنسيق الملف. يمكن أن يؤدي تشغيل مثل

هذه البيانات إلى توليد ضوضاء يمكن أن تؤدي إلى الإضرار

بالسماعة.

• يمكن أن يحتاج تشغيل تدرج من المجلدات يحتوي على

ملفات مختلطة إلى بعض الوقت. لذا، قم بعمل الألبومات

بحيث تشمل على ما لا يزيد على مستويين من التدرج.

• قد لا يتم تشغيل بعض ملفات الفيديو والصور الشخصية

والموسيقى، بناءً على ظروف الترميز/التسجيل.

استكشاف الأخطاء وإصلاحها

إذا كنت تعاني من أي من المشاكل التالية أثناء استخدام المشغل، فاستخدم دليل استكشاف الأخطاء وإصلاحها هذا للمساعدة في حل المشكلة قبل طلب الإصلاح. إذا استمرت المشكلة، فقم باستشارة أقرب موزع Sony لديك.

لا يتم تشغيل الطاقة.

← تأكد من أن يكون سلك التيار المتردد موصولاً بإحكام.

لا تظهر صورة/أو يظهر تشويش بالصورة.

← أعد توصيل سلك التوصيل بإحكام.

← أسلاك التوصيل تالفة.

← افحص التوصيل بالتلفاز وقيم بتحويل محدد المدخلات في جهاز التلفاز لديك بحيث تظهر الإشارة الصادرة من المشغل على شاشة التلفاز.

← قم بتغيير نظام الألوان في المشغل (صفحة 5).

← الأسطوانة متسخة أو بها عيب.

← اضغط على الزر (L) / إيقاف تشغيل المشغل، وأدخل "369" باستخدام أزرار الأرقام الموجودة في وحدة التحكم عن بعد، ثم اضغط على الزر (L) لتشغيل المشغل مرة أخرى.

لا يوجد صوت.

← أعد توصيل سلك التوصيل بإحكام.

← أسلاك التوصيل تالفة.

← المشغل مضبوط على وضع التوقف المؤقت أو على وضع العرض بحركة بطيئة.

← المشغل مضبوط على وضع التراجع السريع أو التقديم السريع.

وحدة التحكم عن بعد لا تعمل.

← شحن البطاريات الموجودة في وحدة التحكم عن بعد ضعيف.

← لا يتم توجيه وحدة التحكم عن بعد إلى مستشعر الإشارات المرسله من وحدة التحكم عن بعد [5] الموجود في الوحدة.

← عندما تقوم بتشغيل المشغل من خلال الضغط على الأزرار الموجودة في وحدة التحكم عن بعد بالتتابع، اضغط على الزر خلال 5 ثوانٍ من الضغط على الزر السابق له.

لا يمكن تشغيل الأسطوانة.

← الأسطوانة مقلوبة.

← قم بتحميل الأسطوانة بحيث يكون وجه التشغيل متجهًا لأسفل.

← الأسطوانة ملتوية.

← لا يستطيع المشغل عرض أسطوانات معينة.

← رمز المنطقة الموجود على أسطوانة DVD غير متوافق مع المشغل.

← تراكمت الرطوبة داخل المشغل.

← لا يتمكن النظام من عرض أسطوانة مسجلة لم يتم اختتامها بشكل صحيح.

لا يعمل المشغل بشكل صحيح.

← عندما تتسبب الكهرباء الساكنة أو ما إلى ذلك في جعل المشغل يعمل بشكل غير طبيعي، فقم بفصل المشغل عن التيار.

لا يتم فتح درج الأسطوانات وتظهر الكلمة "L E F" (LOCKED) في شاشة اللوحة الأمامية.

← تم ضبط وظيفة القفل ضد عبث الأطفال (صفحة 6).

لا يتم فتح درج الأسطوانات وتظهر العبارة "L E F - L" (TRAY LOCKED) في شاشة اللوحة الأمامية.

← قم باستشارة موزع Sony لديك أو مركز صيانة Sony المعتمد.

تظهر "C13" في شاشة اللوحة الأمامية.

← قم بتنظيف الأسطوانة ببطاعة قماش تنظيفي أو تحقق من تنسيقها.

تظهر "C31" في شاشة اللوحة الأمامية.

← أعد إدخال الأسطوانة بشكل صحيح.

لا توجد صور/صوت عند التوصيل بمقبس HDMI OUT (الطرز DVP-SR700HP فقط)

← قم بتغيير الإعداد "HDMI نقاوة" في "HDMI إعداد". يمكن أن يتم حل المشكلة.

← الجهاز الموصل بالمقبس HDMI OUT غير متوافق مع تنسيق إشارة الصوت، في هذه الحالة، اضبط الخيار "صوت (HDMI)" الموجود في "HDMI إعداد" على "PCM".

← حاول تنفيذ الإجراءات التالية: ① قم بإيقاف تشغيل المشغل وأعد تشغيله مرة أخرى. ② قم بإيقاف تشغيل الجهاز الموصل وأعد تشغيله مرة أخرى. ③ افصل سلك HDMI وأعد توصيله مرة أخرى.

وظيفة التحكم بـ HDMI لا تعمل.

(الطرز DVP-SR700HP فقط)

← تحقق من تحويل مدخلات التلفاز إلى مشغل DVD بحيث تظهر الإشارة الصادرة من المشغل على شاشة التلفاز، وبحيث يتم ضبط "تحكم بـ HDMI" على "تشغيل".

لا تظهر شاشة 'BRAVIA Sync'.

(الطرز DVP-SR700HP فقط)

← قم بإيقاف تشغيل أية شاشة من شاشات مشغل DVD. ثم أعد المحاولة.

– عند إيقاف تشغيل المشغل (بما في ذلك وظيفة وضع الاستعداد الآلي).

1) إعداد الصوت

وظيفة ضغط الصوت (DRC)*4: قم بضبط هذا الخيار حسب البيئة المحيطة. قم بضبط هذا الخيار على "مُط التلفزيون" عندما يتعذر تمييز أدق الأصوات، أو قم بضبط هذا الخيار على "مجال واسع" عندما تكون بيئة الاستماع جيدة، على سبيل المثال، في مسرح منزلي للأفلام. إشارة **دولبي*4:** لتغيير أسلوب الخلط إلى قناتين عندما تقوم بعرض أسطوانة DVD التي تحتوي على عناصر صوت خلفية (قنوات)، أو التي تم تسجيلها بتنسيق دولبي الرقمي. اختر "دولبي محيطي" بشكل طبيعي.

رقمي خارج: لاختيار هل يتم إخراج إشارات الصوت من خلال مقبس DIGITAL OUT (COAXIAL)/HDMI OUT. عند اختيار "تشغيل"، قم أيضاً بضبط خيارات "DOLBY DIGITAL" أو "MPEG" أو "DTS" أو "48kHz/96kHz PCM".

DOLBY DIGITAL: لاختيار نوع إشارة Dolby Digital. اضبط هذا الخيار على "خلط تنازلي (D-PCM)" عندما يتم توصيل المشغل بمكون صوت دون جهاز فك تشفير Dolby Digital مدمج.

MPEG: لاختيار نوع إشارة صوت MPEG. اضبط هذا الخيار على "MPEG" عندما يتم توصيل المشغل بمكون صوت مع وجود جهاز فك تشفير MPEG مدمج.

DTS: لاختيار نوع إشارة صوت DTS. اضبط هذا الخيار على "تشغيل" عندما تقوم بتشغيل أسطوانات DVD VIDEO التي تحتوي على مسارات صوت DTS. لا تقم بضبط هذا الخيار على "تشغيل" عندما تقوم بتوصيل المشغل بمكون صوت دون وجود جهاز فك تشفير DTS. **48kHz/96kHz PCM:** لاختيار تردد العينة لإشارة مخرجات الصوت الرقمي. (إشارة DVD VIDEO)

2) إعداد HDMI

يمكنك ضبط العناصر المتعلقة باتصال HDMI. **HDMI نقاوة*2:** لاختيار نوع إشارة مخرجات الفيديو الخارجة من المقبس HDMI OUT. إذا تم اختيار "تلقائي (1920×1080p)" (الإعداد الافتراضي)، يخرج المشغل إشارات الفيديو التي تكون ذات أعلى دقة مقبولة في جهاز التلفاز الخاص بك. إذا كانت الصورة غير واضحة، أو غير طبيعية، أو لا ترضيك بأي شكل آخر، فجرب خياراً آخر يناسب الأسطوانة، أو جهاز التلفاز/أو العرض أو ما إلى ذلك. للتعرف على المزيد من التفاصيل، ارجع أيضاً إلى دليل التعليمات المرفق مع جهاز التلفاز/العرض، أو ما إلى ذلك. لا يمكنك اختيار هذا الخيار عندما يتم ضبط "نقاوة الصورة JPEG" على "PhotoTV HD".

نقاوة الصورة JPEG: لاختيار نوع دقة JPEG بحيث يمكنك الاستمتاع بجودة الصور العالية من خلال اتصال HDMI. يكون هذا الوضع فعالاً فقط عندما تقوم بضبط "نوع التلفزيون" على "16:9". لا يمكنك اختيار هذا الخيار عندما يتم ضبط "نقاوة" HDMI على "720×480/576p". يكون الخياران "HD (1920×1080i)" و"HD (1920×1080i)" فعالين فقط عندما تقوم بضبط الخيار "HDMI نقاوة" على "1920×1080i". إذا قمت بضبط هذا الإعداد على "PhotoTV HD"، أو "HD (1920×1080i)" أو "HD (1920×1080i)"، فإن وظائف التأثير والتدوير والتقريب لا تكون متاحة.

YCbCr/RGB (HDMI): لاختيار نوع إشارة مخرجات HDMI الخارجة من المقبس HDMI OUT.

اضبط هذا الخيار على "RGB" إذا كانت صورة العرض مشوهة. لا يمكنك اختيار هذا الخيار عندما يتم ضبط "نقاوة الصورة JPEG" على "PhotoTV HD".

صوت (HDMI): لاختيار نوع إشارة مخرجات الصوت الخارجة من المقبس HDMI OUT. اضبط هذا الخيار على "PCM" إذا قمت بتوصيل المشغل بجهاز تلفاز غير متوافق مع إشارات MPEG/DTS/DOLBY DIGITAL.

تحكم بـ HDMI: لتشغيل أو إيقاف تشغيل إعداد التحكم بـ HDMI. اضبط هذا الخيار على "تشغيل" عندما تستخدم وظيفة التحكم بـ HDMI.


لغة العرض: لتحويل اللغات الخاصة بمشغل DVD إلى نفس لغة العرض على الشاشة الحالية الخاصة بالتلفاز. لا يمكنك اختيار هذا الخيار عندما يتم ضبط "تحكم بـ HDMI" على "إغلاق".

- 1* عندما تقوم باختيار "→ أخرى"، حدد وأدخل رمزاً للغة. ارجع إلى "قائمة رموز اللغات" في نهاية هذا الدليل.
- 2* إذا كانت الصورة لا تظهر بشكل طبيعي أو تختفي، فقم بإعادة ضبط هذا الإعداد. اضغط على (C) لإيقاف تشغيل المشغل، وأدخل "369" ثم اضغط على (C) لتشغيل المشغل مرة أخرى.
- 3* فقط DVP-SR700HP
- 4* تؤثر هذه الوظيفة على المخرجات من المقابس التالية:

- مقابس AUDIO OUT L/R
- مقبس HDMI/DIGITAL OUT (COAXIAL)
- OUT فقط عندما يتم ضبط "DOLBY DIGITAL" على "خلط تنازلي (D-PCM)".

قائمة شخصي

يمكنك تعديل إعدادات متعددة.


اضغط على الزر DISPLAY أثناء وجود المشغل في وضع التوقف، واختر  (الإعداد)، ثم اختر "شخصي". يتم عرض قائمة شخصي.

لائحة القائمة

العنصر	اسم العنصر ووظيفته
	إعداد اللغة
	العرض على الشاشة (العرض على الشاشة): لتغيير لغة العرض على الشاشة.
	القائمة*: لاختيار اللغة المرغوبة لقائمة الأسطوانة (DVD VIDEO فقط).
	الصوت*: لتغيير اللغة الخاصة بمسار الصوت. عند اختيار "أصلي"، يتم اختيار اللغة التي لها الأولوية في الأسطوانة. (DVD VIDEO فقط)
	الترجمة النصية*: لتغيير لغة الترجمة المسجلة على أسطوانة DVD VIDEO. إذا قمت باختيار "الصوت التابع"، تتغير اللغة الخاصة بالترجمات وفقاً للغة التي قمت باختيارها لمسار الصوت. (DVD VIDEO فقط)

إعداد الشاشة


نوع التلفزيون: لاختيار نسبة الارتفاع إلى العرض للتلفاز الموصل.




16:9



عرض غمط مستطيل 4:3



عرض غمط واسع 4:3

نظام اللون (VIDEO CD): لاختيار نظام الألوان عند تشغيل أسطوانة VIDEO CD. إذا كان جهاز التلفاز الخاص بك مزوداً بالنظام الثنائي DUAL، فقم باختيار "تلقائي". حافظ الشاشة: عند الضبط على وضع "تشغيل"، تظهر شاشة الحماية عندما يكون المشغل في وضع الإيقاف المؤقت أو التوقف لمدة 15 دقيقة. اضغط على الزر  لإيقاف تشغيل شاشة الحماية.

الخلفية: لاختيار لون الخلفية أو صورة الخلفية المراد عرضها على شاشة التلفاز. إذا قمت بضغط "صورة محفظة القرص"، على الرغم من أن الأسطوانة لا تحتوي على صورة غلاف، تظهر الصورة "الرسومات".

تتابع (COMPONENT OUT ONLY)*: للضبط على "تشغيل" إذا كان جهاز التلفاز لديك يعرض إشارات تنسيق تقدمية.

متتابع (PROGRESSIVE): لا يسري هذا الإعداد إلا عندما تقوم بضغط الإعداد "تتابع (COMPONENT OUT ONLY)" على "تشغيل". إذا قمت باختيار "تلقائي"، فإن المشغل يكتشف التنسيق (القائم على الفيلم أو القائم على الفيديو)، ويؤدي إلى التحويل إلى الإصدار الملائم. مشاهدة 4:3: يكون هذا الوضع فعالاً فقط عندما تقوم بضغط "نوع التلفزيون" على "16:9". اختر "كامل" عندما يمكنك تغيير نسبة الارتفاع إلى العرض على جهاز التلفاز لديك.

إعداد شخصي



وضع الاستعداد الآلي: تشغيل أو إيقاف تشغيل إعداد الانتظار التلقائي. إذا اخترت "تشغيل"، يدخل المشغل إلى وضع الانتظار عندما يترك في وضع التوقف لمدة تزيد على 30 ثانية.

تشغيل تلقائي: عندما يتم اختيار "تشغيل" لهذا الخيار، يبدأ المشغل في العرض بشكل تلقائي عندما يتم تشغيل المشغل بواسطة مؤقت (غير مرفق).

نمط التوقف المؤقت: لاختيار الصورة بينما يكون النظام في

وضع التوقف المؤقت. اختر "تلقائي" بشكل طبيعي. عندما يتم إخراج الصورة بدقة عالية، قم باختيار "إطار". (DVD فقط) اختيار المسار: لإعطاء الأولوية لمسار الصوت الذي يتضمن أعلى عدد قنوات عند تشغيل أسطوانة DVD VIDEO المسجلة بصيغ صوت متعددة (تنسيق PCM أو صوت MPEG أو DTS أو Dolby Digital). في حالة اختيار "تلقائي"، يتم منح الأولوية. (DVD VIDEO فقط)

جودة الصورة*: لاختيار أولوية العرض على صور عالية الجودة أو السرعة العالية. (ملفات الصور الفوتوغرافية فقط)

قرص متعدد - متابعة: لتشغيل أو إيقاف تشغيل إعداد متابعة قرص متعدد. يمكن تخزين عرض الاستئناف في الذاكرة لعدد يصل إلى 6 أسطوانات DVD VIDEO/VIDEO CD. إذا قمت ببدء تشغيل هذا الإعداد مرة أخرى، فيستمر مسح نقطة الاستئناف. (DVD VIDEO/VIDEO CD فقط)

DivX® VOD: لعرض رمز التسجيل ورمز إيقاف التشغيل لهذا المشغل. للحصول على المزيد من المعلومات، انتقل إلى موقع الويب <http://www.divx.com/vod> على الإنترنت. يمكنك عرض ملفات فيديو DivX حسب عدد المرات المعقد مسبقاً. يتم حساب الحالات التالية:

- عند فتح درج الأسطوانات.

- عند تشغيل ملف آخر.

- عند إزالة جهاز USB.

- عند تغيير إعداد "قرص/USB" أو "وسيلة".

• عند عرض DVD VIDEO: لعرض TOP و MENU.
MENU.

• عند العرض في وضع DVD-VR: لعرض <<، >>، و ورقم الفصل.

• عند عرض أسطوانة CD، أو أسطوانة VIDEO CD، أو أسطوانة Super VCD (التي لا تحتوي على وظائف التحكم في عرض الصورة (PBC)): لعرض <<، >>، ورقم المسار.

• عند عرض أسطوانة VIDEO CD أو أسطوانة Super VCD (التي تحتوي على وظائف التحكم في عرض الصورة (PBC)): لعرض <<، >>، ورقم المشهد. عند ظهور قائمة القرص، يمكنك اختيار عنصر من خلال الضغط على <↑/↓>.

• عند عرض ملفات الفيديو والصور الفوتوغرافية والموسيقى: لعرض MENU و PICT. NAVI (تصفح الصور).

لتغيير الشاشة


اضغط على زر SYNC MENU في وحدة التحكم عن بعد الخاصة بالتلفاز لتشغيل أو تغيير الشاشة. يتم عرض 'BRAVIA Sync' ويتم عرض قائمة التحكم بشكل متبادل.

لإيقاف تشغيل الشاشة

اضغط على زر RETURN أو زر SYNC MENU في وحدة التحكم عن بعد الخاصة بالتلفاز.

نسخ أسطوانة CD أو نسخ ملفات البيانات إلى جهاز USB

يمكنك نسخ أسطوانة CD أو نسخ* ملفات البيانات إلى جهاز USB. لا يمكنك نسخ أسطوانة CD أو نسخ ملفات البيانات أثناء عرض الأسطوانة.
* وفقًا للقرص، قد يتعذر النسخ.

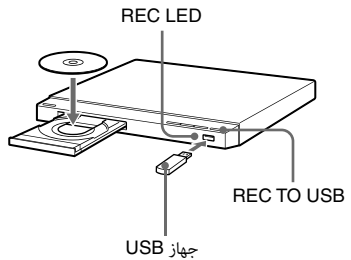

1 قم بإدخال أسطوانة في درج الأسطوانات، ثم قم بتوصيل جهاز USB إلى مقبس USB.

2 اضغط على DISPLAY. تظهر شاشة قائمة التحكم.

3 اضغط على <↑/↓> لاختيار "REC TO USB".

4 اضغط الزر <↑/↓> لاختيار العناصر المطلوب نسخها، ثم اضغط على الزر ENTER.

عند نسخ أسطوانة، اختر "قرص" أو "المسار".

عند نسخ ملفات البيانات، اختر "قرص" أو "ألبوم" أو "المسار" أو "ملف".

إذا اخترت "قرص"، فإذهب إلى الخطوة 6.

5 اضغط على الزر <←/→/↑/↓> لاختيار الألبومات أو المسارات أو الملفات، ثم اضغط على الزر ENTER. عند اختيار الألبومات أو المسارات أو الملفات، يومض مؤشر REC LED.

يتم عرض عدد الألبومات أو المسارات أو الملفات المحددة في شاشة اللوحة الأمامية في وضع انتظار التسجيل.

6 اضغط على الزر <▶>.

عند نسخ أسطوانة CD أو نسخ ملفات البيانات، يستمر مؤشر REC LED في الإضاءة.

تبدأ عملية التسجيل. يتم عرض تقدم عملية التسجيل. بعد انتهاء التسجيل، يتم عرض "إنتهى النقل بنجاح".

للتسجيل ببساطة

يمكنك نسخ أسطوانة CD أو نسخ ملفات البيانات ببساطة من خلال الضغط على زر REC TO USB. عند الضغط على زر REC TO USB، تظهر الشاشة. اضغط على الزر <▶> حسب الشاشة. تبدأ عملية التسجيل.

لمسح "ألبوم" أو "المسار" أو "ملف"

اضغط على الزر CLEAR. اتبع الرسالة التي تظهر على الشاشة.

لإزالة جهاز USB

أوقف العرض، أو نسخ أسطوانة CD، أو نسخ/إزالة ملفات البيانات، ثم قم بفصل جهاز USB من مقبس USB. لا تقم بإزالة جهاز USB أثناء التشغيل، لأن ذلك يمكن أن يؤدي إلى تلف البيانات.

لتغيير رقم الوحدة المنطقية (LUN)

بالنسبة لبعض الأجهزة، يمكن أن يظهر رقم الوحدة المنطقية (LUN). لتغيير رقم الوحدة المنطقية أو التخزين الأصلي، اضغط على <▶> ••▶▶ عندما يتم عرض قائمة الألبومات أو المسارات.

نبذة عن أجهزة USB المدعومة

- هذا المشغل يدعم USB Mass Storage Class فقط.
- هذا المشغل يدعم أجهزة USB الخاصة ذات تنسيق FAT فقط.
- قد لا تعمل بعض أجهزة USB مع هذا المشغل.

نبذة عن وظائف التحكم بـ HDMI

(الطراز DVP-SR700HP فقط)

يمكنك التحكم في المشغل من خلال التوصيل بجهاز تلفاز يتوافق مع وظيفة التحكم بـ HDMI مع استخدام كابل HDMI (غير مرفق).

للاستمتاع بالميزات

• التشغيل بلمسة واحدة

من خلال لمسة واحدة للزر ► على وحدة التحكم عن بعد، يمكن تشغيل التلفاز والمشغل بشكل تلقائي ويتم تحويل مدخلات التلفاز إلى المشغل. يبدأ العرض بشكل تلقائي.

كما يتم تحويل مدخلات التلفاز أيضًا بشكل تلقائي إلى المشغل، في الحالات التالية:

- اضغط على الزر ►، أو TOP MENU، أو MENU، أو DISPLAY على وحدة التحكم عن بعد.

لاحظ أن هذه الأزرار لا تكون فعالة عند عرض أسطوانات CD صوتية أو ملفات موسيقى في وضع "موسيقى".

- في حالة تحميل أسطوانة تحتوي على وظيفة العرض التلقائي.

- في حالة الضغط على درج الأسطوانات لإغلاقه.

• إيقاف تشغيل النظام

عند إيقاف تشغيل التلفاز من خلال استخدام الزر (L) في وحدة التحكم عن بعد الخاصة بالتلفاز، يتم إيقاف تشغيل المكونات المتوافقة مع وظيفة التحكم بـ HDMI تلقائيًا.

نبذة عن شاشة 'BRAVIA Sync'

يمكنك التحكم في المشغل من خلال التوصيل بجهاز تلفاز من إنتاج شركة Sony (يتوافق مع 'BRAVIA Sync' فقط) واختيار زر SYNC MENU على وحدة التحكم عن بعد/ قائمة الاختيارات الخاصة بالتلفاز.

بعض أجهزة التلفاز قد تحتوي على أزرار أخرى متاحة لتشغيل شاشة 'BRAVIA Sync'، أو قد تتطلب إعداد التلفاز.

وفقًا للتلفاز، قد يظهر عرض الإعداد قبل شاشة 'BRAVIA Sync'. راجع أيضًا دليل التشغيل المرفق مع التلفاز.

تعرض شاشة 'BRAVIA Sync' عناصر مختلفة حسب نوع الأسطوانة.



(مثال: عرض 'BRAVIA Sync' عند عرض DVD (VIDEO))

اختر عنصرًا باستخدام ←/→/↵ ثم اضغط على الزر ENTER.

لقفل درج الأسطوانات (القفل ضد عبث

(الأطفال)

يمكنك قفل درج الأسطوانات للحيولة دون فتحه بالخطأ. عندما يكون المشغل في وضع الانتظار، اضغط على الأزرار التالية بالترتيب في وحدة التحكم عن بعد (L) و RETURN و ENTER و (L).

يتم تشغيل المشغل وتظهر الكلمة "LOCKED" (LOCKED) في شاشة اللوحة الأمامية. لا يعمل الزر (L) في المشغل إلى أن يتم ضبط القفل ضد عبث الأطفال.

لفتح درج الأسطوانات

عندما يكون المشغل في وضع الانتظار، اضغط على الأزرار التالية بالترتيب في وحدة التحكم عن بعد (L) و RETURN و ENTER و (L).

التحكم في أجهزة التلفاز بواسطة وحدة التحكم عن بعد

يمكنك التحكم في مستوى الصوت، ومصدر المدخلات، ومفتاح الطاقة في جهاز التلفاز من إنتاج شركة Sony من خلال وحدة التحكم عن بعد المرفقة.

إذا كان جهاز التلفاز الخاص بك مدرجًا في الجدول الموجود أدناه، فقم بضبط رمز المصنع المناسب.

عندما تقوم باستبدال البطاريات الخاصة بوحدة التحكم عن بعد، قم بضبط رقم الرمز مرة أخرى.

- 1 أثناء الضغط مع الاستمرار على الزر (L) TV، اضغط على أزرار الأرقام لاختيار رمز مصنع التلفاز الخاص بك.
- 2 حرر الزر (L) TV.

أرقام رمز أجهزة التلفاز التي يمكن التحكم فيها

01	Sony
24	Hitachi
33	JVC
76	LG/Goldstar
49.17	Panasonic
72.08.06	Philips
71	Samsung
29	Sharp
38	Toshiba

مشاهدة عروض الشرائح عالية الجودة (PhotoTV HD)

(الطراز DVP-SR700HP فقط)

إذا كان لديك تلفاز من إنتاج شركة Sony متوافق مع وظيفة "PhotoTV HD"، يمكن الاستمتاع بالصور ذات أفضل جودة. يتم تنشيط "PhotoTV HD" عندما يتم توصيل المشغل بالتلفاز من خلال كابل HDMI وعندما يتم ضبط "نقاوة الصورة JPEG" في "HDMI إعداد" على "PhotoTV HD" (صفحة 9).

وسيلة

لاختيار نوع الوسائط المطلوب عرضه.

فيديو: لتشغيل ملفات الفيديو.

صورة (موسيقى): لعرض ملفات الصور الفوتوغرافية وملفات الموسيقى في شكل عرض شرائح. يمكنك مشاهدة عرض الشرائح مع الصوت عندما يتم وضع ملفات الموسيقى والصورة الفوتوغرافية في نفس الألبوم. إذا كان وقت عرض الموسيقى أو الصور الفوتوغرافية أطول، يستمر الأطول دون صوت أو صورة.

صورة (BGM):^{2*} لعرض ملفات الصور الفوتوغرافية مع ظهور صوت الخلفية الداخلي للمشغل. لاختيار نغمة صوت الخلفية، اضغط على AUDIO بشكل متكرر أثناء عرض الصورة.

صورة^{3*}: لتشغيل ملفات الصور.

موسيقى: لتشغيل ملفات الموسيقى. اضغط على

SUBTITLE أثناء عرض ملفات الموسيقى التي تحتوي على معلومات موسيقية غير متزامنة. يدعم المشغل ملفات موسيقى MP3 ID3 فقط.

^{1*} وفقًا للملف، قد لا تعمل هذه الوظيفة.

^{2*} DVP-SR700HP فقط

^{3*} DVP-SR510P فقط

لتغيير نظام الألوان

إذا لم تظهر القائمة التي تعرض على الشاشة على التلفاز الموصل، فقم بتغيير نظام الألوان للمشغل ليتطابق مع نظام الألوان في التلفاز (NTSC أو PAL).
قم أولاً بإيقاف تشغيل المشغل من خلال الضغط على (L).
ثم اضغط على DISPLAY، وأدخل "0" باستخدام أزرار الأرقام، ثم اضغط على (L) على وحدة التحكم عن بعد.
يتم تشغيل المشغل مرة أخرى، ويظهر اسم نظام الألوان على شاشة اللوحة الأمامية.

لعرض أسطوانة VIDEO CD المزودة

بوظائف التحكم في عرض الصورة (PBC)

عندما تقوم ببدء عرض أسطوانات VIDEO CD المزودة بوظائف التحكم في عرض الصورة (PBC)، تظهر قائمة الاختيار الخاص بك.

للعرض بدون استخدام وظائف التحكم في عرض الصورة (PBC)

اضغط على (L) أو أزرار الأرقام أثناء توقف المشغل عن العمل لاختيار مسار، ثم اضغط على الزر (L) أو ENTER. للعودة إلى العرض باستخدام وظائف التحكم في عرض الصورة (PBC)، اضغط على الزر (L) مرتين، ثم اضغط على الزر (L).

تلفزيون افتراضي ليبي: تكون هذه الوظيفة مفيدة عندما ترغب في الاستماع إلى الحوار والاستمتاع بتأثيرات الصوت المحيطة الخاصة بـ "تلفزيون افتراضي نطاق واسع" عند مستويات صوت منخفضة.

تلفزيون افتراضي قياسي: اسخدم هذا الإعداد عندما ترغب في استخدام تلفزيون محيطي افتراضي مع سماعتين منفصلتين.

^{1*} للعودة إلى التشغيل العادي، اختر "إغلاق" أو اضغط على الزر CLEAR.


^{2*} يتم إلغاء وضع التشغيل في الحالات التالية:


– فتح درج الأسطوانات.


– إيقاف المشغل.


^{3*} DVP-SR700HP فقط


العناصر الخاصة بأسطوانات DATA أو USB


العنصر	اسم العنصر ووظيفته
	ألبوم
	لاختيار الألبوم الذي يحتوي على ملفات الموسيقى والصورة الفوتوغرافية المرغوب في عرضها.

	ملف
	لاختيار ملف الصورة الفوتوغرافية المطلوب عرضه.

	ألبوم
	لاختيار الألبوم الذي يحتوي على ملف الفيديو المطلوب عرضه.

	ملف
	لاختيار ملف الفيديو المطلوب عرضه.

	التاريخ
	لعرض التاريخ الذي تم فيه تصوير صورة باستعمال كاميرا رقمية.

	المدة ^{1*}
	لتحديد الفترة التي يتم فيها عرض الشرائح على الشاشة.

	التأثير ^{1*}
---	-----------------------

لاختيار المؤثرات المراد استعمالها لتغيير الشرائح أثناء عرض الشرائح.

النمط 1: يتم إظهار الصور مع المؤثرات بشكل عشوائي.

النمط 2: تتحرك الصورة من أعلى اليسار إلى أسفل اليمين.

النمط 3: تتحرك الصورة من أعلى الأسفل.

النمط 4: تتحرك الصورة من اليسار إلى اليمين.

النمط 5: تتمدد الصورة من منتصف الشاشة.

إغلاق: لإيقاف تشغيل هذه الوظيفة.

→ إغلاق: لإيقاف تشغيل وظيفة الرقابة الأبوية المخصصة.

الرقابة الأبوية (العرض المحدود)

يمكنك ضبط مستوى قيود للعرض.

1 اختر "→ مشغل"، ثم اضغط على ENTER.

قم بإدخال أو إعادة إدخال كلمة المرور المكونة من أربعة أرقام، ثم اضغط على ENTER.

2 اضغط على الزر \uparrow/\downarrow لاختيار "قياسي"، ثم اضغط على ENTER.

اضغط على الزر \uparrow/\downarrow لاختيار منطقة، ثم اضغط على ENTER.

عندما تحدد "→ أخرى"، حدد وأدخل رمزاً قياسيًّا. ارجع إلى قائمة رموز منطقة الرقابة الأبوية في نهاية هذا الدليل.

3 اضغط على الزر \uparrow/\downarrow لاختيار "المستوى"، ثم اضغط على ENTER.

اضغط على الزر \uparrow/\downarrow لاختيار مستوى، ثم اضغط على ENTER.

تتكمّل بذلك عملية إعداد الرقابة الأبوية.

كلما أصبحت القيمة أقل، كلما أصبحت القيود أشد.

لإيقاف تشغيل وظيفة الرقابة الأبوية، قم بضغط "المستوى" على "إغلاق".

إذا نسيت كلمة المرور الخاصة بك، فأدخل الرقم "199703" في مربع كلمة المرور، ثم اضغط على ENTER، ثم أدخل كلمة المرور المكونة من أربعة أرقام.

الإعداد

سريع: استخدم التهيئة السريعة Quick Setup لاختيار

اللغة المرغوبة للعرض على الشاشة، ونسبة الارتفاع إلى العرض لشاشة التلفزيون وإشارة مخرجات الصوت.

شخصي: بالإضافة إلى إعداد التهيئة السريعة Quick Setup، يمكنك ضبط إعدادات أخرى متعددة مختلفة (صفحة 8).

إعادة التهيئة الكلية: لإعادة الإعدادات الموجودة في "الإعداد" إلى الإعداد الافتراضي.

تقريب*

لتكبير الصور حتى أربع مرات من الحجم الأصلي، قم بالتمرير باستخدام $\leftarrow/\rightarrow/\uparrow/\downarrow$.

الزاوية

لتغيير الزاوية.

مُط الصورة الشخصي

لاختيار جودة الصورة التي تناسب البرنامج الذي تشاهده بأفضل شكل ممكن.

قياسي: لعرض صورة قياسية.

ديناميكي 1: لإنتاج صورة متحركة داكنة من خلال زيادة تباين الصورة وكثافة الألوان.

ديناميكي 2: لإنتاج صورة متحركة بشكل أكثر من الخيار ديناميكي 1 من خلال إضفاء المزيد من تباين الصورة وكثافة الألوان.

نرويجية 1: لتحسين التفاصيل في المناطق الداكنة من خلال زيادة مستوى اللون الأسود.

نرويجية 2: تصبح الألوان البيضاء أكثر بريقًا بينما تصبح الألوان السوداء أغنى، ويزداد تباين الألوان.

→ ذاكرة: لضبط الصورة من خلال زيادة التفاصيل.

حدة الوضوح

زيادة المخطط التفصيلي للصورة لإنتاج صورة أكثر حدة. إغلاق: لإلغاء هذا الخيار.

1: لتحسين المخطط التفصيلي.

2: لتحسين المخطط التفصيلي بشكل أفضل من 1.

تزامن الصوت والصورة*

لضبط التأخير بين الصورة والصوت.

لا تعمل هذه الوظيفة في الحالات التالية:

- عند استخدام المقبس (COAXIAL) DIGITAL OUT.

وضبط "DOLBY DIGITAL" أو "MPEG"

أو "DTS" في "إعداد الصوت" على "DIGITAL"

"DIGITAL" أو "MPEG" أو "تشغيل" على التوالي (صفحة 9).

- عند توصيل جهاز Dolby Digital أو جهاز متوافق مع DTS عبر المقبس HDMI OUT وضبط "DOLBY"

"DIGITAL" أو "MPEG" أو "DTS" في "إعداد الصوت" على "DOLBY DIGITAL" أو "MPEG" أو "تشغيل" على التوالي (صفحة 9).

1 اختر "→ إختيار"، ثم اضغط على ENTER.

يظهر شريط تعديل "تزامن الصوت والصورة".

2 اضغط على \rightarrow بشكل متكرر لتحديد التأخر.

في كل مرة تقوم فيها بالضغط على \leftarrow/\rightarrow ، يتم ضبط التأخر بمقدار 10 ميلي ثانية.

3 اضغط على ENTER.

يظهر تأثير الإعداد المحدد.

لإعادة تعيين الإعداد "تزامن الصوت والصورة"، اضغط على CLEAR في الخطوة 2.

تلفزيون محيطي افتراضي

(TV Virtual Surround)

لاختيار تأثير الصوت المحيطي عند توصيل تلفاز استريو أو سماعتين أماميتين. يعمل ذلك فقط عند تشغيل مسار صوت Dolby متعدد القنوات. وبالإضافة إلى ذلك، إذا تم

إعداد المشغل لإخراج الإشارة من مقبس DIGITAL OUT (COAXIAL) HDMI OUT، فلن يتم سماع التأثير المحيط إلا عند ضبط "DOLBY DIGITAL" على "خلط

تنازلي (D-PCM)" ويتم ضبط "MPEG" على "PCM" في "إعداد الصوت" (صفحة 9).

إغلاق: لإلغاء الإعداد.

TVS DYNAMIC THEATER

تلفزيون محيطي افتراضي

تلفزيون افتراضي نطاق واسع: تسري هذه الأوضاع عندما تكون المسافة بين السماعتين الأمامية اليمنى والأمامية اليسرى قصيرة، كما هو الحال في السماعات المدمجة في تلفاز الاستريو.


العرض

شاشة قائمة التحكم

استخدم قائمة التحكم لاختيار وظيفة ومشاهدة المعلومات المتعلقة بها.

اضغط على DISPLAY.

لتغير شاشة قائمة التحكم، اضغط على DISPLAY مرة أخرى.

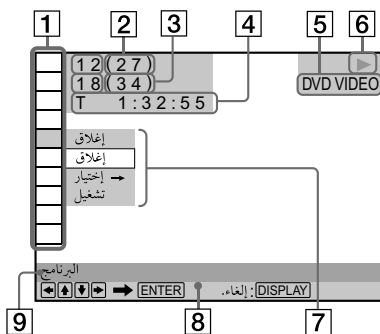

1 عناصر قائمة التحكم

- 2 العنوان الجاري تشغيله حالياً/إجمالي عدد العناوين
- 3 الفصل الجاري تشغيله حالياً/إجمالي عدد الفصول
- 4 وقت التشغيل
- 5 نوع الوسائط المحدد
- 6 حالة العرض
- 7 خيارات أيقونة العنصر المحدد/القائمة المحددة
- 8 رسالة التشغيل
- 9 عنصر قائمة التحكم المحدد

لأحة القائمة

العنصر اسم العنصر ووظيفته

العنوان/المشهد/المسار

فصل/الفهرس

المسار

لتحديد العنوان أو المشهد أو المسار أو الفصل أو الفهرس المطلوب تشغيله.

الوقت/النص

لفحص الزمن المنقضي وزمن العرض المتبقي. أدخل رمز الوقت للبحث عن الصور والموسيقى (ملفات فيديو DVD و DivX فقط).

قرص/USB

اختر "USB" أو "قرص" ليتم تشغيله.

REC TO USB

لنسخ أسطوانة CD أو لنسخ الصور الفوتوغرافية أو ملفات الموسيقى والفيديو إلى جهاز USB (الصفحة 7).

أصلي/قائمة العرض

لاختيار نوع العنوان المطلوب تشغيله (وضع DVD-VR): أصلي أو قائمة العرض محررة.

البرنامج 1*، 2*

لاختيار العنوان أو الفصل أو المسار المطلوب تشغيله بالترتيب المرغوب فيه.

1 اختر "→ إختيار"، ثم اضغط على ENTER، واختر العنوان (T) أو الفصل (C) أو المسار (T) الذي ترغب في برمجته، ثم اضغط على ENTER.

2 تكرر اختيار العنوان أو الفصل أو المسار.

3 اضغط على الزر ▶.

عشوائي 1*، 2*

لعرض العنوان أو الفصل أو المسار بترتيب عشوائي.

إعادة 1*، 2*

لتشغيل كل العناوين/المسارات/الألبومات أو عنوان/فصل/مسار/ألبوم/ملف بشكل متكرر.

إعادة A-B 1*، 2*

لتحديد الأجزاء التي ترغب في تشغيلها بشكل متكرر.

1 أثناء العرض، اختر "→ إختيار"، ثم اضغط على ENTER. يظهر شريط إعداد "إعادة A-B".

2 عند العثور على نقطة البداية (النقطة A)، اضغط على الزر ENTER.

3 عند الوصول إلى نقطة النهاية (النقطة B)، اضغط على الزر ENTER مرة أخرى.

الرقابة الأبوية

قم بضبط هذا الخيار لمنع العرض على هذا المشغل.

→ تشغيل: لضبط قيود العرض بحيث لا يقوم المشغل بتشغيل الأسطوانات غير المناسبة (الرقابة الأبوية المخصصة).

→ مشغل: يمكن تقييد عرض بعض أسطوانات

DVD VIDEO حسب مستوى محدد مسبقاً كعمر المستخدمين. قد يتم حجب المشاهد أو استبدالها بمشاهد أخرى (الرقابة الأبوية).

→ كلمة المرور: قم بإدخال كلمة المرور الخاصة بك المكونة من 4 أرقام مستخدماً أزرار الأرقام. أيضاً استخدم هذه القائمة لتغيير كلمة المرور.

تحذير

لتفادي خطر نشوب حريق أو حدوث صدمة كهربائية، لا تعرض هذا الجهاز للمطر أو البلل.

لتفادي حدوث صدمات كهربائية، لا تفتح الهيكل. أَسند عمليات الصيانة إلى الفنيين المختصين دون سواهم.

يجب ألا يتم تغيير سلك التيار (الرئيسي) إلا لدى محل صيانة مختص.

يجب عدم تعريض البطاريات أو البطاريات المركبة لحرارة شديدة مثل أشعة الشمس أو النار أو ما شابه ذلك.

تنبيه

استعمال الأجهزة البصرية مع هذا الجهاز يزيد الخطورة على العيون. ونظرًا لكون أشعة الليزر المستخدمة في هذا المشغل لأسطوانات CD/DVD ضارة للعيون، لا تحاول تفكيك الهيكل.

اترك أعمال الخدمة للأشخاص المؤهلين فقط.

احتياطات

- لمنع خطر الحريق والصدمات الكهربائية، لا تضع أشياء مملوءة بالسوائل، مثل مثلاً أواني الزهور، على الجهاز.
- لا يتم فصل الجهاز عن مصدر التيار الكهربائي المتردد طالما ظل الجهاز موصولًا بمأخذ التيار في الجدار، حتى ولو أوقفت تشغيل الجهاز نفسه.
- لا تترك هذا المشغل في حيز مغلق، مثل رف الكتب أو وحدة مشابهة له.
- قم بتركيب المشغل بحيث يتم فصل سلك التيار المتردد من مأخذ التيار بالحائط في الحال في حالة حدوث خلل.
- إذا تم إحضار الجهاز من مكان بارد إلى مكان دافئ مباشرة، أو تم وضعه في حجرة شديدة الرطوبة فقد تتكثف الرطوبة على العدسات داخل الجهاز. إذا حدث ذلك فقد لا يعمل الجهاز بطريقة صحيحة. في تلك الحالة، انزع الأسطوانة واترك الجهاز في وضع التشغيل لمدة نصف ساعة تقريبًا حتى تبخر الرطوبة.

البرق

لحماية هذا الجهاز بشكل إضافي أثناء نوبات البرق، أو عند تركه بلا عناية أو بلا استخدام لفترات طويلة من الزمن، أفضله من مأخذ التيار الجداري. هذا من أجل لتفادي التلف الذي يحصل للجهاز بسبب البرق وتيارات خظ القدرة.

ملاحظة حول الأسطوانات

لا تستخدم الأسطوانات التالية:

– الأسطوانة التي يكون شكلها غير قياسي (على سبيل المثال، على شكل بطاقة أو على شكل قلب).


– الأسطوانة التي توجد عليها ورقة أو ملصق.

رمز المنطقة

المشغل الذي لديك له رمز أقليم مطبوع على مؤخرة الوحدة ويستطيع عرض اسطوانات DVD المتوفرة في الأسواق (عرض فقط) التي تكون معلمة برموز الإقليم المعروف بها فقط. يستخدم هذا النظام لحماية حقوق الاستنساخ.

يمكن عرض اسطوانات DVD التجارية التي توجد عليها علامات (DVD) في هذا المشغل.

وقد يكون عرض بعض اسطوانات DVD محظورًا نتيجة قيود المناطق على الرغم من عدم كتابة أي رمز للمنطقة على اسطونة DVD وذلك حسب الاسطوانة.



رمز المنطقة

حقوق الطبع

- مصنعه بتصريح من معامل دولبي. "دولبي" و علامه د - الزوجه علامات تجاريه لمعامل دولبي.
- تم التصنيع بموجب الترخيص بواسطة براءة الاختراع الأمريكية #: 5,451,942 وبراءات الاختراع الأخرى الأمريكية والمعروفة عالميًا المصدقة والمتعلقة بها.
- تُعد DTS والرمز علامتين تجاريتين مسجلتين، كما تُعد DTS Digital Out وشعارات DTS علامات تجارية مملوكة لشركة DTS, Inc. يشتمل المنتج على البرامج © DTS, Inc. جميع الحقوق محفوظة.
- أن "DVD-RW"، "DVD+RW"، "DVD+R"، "DVD-R DL"، "DVD+R"، "DVD-R"، "DVD VIDEO"، و "CD" هما علامتان تجاريتان.
- تقنية تشفير الصوت MPEG Layer-3 وبراءات الاختراع الخاصة بها مرخصة من شركة Thomson and Fraunhofer IIS.
- تم دمج تقنية السطح البيني للوسط المتعدد ذو التحليل العالي (HDMI™) بمشغل DVD هذا. إن HDMI وشعار HDMI والسطح البيني للوسط المتعدد ذو التحليل العالي هي علامات تجارية أو علامات تجارية مسجلة مملوكة لشركة HDMI Licensing LLC في الولايات المتحدة ودول أخرى. (DVP-SR700HP فقط)

- DivX Certified®، DivX® والعلامات

المصاحبة لها هي علامات تجارية مسجلة لشركة DivX, Inc. وتستخدم بموجب ترخيص.

- ان هذا المنتج مجاز حسب حزمة براءة الاختراع MPEG-4 VISUAL لاجل

الاستخدام الشخصي والغير التجاري من قبل المستهلك لاجل فتح الشفرات الفيديوية بالتناغم مع معايير MPEG-4 VISUAL ("MPEG-4 VIDEO") الذي قام

بتجثيره مستهلك في عمل شخصي وليس للاغراض التجارية و/او تم الحصول عليه من مجهز فيديو مجاز من MPEG LA

لتجهيز MPEG-4 VIDEO. لم تمنح اجازة صراحة او يوحي بها لاي غرض اخر. يمكن الاطلاع على أي معلومات اضافية ضمنها

تلك التي تتعلق بمواد الدعاية، والاستخدام الداخلي والتجاري والحصول على الاجازة من MPEG LA, LLC. انظر الموقع

<http://www.mpegla.com>

حول هذا الدليل

- "DVD" يمكن استعمالها كمصطلح عام يطلق على أسطوانات DVD التجارية، أسطوانات DVD+RW/DVD+R DL و أسطوانات DVD-RW/DVD-R DL (+VR و أسطوانات DVD-R/DVD-R DL (وضع VR، وضع الفيديو).
- تنطبق الشعارات "HDMI" و "BRAVIA Sync" و "PhotoTV" و "HD" الموجودة على الغطاء الأمامي على جهاز DVP-SR700HP فقط.



* I - 4 1 6 9 9 5 8 3 2 F *

4-169-958-32(1)

Printed in China

<http://www.sony.net/>