

CD/DVD Player

Reference Guide _____ GB

دليل المرجع _____ AR

DVP-SR120/DVP-SR320




WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

The mains lead must be changed only at a qualified service shop.

Batteries or batteries installed apparatus shall not be exposed to excessive heat such as sunshine, fire or the like.

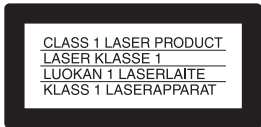

This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD player is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.

Precautions

- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off.
- Do not install this player in a confined space, such as a bookshelf or similar unit.
- Install the player so that the AC power cord (mains lead) can be unplugged from the wall socket immediately in the event of trouble.
- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should

this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.

Lightning

For added protection for this set during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the set due to lightning and power-line surges.


Note about the discs

Do not use the following discs:

- A disc that has a non-standard shape (e.g., card, heart).
- A disc with a label or sticker on it.

Region code

Your player has a region code printed on the back of the unit and only will play commercial DVDs (playback only) labelled with identical region codes. This system is used to protect copyrights.

Commercial DVDs labelled  will also play on this player.

Depending on the commercial DVD, there may be no region code indication, even though playing the commercial DVD is prohibited by area restrictions.



Region code

Copyrights

- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- “DVD+RW,” “DVD-RW,” “DVD+R,” “DVD+R DL,” “DVD-R,” “DVD VIDEO,” and “CD” logos are trademarks.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- All other trademarks are trademarks of their respective owners.
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND

NONCOMMERCIAL USE OF A CONSUMER FOR DECODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD (“MPEG-4 VIDEO”) THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

About this manual

“DVD” may be used as a general term for commercial DVDs, DVD+RWs/DVD+Rs/DVD+R DLs (+VR mode) and DVD-RWs/DVD-Rs/DVD-R DLs (VR mode, video mode).


Playback

Control Menu display

Use the Control Menu to select a function and to view related information.

Press DISPLAY.

To change the Control Menu display, press DISPLAY again.

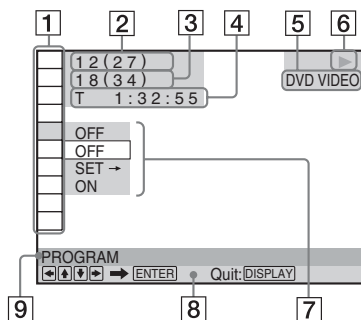

- 1 Control Menu items
- 2 Currently playing title/Total number of titles
- 3 Currently playing chapter/Total number of chapters
- 4 Playing time
- 5 Selected media type
- 6 Playback status
- 7 Selected item icon/menu options
- 8 Operation message
- 9 Selected Control Menu item

Menu list

Item	Item Name, Function
	TITLE/SCENE/TRACK
	CHAPTER/INDEX
	TRACK

Selects the title, scene, track, chapter, or index to be played.

TIME/TEXT

Checks the elapsed time and the remaining playback time.
Input the time code for picture and music search (DVD and Xvid video files only).

DISC/USB*¹

Selects either “USB” or “DISC” to be played.

TOP MENU/MENU

(DVD VIDEO only)
TOP MENU: Displays the top menu.
MENU: Displays the menu.

ORIGINAL/PLAY LIST

Selects the type of title (DVD-VR mode) to be played: ORIGINAL, or edited PLAY LIST.

PROGRAM*^{2, *3}

Selects the title, chapter, or track to play in the order you want.

- 1 Select “SET →,” then press ENTER and select the title (T), chapter (C), or track (T) you want to programme, and press ENTER.
- 2 Repeat selecting the title, chapter, or track.
- 3 Press .

SHUFFLE*^{2, *3}

Plays the title, chapter, or track in random order.

REPEAT*^{2, *3}

Plays all titles/tracks/albums or a single title/chapter/track/album/file repeatedly.

A-B REPEAT*^{2, *3}

Specifies the parts you want to play repeatedly.

- 1 During playback, select “SET →,” then press ENTER.
The “A-B REPEAT” setting bar appears.
- 2 When you find the starting point (point A), press ENTER.
- 3 When you reach the ending point (point B), press ENTER again.

PARENTAL CONTROL

Set to prohibit playback on this player.
PLAYER →: Playback of some DVD VIDEOS can be limited according to a predetermined level such as the age of the users. Scenes may be blocked or replaced with different scenes (Parental Control).
PASSWORD →: Enter a 4-digit password using the number buttons. Also use this menu to change the password.

GB

Parental Control (limited playback)

You can set a playback limitation level.

- 1 Select "PLAYER →," then press ENTER.
Enter or re-enter your 4-digit password, then press ENTER.
- 2 Press ↑/↓ to select "STANDARD," then press ENTER.
Press ↑/↓ to select an area, then press ENTER.
When you select "OTHERS →," select and enter a standard code. See "PARENTAL CONTROL AREA CODE LIST" at the end of this manual.
- 3 Press ↑/↓ to select "LEVEL," then press ENTER.
Press ↑/↓ to select the level, then press ENTER.
Parental Control setting is complete.
The lower the value, the stricter the limitation.
To turn off the Parental Control function, set "LEVEL" to "OFF."

If you forget your password, enter "199703" in the password box, press ENTER, and then enter a new 4-digit password.

SETUP

QUICK: Use Quick Setup to choose the desired language of the on-screen display, the aspect ratio of the TV and the audio output signal.

CUSTOM: In addition to the Quick Setup setting, you can adjust various other settings (page 6).

RESET: Returns the settings in "SETUP" to the default setting.

ZOOM*²

Magnifies the image up to four times the original size, scroll using ←/↑/↓/→.

ANGLE

Changes the angle.

CUSTOM PICTURE MODE

Selects the picture quality that best suits the programme you are watching.

STANDARD: Displays a standard picture.

DYNAMIC: Produces a bold dynamic picture by increasing the picture contrast and the colour intensity.

CINEMA: Enhances details in dark areas by increasing the black level.

MEMORY →: Adjusts the picture in greater detail.

SHARPNESS

Exaggerates the outline of the image to produce a sharper picture.

OFF: Cancels this option.

1: Enhances the outline.

2: Enhances the outline more than 1.

*¹ DVP-SR320 only

*² To return to normal play, select "OFF" or press CLEAR.

*³ The play mode is cancelled when:

- you open the disc tray.
- you turn off the player.

◆Items for DATA discs or USB (DVP-SR320 only)

Item	Item Name, Function
------	---------------------

ALBUM

Selects the album that contains music and photo files to be played.

FILE

Selects the photo file to be played.

ALBUM

Selects the album that contains the video file to be played.

FILE

Selects the video file to be played.

DATE

Displays the date the picture was taken by a digital camera.

INTERVAL*

Specifies the duration for which the slides are displayed on the screen.

EFFECT*

Selects the effects to be used for changing slides during a slide show.

MODE 1: The images randomly cycle through the effects.

MODE 2: The image sweeps in from top left to bottom right.

MODE 3: The image sweeps in from top to bottom.

MODE 4: The image sweeps in from left to right.

MODE 5: The image stretches out from the centre of the screen.

OFF: Turns off this function.



MEDIA

Selects the media type you want to play.

VIDEO: Plays video files.

PHOTO (MUSIC): Plays photo and music files as a slide show. You can view a slide show with sound when music and photo files are placed in the same album. If the playing time of either music or photos is longer, the longer one continues without sound or image.

PHOTO: Plays photo files.

MUSIC: Plays music files. Press **SUBTITLE** while playing music files that contain unsynchronized lyric information. The player supports MP3 ID3 Lyrics only.

* Depending on the file, this function may not be possible.

To change the colour system

If the on-screen menu of the player does not appear on the connected TV, switch the player's colour system to match the colour system of the TV (NTSC or PAL).

First turn off the player by pressing **I/⏻**. Next press **DISPLAY**, enter "0" using the number button, and then press **I/⏻** on the remote. The player turns back on, and the on-screen menu appears on the TV screen.

To play VIDEO CDs with PBC functions

When you start playing a VIDEO CD with PBC (Playback control) functions, the menu for your selection appears.

To play without using PBC

Press **⏮/⏭** or the number buttons while the player is stopped to select a track, then press **▶** or **ENTER**. To return to PBC playback, press **■** twice, then press **▶**.

Controlling TVs with the remote

You can control the sound level, input source, and power switch of your Sony TV with the supplied remote.

If your TV is listed in the table below, set the appropriate manufacturer's code.

When you replace the batteries of the remote, set the appropriate code number again.

- 1 While holding down TV **I/⏻**, press the number buttons to select your TV's manufacturer's code.
- 2 Release TV **I/⏻**.

Code numbers of controllable TVs

Sony	01 (default)
Hitachi	24
JVC	33
LG/Goldstar	76
Panasonic	17, 49
Philips	06, 08, 72
Samsung	71
Sharp	29
Toshiba	38

Connecting a USB device

(DVP-SR320 only)

You can connect a USB device to the USB jack of the player to play video, photo, or music files.

To remove the USB device

Stop playback and disconnect the USB device from the USB jack.


To change LUN

For some devices, LUN (Logical Unit Number) may appear. To change the LUN or original storage, press **||▶ ●▶** when the list of albums or tracks is displayed.

About supported USB devices

- This player supports USB Mass Storage Class only.
- This player supports FAT format USB device only.
- Some USB devices may not work with this player.

CUSTOM Menu

You can adjust various settings. Press DISPLAY when the player is in stop mode, select  (SETUP), and then select "CUSTOM." The CUSTOM menu appears.

Menu list

Item	Item Name, Function
------	---------------------

LANGUAGE SETUP

OSD (On-Screen Display): Switches the display language on the screen.

MENU*¹: Selects the desired language for the disc's menu. (DVD VIDEO only)

AUDIO*¹: Switches the language of the sound track. When you select "ORIGINAL," the language given priority in the disc is selected. (DVD VIDEO only)

SUBTITLE*¹: Switches the language of the subtitle recorded on the DVD VIDEO. When you select "AUDIO FOLLOW," the language for the subtitles changes according to the language you selected for the sound track. (DVD VIDEO only)

SCREEN SETUP

TV TYPE: Selects the aspect ratio of the connected TV.

16:9




4:3 LETTER BOX



4:3 PAN SCAN



COLOR SYSTEM (VIDEO CD): Selects the colour system when you play a VIDEO CD. If your TV is the DUAL system, select "AUTO."

SCREEN SAVER: When set to "ON," the screen saver appears when the player is in pause or stop mode for 15 minutes. Press  to turn off the screen saver.

BACKGROUND: Selects the background colour or picture on the TV screen. If you set "JACKET PICTURE," even though the disc does not contain a jacket picture, the "GRAPHICS" picture appears.



CUSTOM SETUP

AUTO STANDBY: Sets the Auto Standby setting on or off. If you select "ON," the player enters standby mode when left in stop mode for more than 30 minutes.

AUTO PLAY: When set to "ON," the player automatically starts playback when the player is turned on by a timer (not supplied).

PAUSE MODE: Selects the picture in pause mode. Normally select "AUTO." When the picture is output in high resolution, set to "FRAME." (DVD only)

TRACK SELECTION: Gives the sound track which contains the highest number of channels priority when you play a DVD VIDEO on which multiple audio formats (PCM, MPEG audio, DTS, or Dolby Digital format) are recorded. If you select "AUTO," priority is given. (DVD VIDEO only)

MULTI-DISC RESUME: Switches the Multi-disc Resume setting on or off. Resume playback can be stored in memory for up to 6 different DVD VIDEOS/VIDEO CDs. If you start the settings again, the resume point is cleared. (DVD VIDEO/VIDEO CD only)



AUDIO SETUP

AUDIO DRC (Dynamic Range Control)*²: Set according to the surrounding environment. Set to "TV MODE" when the smallest sounds are indiscernible, or set to "WIDE RANGE" when the listening environment is good, for example, in a home movie theatre.

DOWNMIX*²: Switches the method for mixing down to 2 channels when you play a DVD which has rear sound elements (channels), or is recorded in Dolby Digital format. Normally select "DOLBY SURROUND."

DIGITAL OUT: Selects if audio signals are output via the DIGITAL OUT (COAXIAL) jack. When you select "ON," set also the following "DOLBY DIGITAL," "MPEG," "DTS," or "48kHz/96kHz PCM."

DOLBY DIGITAL: Selects the type of Dolby Digital signal. Set to "D-PCM" when the player is connected to an audio component without a built-in Dolby Digital decoder.

MPEG: Selects the type of MPEG audio signal. Set to "MPEG" when the player is connected to an audio component with a built-in MPEG decoder.

DTS: Selects the type of DTS audio signal. Set to "ON" when you play a DVD VIDEO with DTS sound tracks. Do not set to "ON" when you connect the player to an audio component without a DTS decoder.

48kHz/96kHz PCM: Selects the sampling frequency of the digital audio output signal. (DVD VIDEO only)

*1 When you select "OTHERS →," select and enter a language code. See "LANGUAGE CODE LIST" at the end of this manual.

*2 This function affects the output from the following jacks:
– LINE OUT L/R (AUDIO) jacks.
– DIGITAL OUT (COAXIAL) jack only when "DOLBY DIGITAL" is set to "D-PCM."

Information

Troubleshooting

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

The power is not turned on.

→ Check that the power cord (mains lead) is connected securely.


There is no picture/picture noise appears.

- Re-connect the connecting cord securely.
- The connecting cords are damaged.
- Check the connection to your TV and switch the input selector on your TV so that the signal from the player appears on the TV screen.
- Change the colour system of the player (page 5).
- The disc is dirty or flawed.

There is no sound.

- Re-connect the connecting cord securely.
- The connecting cord is damaged.
- The player is in pause mode or in Slow-motion Play mode.
- The player is in fast forward or fast reverse mode.

The remote does not function.

- The batteries in the remote are weak.
- The remote is not pointed at the remote sensor  on the player.
- When you operate the player by pressing buttons on the remote in sequence, press the buttons within 5 seconds of each other.

The disc does not play.

- The disc is turned over.
Insert the disc with the playback side facing down.
- The disc is skewed.
- The player cannot play certain discs.
- The region code on the DVD does not match the player.
- Moisture has condensed inside the player.
- The player cannot play a recorded disc that is not correctly finalized.

The player does not operate properly.

→ When static electricity, etc., causes the player to operate abnormally, unplug the player.

“C:13:” appears on the screen.**

→ Clean the disc with a cleaning cloth or check its format.

“C:31:” appears on the screen.**

→ Re-insert the disc correctly.

The player does not detect a USB device connected to the player. (DVP-SR320 only)

→ The USB device is not securely connected to the player.

→ The USB device or a cord is damaged.

→ Disc mode has not been switched to USB mode.

Playable file format

Video: MPEG-1 (Cyber-shot data)/MPEG-4 (simple profile)*¹/Xvid

Photo: JPEG (DCF format)

Music: MP3 (except for mp3PRO)/WMA (except for WMA Pro)*¹, *²/AAC*¹, *²/LPCM/WAVE

*¹ Files with copyright protection (Digital Right Management) cannot be played.

*² The player does not play coded files such as Lossless.

Supported extensions: “.avi”, “.mpg”, “.mpeg”, “.mp4”, “.jpg”, “.mp3”, “.wma”, “.m4a”, “.wav”

Supported discs: DVD, DVD±RW/±R/±R DL, Music CD/Super VCD, CD-R/-RW

- DATA CDs recorded according to ISO 9660 Level 1/Level 2, or its extended format, Joliet.
- DATA DVDs recorded according to UDF.
- The player will play any file in the above, even if the file format differs. Playing such data may generate noise that can result in speaker damage.
- To play a complex hierarchy of folders may take some time. Create albums with no more than two hierarchies.
- Some video, photo, and music files may not play, depending on the encoding/recording condition.
- To start playback and proceed to the next or another album/file may take some time.

- The player will recognize a maximum of 200 albums and 600 files. It can recognize up to 300 music files and 300 photo files when “PHOTO (MUSIC)” is selected.
- The player may not play a combination of two or more video files.
- The player cannot play a video file of size more than 720 (width) × 576 (height)/2 GB.
- Depending on the file, playback may not be smooth. You are recommended to create the file at a lower bit rate.
- The player may not play back the high bit rate video file on the DATA CD smoothly. You are recommended to play back using DATA DVD.
- When playing visual data that is not supported by MPEG-4 format, only sound will be heard.

Note about recordable media

Some recordable media cannot be played on this player due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software. The disc will not play if it has not been correctly finalized. Also some DATA discs created in Packet Write format cannot be played.

For player that cannot play images that contain a copy protection only

Images in DVD-VR mode with CPRM (Content Protection for Recordable Media) protection may not be played.

Note on playback operations of DVDs and VIDEO CDs

Some playback operations of DVDs and VIDEO CDs may be intentionally set by software producers. Since this player plays DVDs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the operating instructions supplied with the DVDs or VIDEO CDs.

Note on discs

This unit is designed to playback discs that conform to the Compact Disc (CD) standard. DualDiscs and some music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard. Therefore, these discs may not be compatible with this unit.

Specifications

System

Laser: Semiconductor laser

Inputs/Outputs

- LINE OUT L/R (AUDIO): Phono jack
- DIGITAL OUT (COAXIAL): Phono jack
- LINE OUT (VIDEO): Phono jack
- USB (DVP-SR320 only): USB jack Type A, maximum current 500 mA (For connecting USB device)

General

- Power requirements: 110-240 V AC, 50/60 Hz
- Power consumption:
6 W (DVP-SR120)
10 W (DVP-SR320)
- Dimensions (approx.): 270 × 38.5 × 209 mm (width/height/depth) incl. projecting parts
- Mass (approx.): 950 g
- Operating temperature: 5 °C to 35 °C
- Operating humidity: 25 % to 80 %

Supplied accessories

- Audio/Video cord (phono plug × 3 ↔ phono plug × 3) (1)
- Remote commander (remote) (1)
- R6 (size AA) batteries (2)

Specifications and design are subject to change without notice.

LANGUAGE CODE LIST

☞ Page 6

Code Language	Code Language	Code Language	Code Language
1027 Afar	1183 Irish	1347 Maori	1507 Samoan
1028 Abkhazian	1186 Scots Gaelic	1349 Macedonian	1508 Shona
1032 Afrikaans	1194 Galician	1350 Malayalam	1509 Somali
1039 Amharic	1196 Guarani	1352 Mongolian	1511 Albanian
1044 Arabic	1203 Gujarati	1353 Moldavian	1512 Serbian
1045 Assamese	1209 Hausa	1356 Marathi	1513 Siswati
1051 Aymara	1217 Hindi	1357 Malay	1514 Sesotho
1052 Azerbaijani	1226 Croatian	1358 Maltese	1515 Sundanese
1053 Bashkir	1229 Hungarian	1363 Burmese	1516 Swedish
1057 Byelorussian	1233 Armenian	1365 Nauru	1517 Swahili
1059 Bulgarian	1235 Interlingua	1369 Nepali	1521 Tamil
1060 Bihari	1239 Interlingue	1376 Dutch	1525 Telugu
1061 Bislama	1245 Inupiak	1379 Norwegian	1527 Tajik
1066 Bengali;	1248 Indonesian	1393 Occitan	1528 Thai
Bangla	1253 Icelandic	1403 (Afan)Oromo	1529 Tigrinya
1067 Tibetan	1254 Italian	1408 Oriya	1531 Turkmen
1070 Breton	1257 Hebrew	1417 Punjabi	1532 Tagalog
1079 Catalan	1261 Japanese	1428 Polish	1534 Setswana
1093 Corsican	1269 Yiddish	1435 Pashto;	1535 Tonga
1097 Czech	1283 Javanese	Pushto	1538 Turkish
1103 Welsh	1287 Georgian	1436 Portuguese	1539 Tsonga
1105 Danish	1297 Kazakh	1463 Quechua	1540 Tatar
1109 German	1298 Greenlandic	1481 Rhaeto-	1543 Twi
1130 Bhutani	1299 Cambodian	Romance	1557 Ukrainian
1142 Greek	1300 Kannada	1482 Kirundi	1564 Urdu
1144 English	1301 Korean	1483 Romanian	1572 Uzbek
1145 Esperanto	1305 Kashmiri	1489 Russian	1581 Vietnamese
1149 Spanish	1307 Kurdish	1491 Kinyarwanda	1587 Volapük
1150 Estonian	1311 Kirghiz	1495 Sanskrit	1613 Wolof
1151 Basque	1313 Latin	1498 Sindhi	1632 Xhosa
1157 Persian	1326 Lingala	1501 Sangho	1665 Yoruba
1165 Finnish	1327 Laothian	1502 Serbo-	1684 Chinese
1166 Fiji	1332 Lithuanian	Croatian	1697 Zulu
1171 Faroese	1334 Latvian;	1503 Singhalese	
1174 French	Lettish	1505 Slovak	
1181 Frisian	1345 Malagasy	1506 Slovenian	1703 Not specified

ISO 639: 1988 (E/F) standard

PARENTAL CONTROL AREA CODE LIST

☞ Page 3

Code Area	Code Area	Code Area	Code Area
2044 Argentina	2165 Finland	2362 Mexico	2149 Spain
2047 Australia	2174 France	2376 Netherlands	2499 Sweden
2046 Austria	2109 Germany	2390 New Zealand	2086 Switzerland
2057 Belgium	2248 India	2379 Norway	2528 Thailand
2070 Brazil	2238 Indonesia	2427 Pakistan	2184 United Kingdom
2079 Canada	2254 Italy	2424 Philippines	
2090 Chile	2276 Japan	2436 Portugal	
2092 China	2304 Korea	2489 Russia	
2115 Denmark	2363 Malaysia	2501 Singapore	

قائمة رموز اللغات

الصفحة 6

اللغة	الرمز	اللغة	الرمز	اللغة	الرمز	اللغة	الرمز
Samoan	1507	Maori	1347	Irish	1183	Afar	1027
Shona	1508	Macedonian	1349	Scots Gaelic	1186	Abkhazian	1028
Somali	1509	Malayalam	1350	Galician	1194	Afrikaans	1032
Albanian	1511	Mongolian	1352	Guarani	1196	Amharic	1039
Serbian	1512	Moldavian	1353	Gujarati	1203	Arabic	1044
Siswati	1513	Marathi	1356	Hausa	1209	Assamese	1045
Sesotho	1514	Malay	1357	Hindi	1217	Aymara	1051
Sundanese	1515	Maltese	1358	Croatian	1226	Azerbaijani	1052
Swedish	1516	Burmese	1363	Hungarian	1229	Bashkir	1053
Swahili	1517	Nauru	1365	Armenian	1233	Byelorussian	1057
Tamil	1521	Nepali	1369	Interlingua	1235	Bulgarian	1059
Telugu	1525	Dutch	1376	Interlingue	1239	Bihari	1060
Tajik	1527	Norwegian	1379	Inupiak	1245	Bislama	1061
Thai	1528	Occitan	1393	Indonesian	1248	Bengali;	1066
Tigrinya	1529	(Afan)Oromo	1403	Icelandic	1253	Bangla	
Turkmen	1531	Oriya	1408	Italian	1254	Tibetan	1067
Tagalog	1532	Punjabi	1417	Hebrew	1257	Breton	1070
Setswana	1534	Polish	1428	Japanese	1261	Catalan	1079
Tonga	1535	Pashto;	1435	Yiddish	1269	Corsican	1093
Turkish	1538	Pushto		Javanese	1283	Czech	1097
Tsonga	1539	Portuguese	1436	Georgian	1287	Welsh	1103
Tatar	1540	Quechua	1463	Kazakh	1297	Danish	1105
Twi	1543	-Rhaeto	1481	Greenlandic	1298	German	1109
Ukrainian	1557	Romance		Cambodian	1299	Bhutani	1130
Urdu	1564	Kirundi	1482	Kannada	1300	Greek	1142
Uzbek	1572	Romanian	1483	Korean	1301	English	1144
Vietnamese	1581	Russian	1489	Kashmiri	1305	Esperanto	1145
Volapük	1587	Kinyarwanda	1491	Kurdish	1307	Spanish	1149
Wolof	1613	Sanskrit	1495	Kirghiz	1311	Estonian	1150
Xhosa	1632	Sindhi	1498	Latin	1313	Basque	1151
Yoruba	1665	Sangho	1501	Lingala	1326	Persian	1157
Chinese	1684	-Serbo	1502	Laothian	1327	Finnish	1165
Zulu	1697	Croatian		Lithuanian	1332	Fiji	1166
		Singhalese	1503	Latvian;	1334	Faroese	1171
غير محدد	1703	Slovak	1505	Lettish		French	1174
		Slovenian	1506	Malagasy	1345	Frisian	1181

1988 (E/F) قياسي: ISO 639

قائمة رموز منطقة الرقابة الأبوية

الصفحة 3

المنطقة	الرمز	المنطقة	الرمز	المنطقة	الرمز	المنطقة	الرمز
Spain	2149	Mexico	2362	Finland	2165	Argentina	2044
Sweden	2499	Netherlands	2376	France	2174	Australia	2047
Switzerland	2086	New Zealand	2390	Germany	2109	Austria	2046
Thailand	2528	Norway	2379	India	2248	Belgium	2057
United Kingdom	2184	Pakistan	2427	Indonesia	2238	Brazil	2070
		Philippines	2424	Italy	2254	Canada	2079
		Portugal	2436	Japan	2276	Chile	2090
		Russia	2489	Korea	2304	China	2092
		Singapore	2501	Malaysia	2363	Denmark	2115

المواصفات

النظام

الليزر: ليزر شبه موصل

الإدخال/المخرجات

- LINE OUT L/R (AUDIO): مقبس فونو
- DIGITAL OUT (COAXIAL): مقبس فونو
- LINE OUT (VIDEO): مقبس فونو
- USB (الطراز DVP-SR320 فقط): مقبس USB من النوع أ، الحد الأقصى للتيار 500 ميلي أمبير (لتوصيل جهاز USB)

مواصفات عامة

- متطلبات الطاقة: 110-240 فولت تيار متردد، 60/50 هرتز
- استهلاك الطاقة:
 - 6 وات (الطراز DVP-SR120)
 - 10 وات (الطراز DVP-SR320)
- الأبعاد (تقريبية): 270 × 38.5 × 209 مم
- العرض/الارتفاع/العمق) هما في ذلك الأجزاء البارزة
- الكتلة (تقريبية): 950 جم
- درجة الحرارة أثناء التشغيل: 5 درجة مئوية إلى 35 درجة مئوية
- الرطوبة أثناء التشغيل: 25% إلى 80%

الملحقات المرفقة

- سلك الصوت/الفيديو (قابس فونو × 3 ← قابس فونو × 3)
- وحدة التحكم عن بعد (1)
- بطاريان طراز R6 (حجم AA) (2)

المواصفات والتصميم عرضة للتغيير دون إشعار مسبق.

لا يعمل المشغل بشكل صحيح.

← عندما تتسبب الكهرباء الساكنة أو ما إلى ذلك في جعل المشغل يعمل بشكل غير طبيعي، فقم بفصل المشغل عن التيار.

يظهر "C:13:*" على الشاشة.

← قم بتنظيف الأسطوانة قطعة قماش تنظيف أو تحقق من تنسيقها.

يظهر "C:31:*" على الشاشة.

← أعد إدخال الأسطوانة بشكل صحيح.

لا يكتشف المشغل جهاز USB المتصل بالمشغل. (الطراز DVP-SR320 فقط)

← لا يتم توصيل جهاز USB بإحكام بالمشغل.

← جهاز USB تالف أو السلك تالف.

← لم يتم تحويل وضع الأسطوانة إلى وضع USB.

تنسيق الملفات القابلة للعرض

فيديو: MPEG-1 (بيانات MPEG-4/Cyber-shot) (ملف تعريف بسيط) Xvid/*

الصور الفوتوغرافية: JPEG (تنسيق DCF)

الموسيقى: MP3 (باستثناء WMA/mp3PRO (باستثناء

WAVE/LPCM/2*، AAC/2*، WMA Pro

1* لا يمكن تشغيل الملفات المحمية بحقوق النشر (إدارة الحقوق الرقمية).

2* لا يقوم المشغل بعرض الملفات المرمزة، مثل Lossless.

الامتدادات المدعومة: ".avi"، ".mpg"، ".mpeg"،

"mp4"، ".jpg"، ".mp3"، ".wma"، ".m4a"، ".wav"،

الأسطوانات المدعومة: DVD، DVD±RW/±R/±R DL،

CD-R/-RW، Music CD/Super VCD

• أسطوانات DATA CD المسجلة حسب ISO 9660 المستوى الأول/المستوى الثاني، أو التنسيق الممتد التابع له، Joliet

• أسطوانات DATA DVD المسجلة حسب UDF.

• يقوم المشغل بتشغيل أي من الملفات المذكورة أعلاه، حتى إذا اختلف تنسيق الملف. يمكن أن يؤدي تشغيل مثل

هذه البيانات إلى توليد ضوضاء يمكن أن تؤدي إلى الإضرار بالسماعة.

• يمكن أن يحتاج تشغيل تدرج من المجلدات يحتوي على ملفات مختلطة إلى بعض الوقت. لذا، قم بعمل الألبومات بحيث تشتمل على ما لا يزيد على مستويين من التدرج.

• قد لا يتم تشغيل بعض ملفات الفيديو والصور الشخصية والموسيقى، بناءً على ظروف الترميز/التسجيل.

• قد يتطلب بدء العرض والانتقال إلى ألبوم/ملف آخر أو تالٍ بعض الوقت.

• يتعرف المشغل على 200 ألبوم و600 ملف بحد أقصى. كما يمكنه التعرف على ما يصل إلى 300 ملف موسيقى و300 ملف صور فوتوغرافية عند اختيار "صورة (موسيقى)".

• لا يمكن للمشغل عرض مجموعة مختلطة تتكون من ملفي فيديو أو أكثر.

• لا يمكن للمشغل تشغيل ملف فيديو حجمه أكبر من 720 (عرض) × 576 (ارتفاع)/أو 2 جيجا بايت.

• وفقًا للملف، قد لا يكون العرض سلسًا. نوصيك بعمل الملف بمعدل بت أقل.

• يمكن ألا يقوم المشغل بتشغيل ملف الفيديو ذي معدل البت المرتفع على أسطوانات DATA CD بسلاسة.

• ونوصيك بالعرض باستخدام DATA DVD.

• عند عرض البيانات المرئية غير المدعومة بتنسيق MPEG-4، فلن يتم إخراج أي شيء سوى الصوت.

ملاحظة حول الوسائط القابلة للتسجيل

لا يمكن عرض بعض الوسائط القابلة للتسجيل على هذا المشغل بسبب جودة التسجيل أو حالة الأسطوانة أو خصائص

جهاز التسجيل وبرنامج الترخيص. لا يمكن عرض الأسطوانة إذا لم يتم تخطيمها بصورة صحيحة. وأيضًا لا يمكن تشغيل

بعض أسطوانات DATA التي تم إنشاؤها بتنسيق Packet Write.

بالنسبة للمشغل الذي لا يستطيع أن يعرض الصور التي تحتوي على حماية ضد النشر فقط

قد لا يتم عرض الصور التي تحتوي على حماية CPRM (حماية المحتويات للوسائط القابلة للتسجيل) في وضع

DVD-VR.

ملاحظة حول عمليات العرض لأسطوانات DVD وVIDEO CD

قد تكون بعض عمليات عرض أسطوانات DVD وVIDEO CD مضبوطة بشكل مقصود من قبل منتجي البرامج. بما أن

هذا المشغل يعرض أسطوانات DVD وVIDEO CD وفقًا

لمحتويات الأسطوانة التي صممها منتجي البرامج، قد لا تتوفر بعض مزايا العرض. أيضًا، ارجع إلى تعليمات التشغيل المرفقة

مع أسطوانات DVD أو VIDEO CD.

ملاحظة حول الأسطوانات

هذه الوحدة مصممة لعرض الأسطوانات المتوافقة مع معيار الأسطوانة المدمجة (CD).

الأسطوانات المشفرة بتقنيات حماية حقوق النشر لا تتطابق مع معيار الأسطوانة المدمجة (CD). ولذلك، قد لا

تتوافق هذه الأسطوانات مع هذه الوحدة.

معلومات

استكشاف الأخطاء وإصلاحها

إذا كنت تعاني من أي من المشاكل التالية أثناء استخدام المشغل، فاستخدم دليل استكشاف الأخطاء وإصلاحها هذا للمساعدة في حل المشكلة قبل طلب الإصلاح. إذا استمرت المشكلة، فقم باستشارة أقرب موزع Sony لديك.

لا يتم تشغيل الطاقة.

← تأكد من أن يكون سلك التيار المتردد موصولاً بإحكام.

لا تظهر صورة/أو يظهر تشويش بالصورة.

← أعد توصيل سلك التوصيل بإحكام.

← أسلاك التوصيل تالفة.

← افحص التوصيل بالتلفاز وقم بتحويل محدد المدخلات في جهاز التلفاز لديك بحيث تظهر الإشارة الصادرة من المشغل على شاشة التلفاز.

← قم بتغيير نظام الألوان في المشغل (صفحة 5).

← الأسطوانة متسخة أو بها عيب.

لا يوجد صوت.

← أعد توصيل سلك التوصيل بإحكام.

← أسلاك التوصيل تالفة.

← المشغل مضبوط على وضع التوقف المؤقت أو على وضع العرض بحركة بطيئة.

← المشغل مضبوط على وضع الترجيع السريع أو التقديم السريع.

وحدة التحكم عن بعد لا تعمل.

← شحن البطاريات الموجودة في وحدة التحكم عن بعد ضعيف.

← لا يتم توجيه وحدة التحكم عن بعد إلى مستشعر الإشارات المرسل من وحدة التحكم عن بعد [] الموجود في الوحدة.

← عندما تقوم بتشغيل المشغل من خلال الضغط على الأزرار الموجودة في وحدة التحكم عن بعد بالتتابع، اضغط على الزر خلال 5 ثوانٍ من الضغط على الزر السابق له.

لا يمكن تشغيل الأسطوانة.

← الأسطوانة مقلوبة.

← قم بتحميل الأسطوانة بحيث يكون وجه التشغيل متجهاً لأسفل.

← الأسطوانة ملتوية.

← لا يستطيع المشغل عرض أسطوانات معينة.

← رمز المنطقة الموجود على أسطوانة DVD غير متوافق مع المشغل.

← تراكمت الرطوبة داخل المشغل.

← لا يتمكن النظام من عرض أسطوانة مسجلة لم يتم اختتامها بشكل صحيح.

DTS: لاختيار نوع إشارة صوت DTS، اضبط هذا الخيار

على "تشغيل" عندما تقوم بتشغيل أسطوانات DVD

VIDEO التي تحتوي على مسارات صوت DTS. لا تقم

بضبط هذا الخيار على "تشغيل" عندما تقوم بتوصيل المشغل بكون صوت دون وجود جهاز فك تشفير DTS.

48kHz/96kHz PCM: لاختيار تردد العينة لإشارة مخرجات الصوت الرقمي. (فقط DVD VIDEO)

1* عندما تقوم باختيار "→ أخرى"، حدد وأدخل رمزاً للغة. ارجع إلى "قائمة رموز اللغات" في نهاية هذا الدليل.


2* تؤثر هذه الوظيفة على المخرجات من المقابس التالية:

– مقابس LINE OUT L/R (AUDIO).

– مقبس DIGITAL OUT (COAXIAL) فقط عندما يتم ضبط "DOLBY DIGITAL" على "خلط تنازلي (D-PCM)".

قائمة شخصي

يمكنك تعديل إعدادات متعددة.

اضغط على الزر DISPLAY أثناء وجود المشغل في وضع التوقف، واختر  (الإعداد)، ثم اختر "شخصي". يتم عرض قائمة شخصي.

لائحة القائمة

العنصر	اسم العنصر ووظيفته
	إعداد اللغة
	العرض على الشاشة (العرض على الشاشة): لتغيير لغة العرض على الشاشة.
	القائمة*: لاختيار اللغة المرغوبة لقائمة الأسطوانات. (DVD VIDEO فقط)
	الصوت*: لتغيير اللغة الخاصة بمسار الصوت. عند اختيار "أصلي"، يتم اختيار اللغة التي لها الأولوية في الأسطوانة. (DVD VIDEO فقط)
	الترجمة النصية*: لتغيير لغة الترجمة المسجلة على أسطوانة DVD VIDEO. إذا قمت باختيار "الصوت التابع"، تتغير اللغة الخاصة بالترجمات وفقاً للغة التي قمت باختيارها لمسار الصوت. (DVD VIDEO فقط)

إعداد الشاشة

نوع التلفزيون: لاختيار نسبة الارتفاع إلى العرض للتلفاز الموصل.

16:9




عرض منط مستطيل 4:3



عرض منط واسع 4:3



نظام اللون (VIDEO CD): لاختيار نظام الألوان عند تشغيل أسطوانة VIDEO CD. إذا كان جهاز التلفاز الخاص بك مزودًا بالنظام الثنائي DUAL، فقم باختيار "تلقائي". حافظ الشاشة: عند الضبط على وضع "تشغيل"، تظهر شاشة الحماية عندما يكون المشغل في وضع الإيقاف المؤقت أو التوقف لمدة 15 دقيقة. اضغط على الزر  لإيقاف تشغيل شاشة الحماية.

الخلفية: لاختيار لون الخلفية أو صورة الخلفية المراد عرضها على شاشة التلفاز. إذا قمت بضغط "صورة محفظة القرص"، على الرغم من أن الأسطوانة لا تحتوي على صورة غلاف، تظهر الصورة "الرسومات".

إعداد شخصي



وضع الاستعداد الآلي: تشغيل أو إيقاف تشغيل إعداد الانتظار التلقائي. إذا اخترت "تشغيل"، يدخل المشغل إلى وضع الانتظار عندما يترك في وضع التوقف لمدة تزيد على 30 ثانية.

تشغيل تلقائي: عندما يتم اختيار "تشغيل" لهذا الخيار، يبدأ المشغل في العرض بشكل تلقائي عندما يتم تشغيل المشغل بواسطة مؤقت (غير مرفق).

نمط التوقف المؤقت: لاختيار الصورة بينما يكون النظام في وضع التوقف المؤقت. اختر "تلقائي" بشكل طبيعي. عندما يتم إخراج الصورة بدقة عالية، قم باختيار "إطار". (DVD فقط) إختيار المسار: لإعطاء الأولوية لمسار الصوت الذي يتضمن أعلى عدد قنوات عند تشغيل أسطوانة DVD VIDEO المسجلة بصيغ صوت متعددة (تنسيق PCM أو صوت MPEG أو DTS أو Dolby Digital). في حالة اختيار "تلقائي"، يتم منح الأولوية. (DVD VIDEO فقط) قرص متعدد - متابعة: لتشغيل أو إيقاف تشغيل إعداد متابعة قرص متعدد. يمكن تخزين عرض الاستئناف في الذاكرة لعدد يصل إلى 6 أسطوانات DVD VIDEO/VIDEO CD. إذا قمت ببدء تشغيل هذا الإعداد مرة أخرى، فسيتم مسح نقطة الاستئناف. (DVD VIDEO/VIDEO CD فقط)

إعداد الصوت



وظيفة ضغط الصوت (DRC)*: قم بضغط هذا الخيار حسب البيئة المحيطة. قم بضغط هذا الخيار على "نمط التلفزيون" عندما يتعدى تمييز أدق الأصوات، أو قم بضغط هذا الخيار على "مجال واسع" عندما تكون بيئة الاستماع جيدة، على سبيل المثال، في مسرح منزلي للأفلام. إشارة دولبي*: لتغيير أسلوب الخلط إلى قناتين عندما تقوم بعرض أسطوانة DVD التي تحتوي على عناصر صوت خلفية (قنوات)، أو التي تم تسجيلها بتنسيق Dolby Digital. اختر "دولبي محيطي" بشكل طبيعي.

رقمي خارج: لاختيار هل يتم إخراج إشارات الصوت من خلال مقبس DIGITAL OUT (COAXIAL). عند اختيار "تشغيل"، قم أيضًا بضغط خيارات "DOLBY DIGITAL" أو "MPEG" أو "DTS" أو "48kHz/96kHz PCM".

DOLBY DIGITAL: لاختيار نوع إشارة Dolby Digital. اضبط هذا الخيار على "خلط تنازلي (D-PCM)" عندما يتم توصيل المشغل بمكون صوت دون جهاز فك تشفير Dolby Digital مدمج.

MPEG: لاختيار نوع إشارة صوت MPEG. اضبط هذا الخيار على "MPEG" عندما يتم توصيل المشغل بمكون صوت مع وجود جهاز فك تشفير MPEG مدمج.

التحكم في أجهزة التلفاز بواسطة وحدة

التحكم عن بعد

يمكنك التحكم في مستوى الصوت، ومصدر المدخلات، ومفتاح الطاقة في جهاز التلفاز من إنتاج شركة Sony من خلال وحدة التحكم عن بعد المرفقة. إذا كان جهاز التلفاز الخاص بك مدرجاً في الجدول الموجود أدناه، فقم بضبط رمز المصنع المناسب. عندما تقوم باستبدال البطاريات الخاصة بوحدة التحكم عن بعد، قم بضبط رقم الرمز مرة أخرى.

1 أثناء الضغط مع الاستمرار على الزر (L) TV، اضغط على أزرار الأرقام لاختيار رمز مصنع التلفاز الخاص بك.
2 حرر الزر (L) TV.

أرقام رمز أجهزة التلفاز التي يمكن التحكم فيها

01	Sony
24	Hitachi
33	JVC
76	LG/Goldstar
49, 17	Panasonic
72, 08, 06	Philips
71	Samsung
29	Sharp
38	Toshiba

توصيل جهاز USB

(الطراز DVP-SR320 فقط)
يمكنك توصيل جهاز USB بمقبس USB الخاص بالمشغل لعرض ملفات الفيديو أو الصور الفوتوغرافية أو الموسيقى.

إزالة جهاز USB

قم بإيقاف العرض وفصل جهاز USB عن مقبس USB.

تغيير رقم الوحدة المنطقية (LUN)

بالنسبة لبعض الأجهزة، يمكن أن يظهر رقم الوحدة المنطقية (LUN). لتغيير رقم الوحدة المنطقية أو التخزين الأصلي، اضغط على **▶ ● ◀▶▶▶** عندما يتم عرض قائمة الألبومات أو المسارات.

نبذة عن أجهزة USB المدعومة

- هذا المشغل يدعم USB Mass Storage Class فقط.
- هذا المشغل يدعم أجهزة USB الخاصة ذات تنسيق FAT فقط.
- قد لا تعمل بعض أجهزة USB مع هذا المشغل.

لاختبار نوع الوسائط المطلوب عرضه.

فيديو: لتشغيل ملفات الفيديو.

صورة (موسيقى): لعرض ملفات الصور الفوتوغرافية وملفات الموسيقى في شكل عرض شرائح. يمكنك مشاهدة عرض الشرائح مع الصوت عندما يتم وضع ملفات الموسيقى والصور الفوتوغرافية في نفس الألبوم. إذا كان وقت عرض الموسيقى أو الصور الفوتوغرافية أطول، يستمر الأطول دون صوت أو صورة.

صورة: لتشغيل ملفات الصور.

موسيقى: لتشغيل ملفات الموسيقى. اضغط على

SUBTITLE أثناء عرض ملفات الموسيقى التي تحتوي على معلومات موسيقية غير متزامنة. يدعم المشغل ملفات موسيقى ID3 MP3 فقط.

* وفقاً للملف، قد لا تعمل هذه الوظيفة.

لتغيير نظام الألوان

إذا لم تظهر القائمة التي تعرض على الشاشة على التلفاز الموصل، فقم بتغيير نظام الألوان للمشغل ليتطابق مع نظام الألوان في التلفاز (NTSC أو PAL).

قم أولاً بإيقاف تشغيل المشغل من خلال الضغط على (L) ثم اضغط على DISPLAY، وأدخل "0" باستخدام أزرار الأرقام، ثم اضغط على (L) على وحدة التحكم عن بعد. وتتم إعادة تشغيل المشغل وتظهر قائمة العناصر المعروضة على الشاشة على شاشة التلفاز.

لعرض أسطوانة VIDEO CD المزودة بوظائف التحكم في عرض الصورة (PBC)

عندما تقوم ببدء عرض أسطوانات VIDEO CD المزودة بوظائف التحكم في عرض الصورة (PBC)، تظهر قائمة الاختيار الخاص بك.

للعرض بدون استخدام وظائف التحكم في عرض الصورة (PBC)

اضغط على **▶▶▶▶/◀◀◀◀** أو أزرار الأرقام أثناء توقف المشغل عن العمل لاختيار مسار، ثم اضغط على الزر **▶** أو ENTER. للعودة إلى العرض باستخدام وظائف التحكم في عرض الصورة (PBC)، اضغط على الزر **■** مرتين، ثم اضغط على الزر **▶**.

الرقابة الأبوية (العرض المحدود)

يمكنك ضبط مستوى قيود للعرض.

1 اختر "→ مشغل"، ثم اضغط على ENTER.

قم بإدخال أو إعادة إدخال كلمة المرور المكونة من أربعة أرقام، ثم اضغط على ENTER.

2 اضغط على الزر \uparrow/\downarrow لاختيار "قياسي"، ثم اضغط على ENTER.

اضغط على الزر \uparrow/\downarrow لاختيار منطقة، ثم اضغط على ENTER.

عندما تحدد "→ أخرى"، حدد وأدخل رمزًا قياسيًا. ارجع إلى القائمة رموز منطقة الرقابة الأبوية في نهاية هذا الدليل.

3 اضغط على الزر \uparrow/\downarrow لاختيار "المستوى"، ثم اضغط على ENTER.

اضغط على الزر \uparrow/\downarrow لاختيار مستوى، ثم اضغط على ENTER.

تكتمل بذلك عملية إعداد الرقابة الأبوية.

كلما أصبحت القيمة أقل، كلما أصبحت القيود أشد.

لإيقاف تشغيل وظيفة الرقابة الأبوية، قم بضبط "المستوى" على "إغلاق".

إذا نسيت كلمة المرور الخاصة بك، فأدخل الرقم "199703" في مربع كلمة المرور، ثم اضغط على ENTER، ثم أدخل كلمة المرور المكونة من أربعة أرقام.

الإعداد

سريع: استخدم التهيئة السريعة Quick Setup لاختيار

اللغة المرغوبة للعرض على الشاشة، ونسبة الارتفاع إلى العرض لشاشة التلفزيون وإشارة مخرجات الصوت.

شخصي: بالإضافة إلى إعداد التهيئة السريعة Quick Setup، يمكنك ضبط إعدادات أخرى متعددة مختلفة (صفحة 6).

إعادة التهيئة الكلية: لإعادة الإعدادات الموجودة في "الإعداد" إلى الإعداد الافتراضي.

تقريب*²

لتكبير الصور حتى أربع مرات من الحجم الأصلي، قم بالتمرير باستخدام $\leftarrow/\uparrow/\downarrow/\rightarrow$.

الزاوية

لتغيير الزاوية.

مُط الصورة الشخصي

لاختيار جودة الصورة التي تناسب البرنامج الذي تشاهده بأفضل شكل ممكن.

قياسي: لعرض صورة قياسية.

ديناميكي: لإنتاج صورة متحركة داكنة من خلال زيادة تباين الصورة وكثافة الألوان.

نرويجية: لتحسين التفاصيل في المناطق الداكنة من خلال زيادة مستوى اللون الأسود.

→ **ذاكرة:** لضبط الصورة من خلال زيادة التفاصيل.

حدة الوضوح

زيادة المخطط التفصيلي للصورة لإنتاج صورة أكثر حدة.

إغلاق: لإلغاء هذا الخيار.

1 لتحسين المخطط التفصيلي.

2 لتحسين المخطط التفصيلي بشكل أفضل من 1.

*1 الطراز DVP-SR320 فقط

*2 للعودة إلى التشغيل العادي، اختر "إغلاق" أو اضغط على الزر

CLEAR.

*3 يتم إلغاء وضع التشغيل في الحالات التالية:

- فتح درج الأسطوانات.

- إيقاف المشغل.

العناصر الخاصة بأسطوانات DATA أو USB (الطراز DVP-SR320 فقط)

اسم العنصر ووظيفته

ألبوم

لاختيار الألبوم الذي يحتوي على ملفات الموسيقى والصور الفوتوغرافية المرغوب في عرضها.

ملف

لاختيار ملف الصورة الفوتوغرافية المطلوب عرضه.

ألبوم

لاختيار الألبوم الذي يحتوي على ملف الفيديو المطلوب عرضه.

ملف

لاختيار ملف الفيديو المطلوب عرضه.

التاريخ

لعرض التاريخ الذي تم فيه تصوير صورة باستعمال كاميرا رقمية.

المدة*

لتحديد الفترة التي يتم فيها عرض الشرائح على الشاشة.

التأثير*

لاختيار المؤثرات المراد استعمالها لتغيير الشرائح أثناء عرض الشرائح.

النمط 1: يتم إظهار الصور مع المؤثرات بشكل عشوائي.

النمط 2: تتحرك الصورة من أعلى اليسار إلى أسفل اليمين.

النمط 3: تتحرك الصورة من أعلى لأسفل.

النمط 4: تتحرك الصورة من اليسار إلى اليمين.

النمط 5: تتمدد الصورة من منتصف الشاشة.

إغلاق: لإيقاف تشغيل هذه الوظيفة.


العرض

شاشة قائمة التحكم

استخدم قائمة التحكم لاختيار وظيفة ومشاهدة المعلومات المتعلقة بها.

اضغط على DISPLAY.

لتغير شاشة قائمة التحكم، اضغط على DISPLAY مرة أخرى.

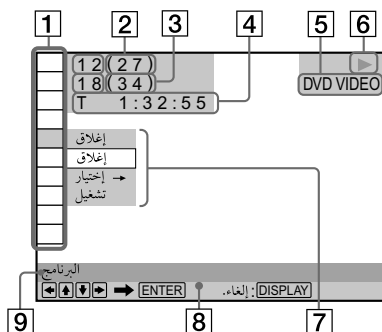

1 عناصر قائمة التحكم

2 العنوان الجاري تشغيله حالياً/إجمالي عدد العناوين

3 الفصل الجاري تشغيله حالياً/إجمالي عدد الفصول

4 وقت التشغيل

5 نوع الوسائط المحدد

6 حالة العرض

7 خيارات أيقونة العنصر المحدد/القائمة المحددة

8 رسالة التشغيل

9 عنصر قائمة التحكم المحدد

لائحة القائمة

العنصر اسم العنصر ووظيفته

العنوان/المشهد/المسار

فصل/الفهرس

المسار

لتحديد العنوان أو المشهد أو المسار أو الفصل أو الفهرس المطلوب تشغيله.

الوقت/النص

لفحص الزمن المنقضي وزمن العرض المتبقي.
أدخل رمز الوقت للبحث عن الصور والموسيقى (ملفات فيديو DVD وXvid فقط).

قرص/USB*

اختر "USB" أو "قرص" ليتم تشغيله.

القائمة الرئيسية/القائمة

(الطراز DVD VIDEO فقط)

القائمة الرئيسية: لعرض القائمة الرئيسية.
القائمة: لعرض القائمة.

أصلي/قائمة العرض

لاختيار نوع العنوان المطلوب تشغيله (وضع DVD-VR):
أصلي أو قائمة العرض محررة.

البرنامج*2،*3

لاختيار العنوان أو الفصل أو المسار المطلوب تشغيله بالترتيب المرغوب فيه.

1 اختر "→ إختيار"، ثم اضغط على ENTER، واختر العنوان (T) أو الفصل (C) أو المسار (T) الذي ترغب في برمجته، ثم اضغط على ENTER.

2 تكرر اختيار العنوان أو الفصل أو المسار.

3 اضغط على الزر ▶.

عشوائي*2،*3

لعرض العنوان أو الفصل أو المسار بترتيب عشوائي.

إعادة*2،*3

لتشغيل كل العناوين/المسارات/الألبومات أو عنوان/فصل/مسار/ألبوم/ملف بشكل متكرر.

إعادة A-B*2،*3

لتحديد الأجزاء التي ترغب في تشغيلها بشكل متكرر.

1 أثناء العرض، اختر "→ إختيار"، ثم اضغط على ENTER. يظهر شريط إعداد "إعادة A-B".

2 عند العثور على نقطة البداية (النقطة A)، اضغط على الزر ENTER.

3 عند الوصول إلى نقطة النهاية (النقطة B)، اضغط على الزر ENTER مرة أخرى.

الرقابة الأبوية

قم بضبط هذا الخيار لمنع العرض على هذا المشغل.

→ مشغل: يمكن تقييد عرض بعض أسطوانات

DVD VIDEO حسب مستوى محدد مسبقاً كحجم

المستخدمين. قد يتم حجب المشاهد أو استبدالها بمشاهد أخرى (الرقابة الأبوية).

→ كلمة المرور: قم بإدخال كلمة المرور الخاصة بك المكونة من أربعة أرقام مستخدماً أزرار الأرقام. أيضاً استخدم هذه القائمة لتغيير كلمة المرور.


تحذير

لتفادي خطر نشوب حريق أو حدوث صدمة كهربائية، لا تعرض هذا الجهاز للمطر أو البلل.

لتفادي حدوث صدمات كهربائية، لا تفتح الهيكل. أسند عمليات الصيانة الى الفنيين المختصين دون سواهم.

يجب الا يتم تغيير سلك التيار (الرئيسي) إلا لدى محل صيانة مختص.

يجب عدم تعريض البطاريات أو البطاريات المركبة لحرارة شديدة مثل أشعة الشمس أو النار أو ما شابه ذلك.

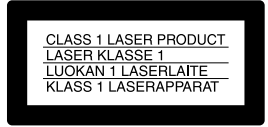

هذا الجهاز مصنف على أنه منتج ليزر من الفئة الأولى. وتوجد العلامة التي توضح أن هذا المنتج منتج ليزر من الفئة الأولى على السطح الخارجي الخلفي.

تنبيه

استعمال الأجهزة البصرية مع هذا الجهاز يزيد الخطورة على العيون. ونظرًا لكون أشعة الليزر المستخدمة في هذا المشغل لأسطوانات CD/DVD ضارة للعيون، لا تحاول تفكيك الهيكل.

اترك أعمال الخدمة للأشخاص المؤهلين فقط.

احتياطات

- لمنع خطر الحريق والصدمات الكهربائية، لا تضع أشياء مملوءة بالسوائل، مثل أواني الزهور، على الجهاز.
- لا يتم فصل الجهاز عن مصدر التيار الكهربائي المتردد طالما ظل الجهاز موصلًا بمآخذ التيار في الجدار، حتى ولو أوقفت تشغيل الجهاز نفسه.
- لا تترك هذا المشغل في حيز مغلق، مثل رف الكتب أو وحدة مشابهة له.
- قم بتركيب المشغل بحيث يتم فصل سلك التيار المتردد من مأخذ التيار بالحائط في الحال في حالة حدوث خلل.
- إذا تم إحضار الجهاز من مكان بارد إلى مكان دافئ مباشرة، أو تم وضعه في حجرة شديدة الرطوبة فقد تتكثف الرطوبة على العدسات داخل الجهاز. إذا حدث ذلك فقد لا يعمل الجهاز بطريقة صحيحة. في تلك الحالة، انزع الأسطوانة واترك الجهاز في وضع التشغيل لمدة نصف ساعة تقريبًا حتى تبخر الرطوبة.

البرق

لحماية هذا الجهاز بشكل إضافي أثناء نوبات البرق، أو عند تركه بلا عناية أو بلا استخدام لفترات طويلة من الزمن، أفضله من مأخذ التيار الجداري. هذا من أجل تفادي التلف الذي يحصل للجهاز بسبب البرق ومهورات خط القدرة.

ملاحظة حول الأسطوانات

لا تستخدم الأسطوانات التالية:
– الأسطوانة التي يكون شكلها غير قياسي (على سبيل المثال، على شكل بطاقة أو على شكل قلب).
– الأسطوانة التي توجد عليها ورقة أو ملصق.

رمز المنطقة

المشغل الذي لديك له رمز إقليم مطبوع على مؤخرة الو حدة ويستطيع عرض اسطوانات DVD المتوفرة في الأسواق (عرض فقط) التي تكون معلمة برموز الإقليم المعروف بها فقط. يستخدم هذا النظام لحماية حقوق الاستنساخ.

يمكن عرض اسطوانات DVD التجارية التي توجد عليها علامات (R) في هذا المشغل.

وقد يكون عرض بعض اسطوانات DVD مشهورًا نتيجة لقيود المناطق على الرغم من عدم كتابة أي رمز للمنطقة على اسطوانة DVD وذلك حسب الاسطوانة.



حقوق الطبع

- مصنعه بتصريح من معامل دولبي.
- "دولبي" و علامة د - الزدوجه علامات تجاريه لمعامل دولبي.
- ان "DVD+RW"، "DVD-RW"، "DVD+R DL"، "DVD+R"، "DVD-R"، "DVD VIDEO" و "CD" هما علامتان تجاريتان.
- تقنية تشفير الصوت MPEG Layer-3 وبراءات الاختراع الخاصة بها مرخصة من شركة Thomson و Fraunhofer IIS.
- تعد كافة العلامات التجارية الأخرى علامات تجارية لمالكها الفعليين.
- ان هذا المنتج مجاز حسب حزمة براءة الاختراع MPEG-4 VISUAL لاجل الاستخدام الشخصي والغير التجاري من قبل المستهلك لاجل فتح الشفرات الفيديوية بالتناغم مع معايير MPEG-4 VISUAL ("MPEG-4 VIDEO") الذي قام بتجويره مستهلك في عمل شخصي وليس للاغراض التجارية و/او تم الحصول عليه من مجهز فيديو مجاز من MPEG LA

لتجهيز MPEG-4 VIDEO. لم تمنح اجازة صراحة او يوحى بها لاي غرض اخر. يمكن الاطلاع على أي معلومات اضافية بضمنها تلك التي تتعلق بمواد الدعاية، والاستخدام الداخلي والتجاري والحصول على الاجازة من MPEG LA. انظر الموقع <http://www.mpegla.com>

حول هذا الدليل

"DVD" يمكن استعمالها كمصطلح عام يطلق على أسطوانات DVD التجارية، أسطوانات DVD+R DL /DVD+R /DVD+R (وضع VR+) وأسطوانات DVD-RW/DVD-R/DVD-RL (وضع VR، وضع الفيديو).



* 1 - 4 2 6 6 0 2 7 6 1 2 *

4-266-027-61(1)

Printed in China

<http://www.sony.net/>