

# CD/DVD Player

Reference Guide\_\_\_\_\_ GB

دليل المرجع \_\_\_\_\_ AR

DVP-SR170/DVP-SR370



# WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to dripping or splashing, and do not place objects filled with liquids, such as vases, on the appliance. To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

The mains lead must be changed only at a qualified service shop.

Do not expose batteries or appliances with battery-installed to excessive heat, such as sunshine and fire.

## CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD player is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.

Risk of explosion if the battery is replaced by an incorrect type.


## Precautions

- The player is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the player itself has been turned off.
- Do not install this player in a confined space, such as a bookshelf or similar unit.
- Install the player so that the AC power cord (mains lead) can be unplugged from the wall socket immediately in the event of trouble.
- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.

## Lightning

For added protection for this set during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the set due to lightning and power-line surges.

## Region code

Your player has a region code printed on the back of the unit and only will play commercial DVDs labelled with an identical region cord or .

## Copyrights, trademarks and software license information

- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- “DVD Logo” is a trademark of DVD Format/Logo Licensing Corporation.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

This product contains technology subject to certain intellectual property rights of Microsoft.

Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

- All other trademarks are trademarks of their respective owners.
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER FOR DECODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD (“MPEG-4 VIDEO”) THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)

## About this manual

Descriptions with “\*” in this manual are for DVP-SR370 only.

## For customers in UAE



This product is classified as a Class 1 Laser product under IEC 60825-1:2014.


This label is located on rear surface of the product.

# Control Menu Display

## Press DISPLAY.

To change the Control Menu display, press DISPLAY again.

The available items differ depending on the disc/file or the situation.

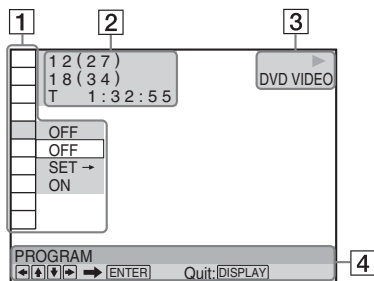

- 1 Control Menu items: "Menu list"  
Selected item options
- 2 Number of titles  
Number of chapters  
Playing time
- 3 Playback status  
Media type
- 4 Selected Control Menu item  
Operation message

## Menu list

- TITLE/SCENE/TRACK
- CHAPTER/INDEX
- TRACK
- TIME/TEXT
- DISC/USB\*
- TOP MENU/MENU
- ORIGINAL/PLAY LIST
- PROGRAM

Select "SET →," then press ENTER and select the title (T), chapter (C), or track (T) you want to programme, and press ENTER. Press .

- SHUFFLE
- REPEAT
- A-B REPEAT

Select "SET →," then press ENTER. Select point A and point B by pressing ENTER.

## PARENTAL CONTROL

Playback of some DVD VIDEOS can be limited according to a predetermined level such as the

age of the users. Scenes may be blocked or replaced with different scenes.

**PLAYER** →: Enter your 4-digit password, then press ENTER. Select the level in "LEVEL." The lower the value, the stricter the limitation. Select an area in "STANDARD." When you select "OTHERS →," select and enter a standard code. "PARENTAL CONTROL AREA CODE LIST"

**PASSWORD** →: Enter a 4-digit password. If you forget your password, enter "199703" in the password box, press ENTER, and then enter a new 4-digit password.

## SETUP

You can adjust various settings when the player is in stop mode.

**QUICK:** Adjusts the basic settings.

**CUSTOM:** "CUSTOM menu"

**RESET:** Returns the settings in "SETUP" to the default setting.

## ZOOM

During zoom, scroll using ///.

## ANGLE

## CUSTOM PICTURE MODE

Selects the picture quality.

**STANDARD:** Displays a standard picture.

**DYNAMIC:** Produces a bold dynamic picture.

**CINEMA:** Enhances details in dark areas.

**MEMORY** →: Adjusts the picture in greater detail.

## SHARPNESS

Exaggerates the outline of the image.

**1:** Enhances the outline.

**2:** Enhances the outline more than 1.

## Items for DATA files

- ALBUM (music/photo)
- FILE (photo)
- ALBUM (video)
- FILE (video)
- DATE
- INTERVAL

Specifies the duration for which the slides are displayed on the screen.

## EFFECT

Selects the effects to be used for changing slides during a slide show.

**MODE 1:** Random

**MODE 2:** From top left

**MODE 3:** From top

**MODE 4:** From left

**MODE 5:** From the centre

GB



## MEDIA

Selects the media type you want to play.

**VIDEO:** Plays video files.

**PHOTO (MUSIC):** Plays photo and music files as a slide show when music and photo files are placed in the same album.

**PHOTO:** Plays photo files.


**MUSIC:** Plays music files. To play music with lyrics, press **SUBTITLE** while playing music files that contain MP3 ID3 Lyrics.

## CUSTOM menu



### LANGUAGE SETUP

**OSD (On-Screen Display):** Switches the display language on the screen.

**MENU:** Selects the language for the DVD VIDEO's menu. When you select "OTHERS →," select and enter a language code.  "LANGUAGE CODE LIST"

**AUDIO:** Switches the language of the sound track recorded on the DVD VIDEO. When you select "ORIGINAL," the language given priority in the disc is selected.

**SUBTITLE:** Switches the language of the subtitle recorded on the DVD VIDEO. When you select "AUDIO FOLLOW," the language for the subtitles changes according to the language you selected for the sound track.



### SCREEN SETUP

**TV TYPE:** Selects the aspect ratio of the connected TV.

16:9




4:3 LETTER BOX



4:3 PAN SCAN



**COLOR SYSTEM (VIDEO CD):** Selects the colour system when you play a VIDEO CD. If your TV is the DUAL system, select "AUTO."

**SCREEN SAVER:** When set to "ON," the screen saver appears when the player is in pause or stop mode for 15 minutes. Press  to turn off the screen saver.

**BACKGROUND:** Selects the background colour or picture on the TV screen. If you set

"JACKET PICTURE," even though the disc does not contain a jacket picture, the "GRAPHICS" picture appears.



### CUSTOM SETUP

**AUTO STANDBY:** Sets the Auto Standby setting on or off. If you select "ON," the player enters standby mode when left in stop mode for more than 30 minutes.

**AUTO PLAY:** When set to "ON," the player automatically starts playback when the player is turned on.

**PAUSE MODE:** Selects the picture in pause mode for DVDs. Normally select "AUTO." When the picture is output in high resolution, set to "FRAME."

**TRACK SELECTION:** Gives the sound track which contains the highest number of channels priority when you play a DVD VIDEO on which multiple audio formats (PCM, MPEG audio, DTS, or Dolby Digital format) are recorded. If you select "AUTO," priority is given.

**MULTI-DISC RESUME:** Switches the Multi-disc Resume setting on or off. Resume playback can be stored in memory for up to 6 different DVD VIDEOS/VIDEO CDs. If you start the settings again, the resume point is cleared.



### AUDIO SETUP

**AUDIO DRC (Dynamic Range Control):** Set according the surrounding environment. Set to "TV MODE" when the smallest sounds are indiscernible, or set to "WIDE RANGE" when the listening environment is good, for example, in a home movie theatre.

**DOWNMIX:** Switches the method for mixing down to 2 channels when you play a DVD which has rear sound elements (channels), or is recorded in Dolby Digital format. Normally select "DOLBY SURROUND."

---

# Specifications

## System

Laser: Semiconductor laser

## Inputs/Outputs

- LINE OUT L/R (AUDIO): Phono jack
- LINE OUT (VIDEO): Phono jack
- USB\*: USB jack Type A, maximum current 500 mA (For connecting USB device)

## General

- Power requirements: 110-240 V AC, 50/60 Hz
- Power consumption:  
6 W (DVP-SR170)  
10 W (DVP-SR370)
- Dimensions (approx.): 270 × 38.5 × 207 mm (width/height/depth) incl. projecting parts
- Mass (approx.): 950 g
- Operating temperature: 5 °C to 35 °C
- Operating humidity: 25% to 80%

## Supplied accessories

- Audio/Video cord (1)
- Remote commander (remote) (1)
- R6 (size AA) battery (2)

Specifications and design are subject to change without notice.

---

## Playable file format

Video: MPEG-1 (Cyber-shot data)/MPEG-4 (simple profile)/Xvid

Photo: JPEG (DCF format)

Music: MP3 (except for mp3PRO)/WMA (except for WMA Pro)/AAC/LPCM/WAVE

Supported extensions: “.avi”, “.mpg”, “.mpeg”, “.mp4”, “.jpg”, “.mp3”, “.wma”, “.m4a”, “.wav”

Supported discs: DVD, DVD+RW/+R/+R DL (+VR mode), DVD-RW/-R/-R DL (VR mode/video mode), Music CD/Super VCD, CD-R/-RW

- DATA CDs recorded according to ISO 9660 Level 1/Level 2, or its extended format, Joliet.
- DATA DVDs recorded according to UDF.

- The player will play any file in the above, even if the file format differs. Playing such data may generate noise that can result in speaker damage.
- To play a complex hierarchy of folders may take some time. Create albums with no more than two hierarchies.
- The player does not play coded files such as DRM or Lossless compression.
- Some video, photo, and music files may not play, depending on the encoding/recording condition.
- The player will recognize a maximum of 200 albums and 600 files. It can recognize up to 300 music files and 300 photo files when “PHOTO (MUSIC)” is selected.
- The player cannot play a video file of size more than 720 (width) × 576 (height)/2 GB.
- The player may not play back the high bit rate video file on the DATA CD smoothly. You are recommended to play back using DATA DVD.

## About supported USB devices\*

- This player supports USB Mass Storage Class only.
- This player supports FAT formatted USB devices only (except exFAT).
- Some USB devices may not work with this player.

## Notes about USB devices\*

- When you remove a USB device, stop playback and disconnect it from the USB jack.
- If a USB device has a power switch, turn it on before connecting the USB device to the USB jack of the player.
- For some devices, LUN (Logical Unit Number) may appear. To change the LUN or original storage, press **II** **▶** **▶▶** when the list of albums or tracks is displayed.

## Note about recordable media

Some recordable media cannot be played on this player due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software. The disc will not play if it has not been correctly finalized. Also some DATA discs created in Packet Write format cannot be played.

### Note about copy protection

Images in DVD-VR mode with CPRM protection may not be played.

### Note on DVDs and VIDEO CDs

Some playback operations of DVDs and VIDEO CDs may be intentionally set by software producers. Since this player plays DVDs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the operating instructions supplied with the DVDs or VIDEO CDs.

### Note on discs

This unit is designed to play back discs that conform to the Compact Disc (CD) standard. DualDiscs and some music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard. Therefore, these discs may not be compatible with this unit.

### Note about the discs

Do not use the following discs:

- A disc that has a non-standard shape (e.g., card, heart).
- A disc with a label or sticker on it.

---

## Playing VIDEO CDs with PBC functions

When you start playing a VIDEO CD with PBC (Playback control) functions, the menu for your selection appears.

To play without using PBC, press **◀◀/▶▶** or the number buttons while the player is stopped to select a track, then press **▶** or ENTER. To return to PBC playback, press **■** twice, then press **▶**.

---

## Controlling TVs with the remote

While holding down TV **I/C**, press the number buttons to select your TV's manufacturer's code.

Sony 01	Panasonic 17, 49
Goldstar 76	Philips 06, 08, 72
Hitachi 24	Samsung 71
JVC 33	Sharp 29
LG 76	Toshiba 38

---

## Troubleshooting

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

### The power is not turned on.

→ Check that the power cord (mains lead) is connected securely.

### There is no picture/picture noise appears.

- Re-connect the connecting cord securely.
- The connecting cords are damaged.
- Check the connection to your TV and switch the input selector on your TV so that the signal from the player appears on the TV screen.
- Switch the player's colour system to match the colour system of the TV (NTSC or PAL). First turn off the player by pressing **I/C**. Next press DISPLAY, enter "0" using the number button, and then press **I/C** on the remote.

### There is no sound.

- Re-connect the connecting cord securely.
- The connecting cord is damaged.
- The player is in pause mode or in Slow-motion Play mode.
- The player is in fast forward or fast reverse mode.

### The remote does not function.

- The battery in the remote is weak.
- The remote is not pointed at the remote sensor **☒** on the player.
- When you operate the player by pressing buttons on the remote in sequence, press the buttons within 5 seconds of each other.

### The disc does not play.

- The disc is turned over. Insert the disc with the playback side facing down.
- The disc is skewed.
- The disc is dirty or flawed.
- The player cannot play certain discs.
- The region code on the DVD does not match the player.
- Moisture has condensed inside the player.
- The player cannot play a recorded disc that is not correctly finalized.

### The player does not operate properly.

- When static electricity, etc., causes the player to operate abnormally, unplug the player.

**“C:13:” appears on the screen.**

→ Clean the disc with a cleaning cloth or check its format.

**The player does not detect a USB device connected to the player.\***

→ The USB device is not securely connected to the player.

→ The USB device or a cord is damaged.

→ Disc mode has not been switched to USB mode.







لا يعمل المشغل بشكل صحيح.  
← عندما تتسبب الكهرباء الساكنة أو ما إلى ذلك في جعل  
المشغل يعمل بشكل غير طبيعي، فقم بفصل المشغل عن  
التيار.

يظهر "C:13" على الشاشة.  
← قم بتنظيف الأسطوانة بقطعة قماش تنظيف أو تحقق  
من تنسيقها.

لا يكتشف المشغل جهاز **USB** المتصل بالمشغل.\*  
← لا يتم توصيل جهاز USB بإحكام بالمشغل.  
← جهاز USB تالف أو السلك تالف.  
← لم يتم تحويل وضع الأسطوانة إلى وضع USB.

## ملاحظة حول عمليات العرض لأسطوانات DVD و VIDEO CD

قد تكون بعض عمليات عرض أسطوانات DVD و VIDEO CD مضبوطة بشكل مقصود من قبل منتجي البرامج. بما أن هذا المشغل يعرض أسطوانات DVD و VIDEO CD وفقاً لمحتويات الأسطوانة التي صممها منتجي البرامج، قد لا تتوفر بعض مزايا العرض. أيضاً، ارجع إلى تعليمات التشغيل المرفقة مع أسطوانات DVD أو VIDEO CD.

### ملاحظة حول الأسطوانات

هذه الوحدة مصممة لعرض الأسطوانات المتوافقة مع معيار الأسطوانة المدمجة (CD). الأسطوانات ثنائية الوجه وبعض الأسطوانات الموسيقية المشفرة بتقنيات حماية حقوق النشر لا تتطابق مع معيار الأسطوانات المدمجة (CD). ولذلك، قد لا تتوافق هذه الأسطوانات مع هذه الوحدة.

### ملاحظة حول الأسطوانات

لا تستخدم الأسطوانات التالية:  
- الأسطوانة التي يكون شكلها غير قياسي (على سبيل المثال، على شكل بطاقة أو على شكل قلب).  
- الأسطوانة التي توجد عليها ورقة أو ملصق.

## عرض أسطوانات VIDEO CD المزودة بوظائف التحكم في عرض الصورة (PBC)

عندما تقوم ببدء عرض أسطوانات VIDEO CD المزودة بوظائف التحكم في عرض الصورة (PBC)، تظهر قائمة الاختيار الخاص بك.  
للعرض بدون استخدام وظائف التحكم في عرض الصورة (PBC)، اضغط على **◀▶/▶▶** أو أزرار الأرقام أثناء توقف المشغل عن العمل لاختيار مسار، ثم اضغط على الزر **▶** أو **ENTER**. للعودة إلى العرض باستخدام وظائف التحكم في عرض الصورة (PBC)، اضغط على الزر **■** مرتين، ثم اضغط على الزر **▶**.

## التحكم في أجهزة التلفاز بواسطة وحدة التحكم عن بعد

أثناء الضغط مع الاستمرار على الزر **TV/⏻**، اضغط على أزرار الأرقام لاختيار رمز مصنع التلفاز الخاص بك.

49.17 Panasonic	01 Sony
72.08.06 Philips	76 Goldstar
71 Samsung	24 Hitachi
29 Sharp	33 JVC
38 Toshiba	76 LG

## استكشاف الأخطاء وإصلاحها

إذا كنت تعاني من أي من المشاكل التالية أثناء استخدام المشغل، فاستخدم دليل استكشاف الأخطاء وإصلاحها هذا للمساعدة في حل المشكلة قبل طلب الإصلاح. إذا استمرت المشكلة، فقم باستشارة أقرب موزع Sony لديك.

لا يتم تشغيل الطاقة.

← تأكد من أن يكون سلك التيار المتردد موصولاً بإحكام.

لا تظهر صورة/أو يظهر تشويش بالصورة.

← أعد توصيل سلك التوصيل بإحكام.

← أسلاك التوصيل تالفة.

← فحص التوصيل بالتلفاز وقم بتحويل محدد المدخلات

في جهاز التلفاز لديك بحيث تظهر الإشارة الصادرة من المشغل على شاشة التلفاز.

← قم بتغيير نظام الألوان للمشغل ليتطابق مع نظام الألوان في التلفاز (NTSC أو PAL).

قم أولاً بإيقاف تشغيل المشغل من خلال الضغط على **⏻**، ثم اضغط على **DISPLAY**، وأدخل "0" باستخدام أزرار الأرقام، ثم اضغط على **⏻** على وحدة التحكم عن بعد.

لا يوجد صوت.

← أعد توصيل سلك التوصيل بإحكام.

← أسلاك التوصيل تالفة.

← المشغل مضبوط على وضع التوقف المؤقت أو على وضع العرض بحركة بطيئة.

← المشغل مضبوط على وضع التراجع السريع أو التقديم السريع.

وحدة التحكم عن بعد لا تعمل.

← شحن البطاريات الموجودة في وحدة التحكم عن بعد ضعيف.

← لا يتم توجيه وحدة التحكم عن بعد إلى مستشعر الإشارات المرسلة من وحدة التحكم عن بعد **⏻** الموجود في الوحدة.

← عندما تقوم بتشغيل المشغل من خلال الضغط على الأزرار الموجودة في وحدة التحكم عن بعد بالتتابع، اضغط على الزر خلال 5 ثوانٍ من الضغط على الزر السابق له.

لا يمكن تشغيل الأسطوانة.

← الأسطوانة مقلوبة. قم بتحميل الأسطوانة بحيث يكون وجه التشغيل متجهًا لأسفل.

← الأسطوانة ملتوية.

← الأسطوانة متسخة أو بها عيب.

← لا يستطيع المشغل عرض أسطوانات معينة.

← رمز المنطقة الموجود على أسطوانة DVD غير متوافق مع المشغل.

← تراكمت الرطوبة داخل المشغل.

← لا يتمكن النظام من عرض أسطوانة مسجلة لم يتم اختتامها بشكل صحيح.

## المواصفات

### النظام

الليزر: ليزر شبه موصل

### الإدخال/المخرجات

• LINE OUT L/R (AUDIO): مقبس فونو

• LINE OUT (VIDEO): مقبس فونو

• USB: مقبس USB من النوع أ، الحد الأقصى للتيار 500 ميلي أمبير (لتوصيل جهاز USB)

### مواصفات عامة

• متطلبات الطاقة: 110-240 فولت تيار متردد، 60/50 هرتز  
• استهلاك الطاقة:

6 وات (DVP-SR170)

10 وات (DVP-SR370)

• الأبعاد (تقريبية): 270 × 38.5 × 207 مم

• العرض/الارتفاع/العمق) مما في ذلك الأجزاء البارزة

• الكتلة (تقريبية): 950 جم

• درجة الحرارة أثناء التشغيل: 5 درجات مئوية إلى 35 درجات مئوية

• الرطوبة أثناء التشغيل: 25% إلى 80%

### الملحقات المرفقة

• سلك الصوت/الفيديو (1)

• وحدة التحكم عن بعد (1)

• بطارية R6 (بجسم AA) (2)

المواصفات والتصميم عرضة للتغيير دون إشعار مسبق.

## تنسيق الملفات القابلة للعرض

فيديو: MPEG-1 (بيانات MPEG-4/Cyber-shot)

(ملف تعريف بسيط/Xvid)

الصور الفوتوغرافية: JPEG (تنسيق DCF)

الموسيقى: MP3 (باستثناء WMA/(mp3PRO (باستثناء

WAVE/LPCM/AAC/(WMA Pro

الامتدادات المدعومة: ".avi"، ".mpg"، ".mpeg"،

".mp4"، ".jpg"، ".mp3"، ".wma"، ".m4a"، ".wav"

الأسطوانات المدعومة: DVD أو DVD+RW/+R/+R DL (وضع VR/وضع

الفيديو) أو Music CD/Super VCD أو CD-R/-RW

• أسطوانات DATA CD المسجلة حسب ISO 9660

المستوى الأول/المستوى الثاني، أو التنسيق الممتد التابع له،

Joliet

• أسطوانات DATA DVD المسجلة حسب UDF.

• يقوم المشغل بتشغيل أي من الملفات المذكورة أعلاه، حتى إذا اختلف تنسيق الملف. يمكن أن يؤدي تشغيل مثل هذه البيانات إلى توليد ضوضاء يمكن أن تؤدي إلى الإضرار بالسماحة.

• يمكن أن يحتاج تشغيل تدرج من المجلدات يحتوي على ملفات مختلطة إلى بعض الوقت. لذا، قم بعمل الألبومات بحيث تشتمل على ما لا يزيد على مستويين من التدرج.

• لا يستطيع المشغل تشغيل الملفات التي تم ترميزها، مثل ضغط أو DRM Lossless.

• قد لا يتم تشغيل بعض ملفات الفيديو والصور الشخصية والموسيقى، بناءً على ظروف الترميز/التسجيل.

• يتعرف المشغل على 200 ألبوم و600 ملف بحد أقصى. كما يمكنه التعرف على ما يصل إلى 300 ملف موسيقى و300 ملف صور فوتوغرافية عند اختيار "صورة (موسيقى)".

• لا يمكن للمشغل تشغيل ملف فيديو حجمه أكبر من 720 (عرض) × 576 (ارتفاع) أو 2 جيجا بايت.

• يمكن ألا يقوم المشغل بتشغيل ملف الفيديو ذي معدل البت المرتفع على أسطوانات DATA CD بسلاسة.

وتوصيك بالعرض باستخدام DATA DVD.

### نبذة عن أجهزة USB المدعومة\*

• هذا المشغل يدعم USB Mass Storage Class فقط.

• يدعم هذا المشغل أجهزة USB بتنسيق FAT (باستثناء exFAT).

• قد لا تعمل بعض أجهزة USB مع هذا المشغل.

### ملاحظة حول أجهزة USB\*

• عند إزالة جهاز USB، أوقف العرض ثم قم بفصله من مقبس USB.

• إذا كان جهاز USB يحتوي على مفتاح طاقة، فقم بتشغيله قبل توصيل جهاز USB بمقبس USB في المشغل.

• بالنسبة لبعض الأجهزة، يمكن أن يظهر رقم الوحدة المنطقية (LUN). لتغيير رقم الوحدة المنطقية أو التخزين الأصلي، اضغط على **▶** **▶▶** عندما يتم عرض قائمة الألبومات أو المسارات.

### ملاحظة حول الوسائط القابلة للتسجيل

لا يمكن عرض بعض الوسائط القابلة للتسجيل على هذا

المشغل بسبب جودة التسجيل أو حالة الأسطوانة أو خصائص

جهاز التسجيل وبرنامج الترخيص. لا يمكن عرض الأسطوانة

إذا لم يتم تخطيمها بصورة صحيحة. وأيضاً لا يمكن تشغيل

بعض أسطوانات DATA التي تم إنشاؤها بتنسيق Packet Write.

### ملاحظة حول الحماية ضد النشر

قد لا يتم عرض الصور التي تحتوي على حماية CPRM في

وضع DVD-VR.

## التأثير

لاختيار المؤثرات المراد استعمالها لتغيير الشرائح أثناء عرض الشرائح.

**النمط 1:** عشوائي

**النمط 2:** من أعلى اليسار

**النمط 3:** من أعلى

**النمط 4:** من اليسار

**النمط 5:** من منتصف الشاشة

## وسيلة

لاختيار نوع الوسائط المطلوب عرضه.

**فيديو:** لتشغيل ملفات الفيديو.

**صورة (موسيقى):** لعرض ملفات الصور الفوتوغرافية وملفات الموسيقى في شكل عرض شرائح عندما يتم وضع ملفات الموسيقى والصور الفوتوغرافية في نفس الألبوم.  
**صورة:** لعرض ملفات الصور الفوتوغرافية.

**موسيقى:** لتشغيل ملفات الموسيقى. لتشغيل الموسيقى مصحوبة بكلمات الأغاني، اضغط على SUBTITLE لتشغيل ملفات الموسيقى التي تحتوي على ملفات موسيقى MP3 ID3.

## قائمة شخصية

### إعداد اللغة

العرض على الشاشة (العرض على الشاشة): لتغيير لغة العرض على الشاشة.

**القائمة:** حدد لغة قائمة DVD VIDEO. عندما تقوم باختيار "→ أخرى"، حدد وأدخل رمزاً للغة. "LANGUAGE" "CODE LIST"

**الصوت:** لتغيير اللغة الخاصة بمسار الصوت المسجل على أسطوانات DVD VIDEO. عند اختيار "أصلي"، يتم اختيار اللغة التي لها الأولوية في الأسطوانة.

**الترجمة النصية:** لتغيير لغة الترجمة المسجلة على أسطوانة DVD VIDEO. إذا قمت باختيار "الصوت التابع"، فتتغير اللغة الخاصة بالترجمات وفقاً للغة التي قمت باختيارها لمسار الصوت.

### إعداد الشاشة


**نوع التلفزيون:** لاختيار نسبة الارتفاع إلى العرض للتلفاز الموصل.



16:9



عرض نمط مستطيل 4:3



عرض نمط واسع 4:3

**نظام اللون (VIDEO CD):** لاختيار نظام الألوان عند تشغيل أسطوانة VIDEO CD. إذا كان جهاز التلفاز الخاص بك مزوداً بالنظام الثنائي DUAL، فقم باختيار "تلقائي".  
**حافظ الشاشة:** عند الضغط على وضع "تشغيل"، تظهر شاشة الحماية عندما يكون المشغل في وضع الإيقاف المؤقت أو التوقف لمدة 15 دقيقة. اضغط على الزر ▶ لإيقاف تشغيل شاشة الحماية.

**الخلفية:** لاختيار لون الخلفية أو صورة الخلفية المراد عرضها على شاشة التلفاز. إذا قمت بضغط "صورة محفظة القرص"، على الرغم من أن الأسطوانة لا تحتوي على صورة غلاف، فتظهر الصورة "الرسومات".

## إعداد شخصي

**وضع الاستعداد الآلي:** تشغيل أو إيقاف تشغيل إعداد الانتظار التلقائي. إذا اخترت "تشغيل"، فيدخل المشغل إلى وضع الانتظار عندما يتحرك في وضع التوقف لمدة تزيد على 30 ثانية.  
**تشغيل تلقائي:** عندما يتم اختيار "تشغيل" لهذا الخيار، يبدأ المشغل في العرض بشكل تلقائي عندما يتم تشغيل المشغل.  
**نمط التوقف المؤقت:** لاختيار الصورة في وضع التوقف المؤقت لأسطوانات DVD. اختر "تلقائي" بشكل طبيعي. عندما يتم إخراج الصورة بدقة عالية، قم باختيار "إطار".

**إختيار المسار:** لإعطاء الأولوية لمسار الصوت الذي يتضمن أعلى عدد قنوات عند تشغيل أسطوانة DVD VIDEO المسجلة بصيغ صوت متعددة (تنسيق PCM أو صوت MPEG أو DTS أو Dolby Digital). في حالة اختيار "تلقائي"، يتم منح الأولوية.

**قرص متعدد - متابعة:** لتشغيل أو إيقاف تشغيل إعداد متابعة قرص متعدد. يمكن تخزين عرض الاستئناف في الذاكرة لعدد يصل إلى 6 أسطوانات DVD VIDEO/VIDEO CD. إذا قمت ببدء تشغيل هذا الإعداد مرة أخرى، فسيتم مسح نقطة الاستئناف.

## إعداد الصوت


**وظيفة ضغط الصوت (DRC):** قم بضبط هذا الخيار حسب البيئة المحيطة. قم بضبط هذا الخيار على "نمط التلفزيون" عندما يتعذر تمييز أدق الأصوات، أو قم بضبط هذا الخيار على "مجال واسع" عندما تكون بيئة الاستماع جيدة، على سبيل المثال، في مسرح منزلي للأفلام.

**إشارة دولبي:** لتغيير أسلوب الخلط إلى قناتين عندما تقوم بعرض أسطوانة DVD التي تحتوي على عناصر صوت خلفية (قنوات)، أو التي تم تسجيلها بتنسيق Dolby Digital. اختر "دولبي محيطي" بشكل طبيعي.

## شاشة قائمة التحكم

### اضغط على DISPLAY.

لتغير شاشة قائمة التحكم، اضغط على DISPLAY مرة أخرى. تختلف العناصر المتاحة باختلاف القرص/الملف أو الحالة.

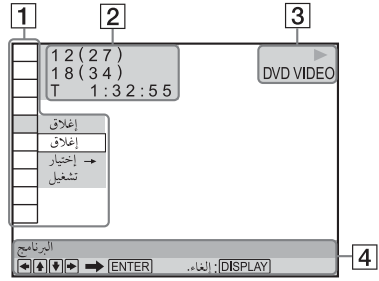

### 1 عناصر قائمة التحكم: "لائحة القائمة"

خيارات العنصر المحدد

### 2 عدد العناوين

عدد الفصول

وقت التشغيل

### 3 حالة العرض

نوع الوسائط

### 4 عنصر قائمة التحكم المحدد

رسالة التشغيل

## لائحة القائمة

العنوان/المشهد/المسار

فصل/الفهرس

المسار

الوقت/النص

قرص/USB\*

القائمة الرئيسية/القائمة

أصلي/قائمة العرض

البرنامج

اختر "→ إختيار"، ثم اضغط على ENTER، واختر العنوان (T) أو الفصل (C) أو المسار (T) الذي ترغب في برمجته، ثم اضغط على ENTER. اضغط على الزر ▶.

عشوائي

إعادة

إعادة A-B

اختر "→ إختيار"، ثم اضغط على ENTER. اختر النقط A والنقطة B من خلال الضغط على ENTER.

## الرقابة الأبوية

يمكن تقييد عرض بعض أسطوانات DVD VIDEO حسب مستوى محدد مسبقاً كحمر المستخدمين. قد يتم حجب المشاهد أو استبدالها بمشهد أخرى.

→ مشغل: أدخل كلمة المرور المكونة من أربعة أرقام، ثم اضغط على ENTER. حدد المستوى من "المستوى". كلما أصبحت القيمة أقل، كلما أصبحت القيود أشد. حدد إحدى المناطق من "قياسي". عندما تحدث "→ أخرى"، حدد وأدخل رمزاً قياسياً. "PARENTAL" "CONTROL AREA CODE LIST"

→ كلمة المرور: أدخل كلمة المرور المكونة من أربعة أرقام. إذا نسيت كلمة المرور الخاصة بك، فأدخل الرقم "199703" في مربع كلمة المرور، ثم اضغط على ENTER، ثم أدخل كلمة المرور المكونة من أربعة أرقام.

## الإعداد

يمكنك ضبط إعدادات متعددة عندما يكون المشغل في وضع إيقاف التشغيل.

سريع: لضبط الإعدادات الرئيسية.

شخصي: "قائمة شخصي"

إعادة التهيئة الكلية: لإعادة الإعدادات الموجودة في "الإعداد" إلى الإعداد الافتراضي.

## تقريب

أثناء التكبير/التصغير، قم بالتمرير باستخدام ←/↑/↓/→.

## الزاوية

تمط الصورة الشخصي

لاختيار جودة الصورة.

قياسي: لعرض صورة قياسية.

ديناميكي: لإنتاج صورة متحركة داكنة.

نرويجية: لتحسين التفاصيل في المناطق الداكنة.

→ ذاكرة: لضبط الصورة من خلال زيادة التفاصيل.

حدة الوضوح

زيادة المخطط التفصيلي للصورة.

1: لتحسين المخطط التفصيلي.

2: لتحسين المخطط التفصيلي بشكل أفضل من 1.

## عناصر ملفات DATA

ألبوم (الموسيقى/الصورة)

ملف (الصورة)

ألبوم (الفيديو)

ملف (الفيديو)

التاريخ

المدة

لتحديد الفترة التي يتم فيها عرض الشرائح على الشاشة.

## تحذير

لتفادي خطر نشوب حريق أو حدوث صدمة كهربائية، لا تعرض هذا الجهاز لقطرات السوائل أو الرذاذ، ولا تضع الأجسام المملوءة بالسوائل، مثل المزهريات، على الجهاز.

لتفادي حدوث صدمات كهربائية، لا تفتح الهيكل. أسند عمليات الصيانة إلى الفنيين المختصين دون سواهم.

يجب ألا يتم تغيير سلك التيار (الرئيسي) إلا لدى محل صيانة مختص.

لا تعرض البطاريات أو الأجهزة المركب بها بطاريات حرارة شديدة، مثل أشعة الشمس والنار.

### تنبيه

استعمال الأجهزة البصرية مع هذا الجهاز يزيد الخطورة على العيون. ونظراً لكون أشعة الليزر المستخدمة في هذا المشغل لأسطوانات DVD/CD ضارة للعيون، لا تحاول تفكيك الهيكل.

اترك أعمال الخدمة للأشخاص المؤهلين فقط.

خطر وقوع انفجار إذا تم استبدال البطارية بنوع غير صحيح.


### احتياطات

- لا يتم فصل الجهاز عن مصدر التيار الكهربائي المتردد طالما ظل الجهاز موصلاً بمأخذ التيار في الجدار، حتى ولو أوقفت تشغيل الجهاز نفسه.
- لا تترك هذا المشغل في حيز مغلق، مثل رف الكتب أو وحدة مشابهة له.
- قم بتركيب المشغل بحيث يتم فصل سلك التيار المتردد من مأخذ التيار بالحائط في الحال في حالة حدوث خلل.
- إذا تم إحضار الجهاز من مكان بارد إلى مكان دافئ مباشرة، أو تم وضعه في حجرة شديدة الرطوبة فقد تتكثف الرطوبة على العدسات داخل الجهاز. إذا حدث ذلك فقد لا يعمل الجهاز بطريقة صحيحة. في تلك الحالة، انزع الأسطوانة وارك الجهاز في وضع التشغيل لمدة نصف ساعة تقريباً حتى تتبخر الرطوبة.

### البرق

لحماية هذا الجهاز بشكل إضافي أثناء نوبات البرق، أو عند تركه بلا عناية أو بلا استخدام لفترات طويلة من الزمن، أفضله من مأخذ التيار الجداري. هذا من أجل تفادي التلف الذي يحصل للجهاز بسبب البرق وتمورات خط القدرة.

### رمز المنطقة

المشغل الذي لديك له رمز إقليم مطبوع على مؤخرة الوحدة ويستطيع عرض أسطوانات DVD المتوفرة في الأسواق التي تكون معلمة برمز الإقليم المطابق لها فقط أو .

## حقوق الطبع والعلامات التجارية ومعلومات ترخيص

### البرامج

- مصنعه بتصريح من معامل دولبي. "دولبي" و علامه د - الرذوجه علامات تجارية لمعامل دولبي.
- تعد "DVD Logo" علامة تجارية لشركة DVD Format/Logo Licensing Corporation.
- تقنية تشفير الصوت MPEG Layer-3 وبراءات الاختراع الخاصة بها مرخصة من شركة Thomson and Fraunhofer IIS.
- Windows Media هي إما علامة تجارية مسجلة أو علامة تجارية لشركة Microsoft Corporation في الولايات المتحدة الأمريكية و/أو الدول الأخرى.
- يحتوي هذا المنتج على تقنية خاضعة لحقوق ملكية فكرية محددة لشركة Microsoft.
- يحظر استخدام هذه التقنية أو توزيعها خارج نطاق هذا المنتج دون الحصول على الترخيص (التراخيص) المناسب من شركة Microsoft.
- تعد كافة العلامات التجارية الأخرى علامات تجارية للمالكها الفعليين.
- إن هذا المنتج مجاز حسب حزمة براءة الاختراع MPEG-4 VISUAL لأجل الاستخدام الشخصي والغير التجاري من قبل المستهلك لأجل فتح شفرات الفيديو بالتناغم مع معايير MPEG-4 ("MPEG-4 VIDEO") الذي قام بتشفيره مستهلك في عمل شخصي وليس للأغراض التجارية و/أو تم الحصول عليه من مجهز فيديو مجاز من MPEG LA لتجهيز MPEG-4 VIDEO. لم تمنح أجازة صراحة أو يوحى بها لأي غرض آخر. يمكن الاطلاع على أي معلومات إضافية بضمناها تلك التي تتعلق بمواد الدعاية، والاستخدام الداخلي والتجاري والحصول على إجازة من MPEG LA, LLC. انظر الموقع <http://www.mpegla.com>

### حول هذا الدليل

الأوصاف المميزة بالعلامة "\*" في هذا الدليل خاصة بالطرز DVP-SR370 فقط.

### للعملاء في الإمارات العربية المتحدة

CLASS 1 LASER PRODUCT

يصف هذا المنتج كمنتج ليزر من الفئة الأولى تحت IEC 60825-1:2014.

يقع هذا التصنيف على الجزء الخلفي من سطح المنتج.

# LANGUAGE CODE LIST

1027	Afar	1181	Frisian	1345	Malagasy	1507	Samoan
1028	Abkhazian	1183	Irish	1347	Maori	1508	Shona
1032	Afrikaans	1186	Scots Gaelic	1349	Macedonian	1509	Somali
1039	Amharic	1194	Galician	1350	Malayalam	1511	Albanian
1044	Arabic	1196	Guarani	1352	Mongolian	1512	Serbian
1045	Assamese	1203	Gujarati	1353	Moldavian	1513	Siswati
1051	Aymara	1209	Hausa	1356	Marathi	1514	Sesotho
1052	Azerbaijani	1217	Hindi	1357	Malay	1515	Sundanese
1053	Bashkir	1226	Croatian	1358	Maltese	1516	Swedish
1057	Byelorussian	1229	Hungarian	1363	Burmese	1517	Swahili
1059	Bulgarian	1233	Armenian	1365	Nauru	1521	Tamil
1060	Bihari	1235	Interlingua	1369	Nepali	1525	Telugu
1061	Bislama	1239	Interlingue	1376	Dutch	1527	Tajik
1066	Bengali;	1245	Inupiak	1379	Norwegian	1528	Thai
	Bangla	1248	Indonesian	1393	Occitan	1529	Tigrinya
1067	Tibetan	1253	Icelandic	1403	(Afan)Oromo	1531	Turkmen
1070	Breton	1254	Italian	1408	Oriya	1532	Tagalog
1079	Catalan	1257	Hebrew	1417	Punjabi	1534	Setswana
1093	Corsican	1261	Japanese	1428	Polish	1535	Tonga
1097	Czech	1269	Yiddish	1435	Pashto; Pushto	1538	Turkish
1103	Welsh	1283	Javanese	1436	Portuguese	1539	Tsonga
1105	Danish	1287	Georgian	1463	Quechua	1540	Tatar
1109	German	1297	Kazakh	1481	Rhaeto-	1543	Twi
1130	Bhutani	1298	Greenlandic		Romance	1557	Ukrainian
1142	Greek	1299	Cambodian	1482	Kirundi	1564	Urdu
1144	English	1300	Kannada	1483	Romanian	1572	Uzbek
1145	Esperanto	1301	Korean	1489	Russian	1581	Vietnamese
1149	Spanish	1305	Kashmiri	1491	Kinyarwanda	1587	Volapük
1150	Estonian	1307	Kurdish	1495	Sanskrit	1613	Wolof
1151	Basque	1311	Kirghiz	1498	Sindhi	1632	Xhosa
1157	Persian	1313	Latin	1501	Sangho	1665	Yoruba
1165	Finnish	1326	Lingala	1502	Serbo-Croatian	1684	Chinese
1166	Fiji	1327	Laothian	1503	Singhalese	1697	Zulu
1171	Faroese	1332	Lithuanian	1505	Slovak	1703	Not specified
1174	French	1334	Latvian; Lettish	1506	Slovenian		

ISO 639: 1988 (E/F) standard

# PARENTAL CONTROL AREA CODE LIST

2044	Argentina	2165	Finland	2362	Mexico	2149	Spain
2047	Australia	2174	France	2376	Netherlands	2499	Sweden
2046	Austria	2109	Germany	2390	New Zealand	2086	Switzerland
2057	Belgium	2248	India	2379	Norway	2528	Thailand
2070	Brazil	2238	Indonesia	2427	Pakistan	2184	United Kingdom
2079	Canada	2254	Italy	2424	Philippines		
2090	Chile	2276	Japan	2436	Portugal		
2092	China	2304	Korea	2489	Russia		
2115	Denmark	2363	Malaysia	2501	Singapore		



\* 1 - 4 5 6 6 3 3 8 4 3 A \*

4-566-338-43(1)