


Operating Instructions

Glass Sound Speaker
LSPX-S2




4-748-323-61(1)

Having fun with your speaker

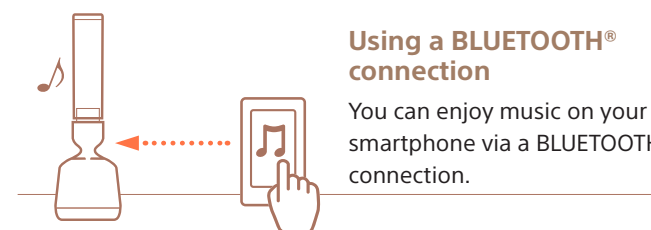

Using a BLUETOOTH® connection
You can enjoy music on your smartphone via a BLUETOOTH connection.

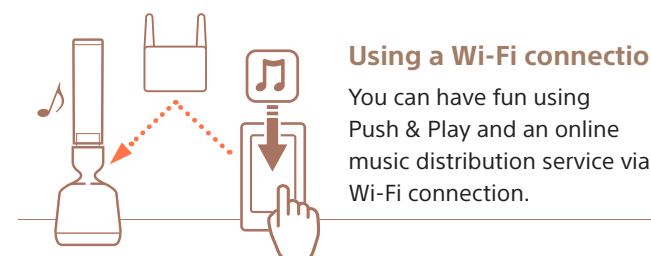


Using a Wi-Fi connection
You can have fun using Push & Play and an online music distribution service via a Wi-Fi connection.

Charging

When using the unit for the first time, be sure to charge it for at least 1 hour.

- 1 Connect the supplied micro USB cable and the supplied USB AC adaptor to the DC IN 5 V jack, and then plug the AC power cord (mains lead) into a wall outlet.

When you start to charge the unit while it is off, the (on/standby) indicator (orange) lights. When charging is complete, the indicator turns off. When the rechargeable battery is running low, the (on/standby) indicator (red) flashes and an alert sounds to let you know that the rechargeable battery is running low. After a short while, the unit automatically turns off.

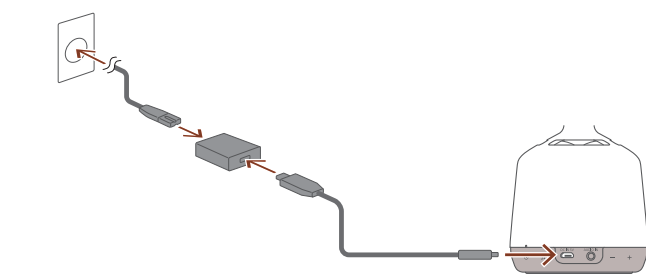


Hint

- If you start to charge the unit while it is off, the (on/standby) indicator (orange) lights. When charging is complete, the indicator turns off.
- When the rechargeable battery is running low, the (on/standby) indicator (red) flashes and an alert sounds to let you know that the rechargeable battery is running low. After a short while, the unit automatically turns off.

Turning the Power On/Off

- 1 Press the (on/standby) button.
The (on/standby) indicator (white) slowly flashes.

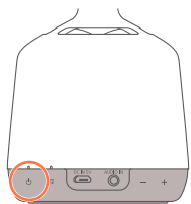

Listening to Music from Your Smartphone or Other Device via a BLUETOOTH Connection

Connecting with BLUETOOTH devices


(Select how to connect from pairing type **A** or **B**. Subsequent devices are paired the same way.)

A Pairing and connecting with a BLUETOOTH device


You can operate a BLUETOOTH device to pair it with the unit.

- 1 Press and hold the BLUETOOTH/ PAIRING button for about 2 seconds.

The unit will make a sound to indicate that pairing mode has been entered.

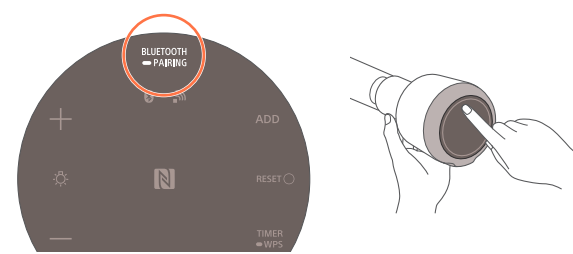

- 2 Search for the unit from the BLUETOOTH device and select [LSPX-S2].

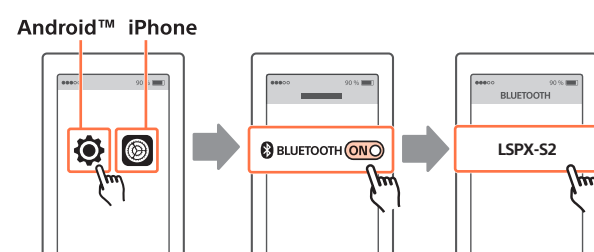

- 3 Listen for the sound that indicates pairing was successful.


The BLUETOOTH indicator (white) also lights.

Hint
If the indicator stops flashing in the middle of the operation, start again from step 1.

B Connecting with a BLUETOOTH device by using One-touch (NFC)

Even when the unit is turned off, you can pair and connect by simply touching your smartphone to the unit.

- 1 Unlock the screen of your BLUETOOTH device and touch it to the N marked area on the bottom of the unit.

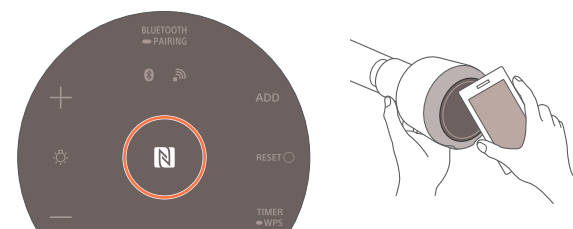

- 2 Follow the on-screen instructions to connect the device, and then listen for the sound that indicates pairing was successful.

The BLUETOOTH indicator (white) also lights.



Disconnecting by using One-touch

Touch the N marked area with the device again.

If you cannot establish a connection

- Move the BLUETOOTH device slowly over the N marked area.
- If the BLUETOOTH device is in a case, remove it from the case.


Listening to Music

- 1 Start playing music on the BLUETOOTH device and adjust the volume.

First, do the procedure in "Connecting with BLUETOOTH Devices" to connect to a BLUETOOTH device.

- 2 Adjust the volume by pressing the +/- (volume) buttons.

Press and hold the buttons for rapid adjustments.

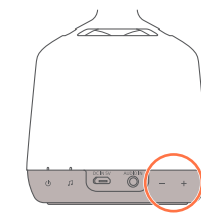

Hint

If sound is interrupted, or if static is apparent, the unit may be experiencing interference.
Either move the unit to a different location or bring the BLUETOOTH device closer to the unit.

Listening to music using 2 speakers (Speaker Add function)

For detailed instructions, refer to the Help Guide.


Now you can play back the music that is on the BLUETOOTH device. To enjoy an online music distribution service while connected to Wi-Fi, refer to "Listening to a Music Distribution Service (Spotify) Online via a Wi-Fi Connection."

Listening to a Music Distribution Service (Spotify) Online via a Wi-Fi Connection


Connecting to a Wi-Fi Network (Select either procedure **A** or **B**.)

A Connecting to Wi-Fi through a Wi-Fi router that has a Wi-Fi Protected Setup™ (WPS) button


- 1 Place the unit near the Wi-Fi router, and then turn on the unit.
- 2 Press and hold the unit's TIMER/ WPS button for about 2 seconds until you hear beeping.

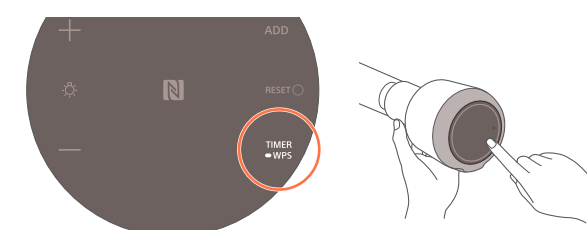

- 3 Press the Wi-Fi router's Wi-Fi Protected Setup™ (WPS) button within 90 seconds.

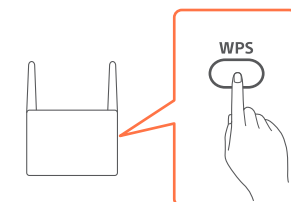


- 4 Confirm that the network indicator (white) lights.
The Wi-Fi connection is complete.

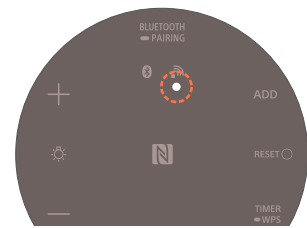

B Using your smartphone to connect to a Wi-Fi network

- 1 Install Sony | Music Center on your smartphone.



- 2 Connect your smartphone to the wireless LAN router.


- 3 Connect your smartphone with the unit via BLUETOOTH wireless technology.

Do the procedure in "Connecting with BLUETOOTH Devices" to connect to a BLUETOOTH device.

- 4 Follow the on-screen instructions on Sony | Music Center to connect to Wi-Fi.

Some wireless LAN routers have multiple SSIDs. Set your smartphone and the unit to the same SSID.

- 5 Confirm that the network indicator (white) lights.
The Wi-Fi connection is complete.

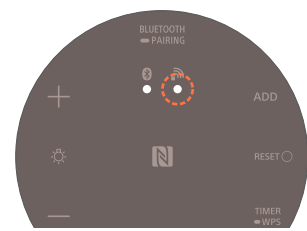

Enjoying an Online Music Distribution Service (Spotify)

You can play music through the unit from an online music distribution service (Spotify). You must install the Spotify app on your smartphone and complete the membership registration to use your smartphone to enjoy Spotify (Spotify Connect function).

- 1 Connect the unit to a Wi-Fi network.


- 2 Start Spotify, which is installed on the smartphone, tablet, or computer connected to the same Wi-Fi as the unit.

For details about Spotify, access the following website.
www.spotify.com/connect

- 3 Start playing music, and then select [Devices Available].

- 4 Select [LSPX-S2] and listen to the music from the unit.

When the Spotify Connect function is enabled, the connection icon () lights green.
When the connection is complete, the network indicator on the bottom of the unit lights green.

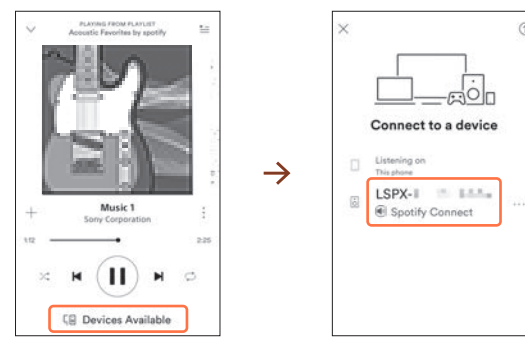

Hint

- If sound is interrupted, or if static is apparent, the unit may be experiencing interference or the signal may be weak.
- Check that the unit is not surrounded by metal.
- Also, keep the unit away from microwave ovens, other Wi-Fi devices, or any similar devices.

Note


- The details of services offered by Spotify may differ, depending on your country or region.
- Specifications for the app and screen designs are subject to change without prior notice.

Using Push & Play to Enjoy Music from an Online Music Distribution Service (Spotify)

After using the Spotify Connect function or registering your favorite music, you can enjoy music by simply pressing the (Push & Play) button, even if the unit is not on.


- 1 After reaching step 3 of "Enjoying an Online Music Distribution Service (Spotify)", press the (Push & Play) button.

The (Push & Play) indicator (white) lights.

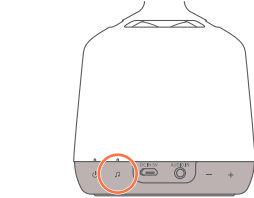

- 2 Adjust the volume by pressing the +/- (volume) buttons.

Press and hold the buttons for rapid adjustments.
You can also use Spotify to adjust the volume.

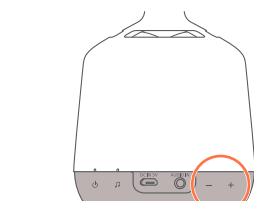

- 3 Navigate Sony | Music Center and select the music to play back when you use Push & Play.

- You can select from the following.
- Last played music (default setting)
- Recommended by the Glass sound speaker
- Favorite music

Registering to Your Favorite Music


While playing back music, press the (Push & Play) button for about 2 seconds.
You will hear a notification sound when the registration is complete. The (Push & Play) indicator (white) stays lit after flashing several times.

Various Functions

Adjusting the Brightness of the Illumination LED

Press the (illumination LED) +/- buttons.


Press and hold a button for rapid adjustments.

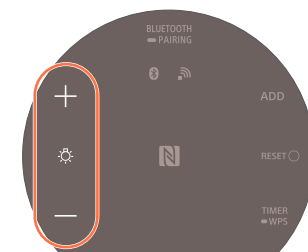

Enjoying the Candle Light Mode

Press and hold the (on/standby) button for about 2 seconds while the speaker is on.

You can set the illumination LED so that it shines and glimmers like a candle's light.

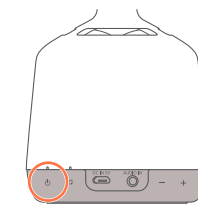

Turning Off the Candle Light Mode

Once again, press and hold the (on/standby) button for about 2 seconds.

Choosing the Intensity of the Candle Light Mode

While the candle light mode is on, press the (illumination LED) +/- buttons to select the intensity you like the most from the 2 types.


Note

You cannot set the brightness of the illumination LED while the unit is in the candle light mode, even if you use Sony | Music Center or press the unit's (illumination LED) +/- buttons. Turn off the candle light mode first, and then set the brightness of the illumination LED.

Using the Sleep Timer

Press the TIMER/ WPS button.

A sound will indicate that the Sleep Timer has been set, and the power will automatically turn off after 60 minutes.

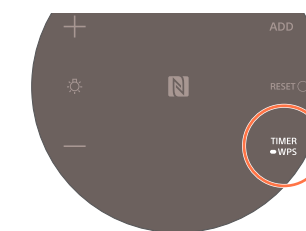

Canceling the Sleep Timer

Press the TIMER/ WPS button again. A sound will indicate that the Sleep Timer has been canceled.

Hint

You can also use Sony | Music Center to set the duration of the timer.

Listening to Music from an External Device

- 1 Connect a portable audio device, or similar device, to the AUDIO IN jack.

Use a commercially available connection cord (stereo mini ↔ stereo mini, no resistance).

- 2 Start playback on the connected device.

Hint

To output music from a BLUETOOTH device with the connection cord still in the AUDIO IN jack, either press the BLUETOOTH/ PAIRING button on the bottom of the unit or use Sony | Music Center to switch the BLUETOOTH device to the one you want to use for playback.
If the volume is low, adjust the volume for both the unit and the connected audio device.

Using Sony | Music Center to Do Detailed Settings

Sony | Music Center is an app for operating Sony audio devices compatible with Sony | Music Center from your smartphone.

Features That Use Sony | Music Center Other Than Those Introduced in This Document

- Settings for the Wireless Multi-Room function
- Settings for the Wireless Stereo function
- Settings for the Speaker Add function
- Settings for the BASS BOOST function
- Settings for Network Standby

How to Download

Search for "Sony Music Center" in Google Play (Play Store) or the App Store, and download.
For details, refer to the help page for Sony | Music Center.

<http://www.sony.net/smcqa/>




Note


The operations that Sony | Music Center can perform vary depending on the audio device. Specifications for the app are subject to change without prior notice.

Help Guide Information

Refer to the Help Guide for more easy-to-understand troubleshooting tips. Use a computer or smartphone to access it.

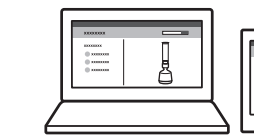

http://rd1.sony.net/help/speaker/lspx-s2/h_zz/

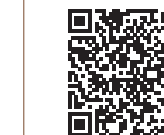

Troubleshooting

For details, refer to "Troubleshooting" in the Help Guide. You may also be able to solve problems by charging the unit.

Charging the Unit

If the power does not turn on or you have not used the unit for a long time, securely connect the supplied micro USB cable and the supplied USB AC adaptor to the DC IN 5 V jack, plug the USB AC adaptor into a wall outlet, and then charge the unit at least 1 hour before turning on the power.

Except in some cases, you cannot charge the unit by connecting the unit to the USB terminal of a computer.

Auto Standby Function

When about 15 minutes have passed under the following conditions, the unit automatically turns off. This is not a malfunction. The Auto Standby function is set on at the time of purchase. You can switch the Auto Standby function on and off from the settings menu in Sony | Music Center.

- The unit is not in use.
- Music (audio) is not being played back by a device connected via BLUETOOTH wireless technology.
- The music (audio) of an audio device connected to the AUDIO IN jack is not playing back, or the music (audio) output of an audio device is remarkably weak.

Checking the Wi-Fi Connection's Settings

If the (Push & Play) indicator flashes in red and an error alert sounds when you press the (Push & Play) button, consider the following situations.

- You have never used the Spotify Connect function before.
 - The unit is not connected to Wi-Fi.
- Follow the procedure under "Connecting to a Wi-Fi Network" and do the settings again.

Playing Music Using a BLUETOOTH Connection After You Have Played Music Using a Wi-Fi Connection

Make sure that the BLUETOOTH indicator on the bottom of this unit is not turned off.

If the BLUETOOTH indicator is turned off, press the BLUETOOTH/ PAIRING button on the bottom of the unit and confirm that the BLUETOOTH indicator lights.

Resetting the Unit

When the unit is not working properly, resetting it may resolve some issues. To reset the unit, use a pointed object, such as a pin, to press the RESET button.

While the USB AC adaptor is not connected, press the RESET button, and then press the (on/standby) button for at least 3 seconds to turn on the unit.



Restarting the Unit

If the unit's (on/standby) indicator is flashing red, the unit is in protect mode. Wait a while, and then press the (on/standby) button again to turn on the power.
If the problem persists, even after turning on the power again, contact your nearest Sony dealer.

Initializing the Unit

If you have checked all of the relevant items in "Troubleshooting" and the unit still does not operate normally, or if setup failed, initialize the unit to return it to its defaults.

While the unit is on, press and hold the unit's (on/standby) button and (volume) button at the same time for at least 4 seconds to initialize the unit.

Initialization requires tens of seconds. When initialization is complete, the unit's (on/standby) indicator and the illumination LED light, and the power stays on.

Since all of the BLUETOOTH pairing information and network settings are deleted when you initialize the unit, you must do all of the settings again.

คู่มือการใช้งาน

Glass Sound Speaker (ลำโพงแก้ว)
LSPX-S2



สนุกสนานไปกับลำโพงของท่าน

วิธีใช้การเชื่อมต่อ BLUETOOTH®

ท่านสามารถเพลิดเพลินกับการฟังเพลงในสมาร์โฟนของท่านผ่านการเชื่อมต่อ BLUETOOTH

วิธีใช้การเชื่อมต่อ Wi-Fi

ท่านสามารถสนุกสนานไปกับการใช้ Push & Play และบริการเผยแพร่เพลงออนไลน์ผ่านการเชื่อมต่อ Wi-Fi

การฟังเพลงจากสมาร์โฟนของท่านหรืออุปกรณ์อื่นผ่านการเชื่อมต่อ BLUETOOTH

การเชื่อมต่อกับอุปกรณ์ BLUETOOTH


(เลือกวิธีเชื่อมต่อจากการจับคู่ประเภท **A** หรือ **B** อุปกรณ์ที่ตามมาภายหลังจะถูกจับคู่ในลักษณะเดียวกัน)

A การจับคู่และการเชื่อมต่ออุปกรณ์ BLUETOOTH


ท่านสามารถใช้งานอุปกรณ์ BLUETOOTH เพื่อจับคู่กับลำโพง

1 กดปุ่ม BLUETOOTH/PAIRING ค้างไว้อย่างน้อย 2 วินาที

เครื่องจะส่งเสียงแจ้งว่าได้เข้าสู่โหมดจับคู่แล้ว

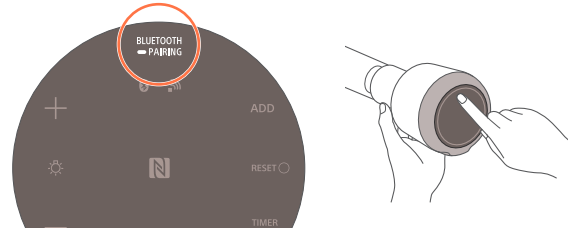

2 ค้นหาชื่อลำโพงจากอุปกรณ์ BLUETOOTH และเลือก [LSPX-S2]

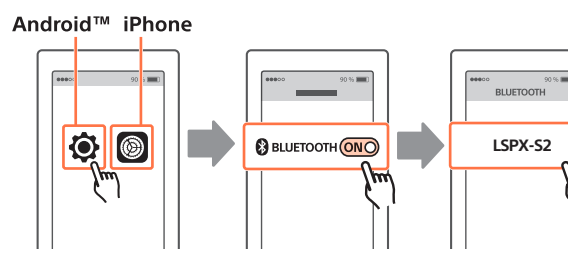

3 ฟังเสียงที่บ่งบอกว่าการจับคู่สำเร็จแล้ว

ไฟแสดงสถานะ: BLUETOOTH (สีขาว) จะติดสว่างเช่นกัน


ข้อแนะนำ

หากไฟแสดงสถานะหยุดกะพริบระหว่างการทำงาน ให้เริ่มใหม่ตั้งแต่ขั้นตอนที่ 1

B การเชื่อมต่ออุปกรณ์ BLUETOOTH ด้วย One-touch (NFC)


แม้ว่าเครื่องจะปิด แต่ท่านยังสามารถจับคู่และเชื่อมต่อได้ เพียงแตะสมาร์โฟนเข้ากับเครื่อง

1 ปลดล็อกหน้าจอบนอุปกรณ์ BLUETOOTH ของท่าน และนำอุปกรณ์มาสัมผัสบริเวณเครื่องหมาย N ที่ด้านล่างของเครื่อง

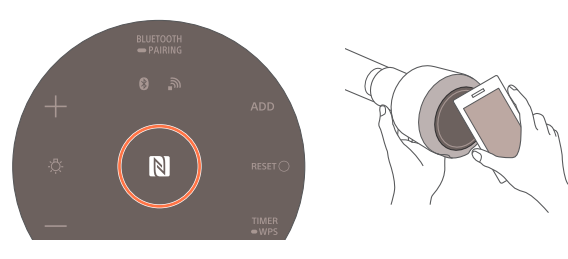

2 ทำตามคำแนะนำบนหน้าจอเพื่อเชื่อมต่ออุปกรณ์ แล้วฟังเสียงที่ระบุว่าการจับคู่สำเร็จแล้ว

ไฟแสดงสถานะ: BLUETOOTH (สีขาว) จะติดสว่างเช่นกัน

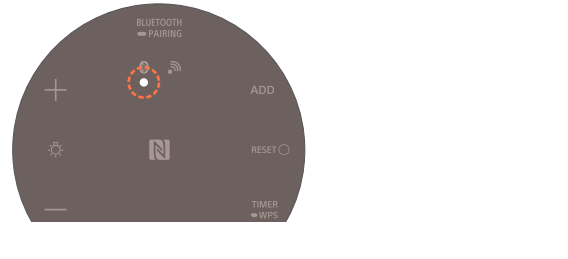


การชาร์จ

เมื่อใช้งานเครื่องเป็นครั้งแรก โปรดชาร์จอย่างน้อย 1 ชั่วโมง

1 ต่อสายไมโคร USB ที่ให้มาพร้อมกับอุปกรณ์และอะแดปเตอร์ AC พอร์ต USB ที่ให้มาพร้อมกับอุปกรณ์ เข้ากับช่องเสียบ DC IN 5 V จากนั้นจึงเสียบสายไฟ AC เข้ากับเต้าเสียบที่ผนัง

เมื่อท่านเริ่มชาร์จเครื่องเป็นครั้งแรกหลังจากที่ซื้อ เครื่องจะเปิดโดยอัตโนมัติ ไฟแสดงสถานะ: (เปิด/พร้อมใช้งาน) (สีขาว) จะกะพริบซ้ำ ๆ เมื่อการชาร์จเสร็จสมบูรณ์ ไฟแสดงสถานะ: (เปิด/พร้อมใช้งาน) (สีแดง) จะติดสว่าง

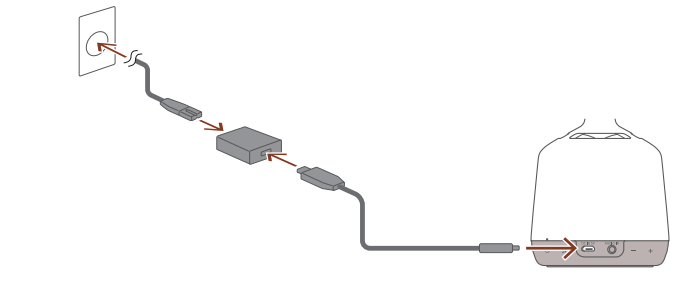


ข้อแนะนำ

- หากท่านเริ่มชาร์จเครื่องในขณะที่เครื่องปิดอยู่ ไฟแสดงสถานะ: (เปิด/พร้อมใช้งาน) (สีส้ม) จะติดสว่าง เมื่อการชาร์จเสร็จสมบูรณ์ ไฟแสดงสถานะจะดับลง
- เมื่อแอดเดอ์บระบบชาร์จไฟได้เหลือน้อย ไฟแสดงสถานะ: (เปิด/พร้อมใช้งาน) (สีแดง) จะกะพริบ เสียงเตือนจะแจ้งให้ท่านทราบว่าแบตเตอรี่พร้อมชาร์จไฟได้ใกล้หมดแล้ว หลังจากนั้น เครื่องจะปิดโดยอัตโนมัติ

การเปิด/ปิดเครื่อง

1 กดปุ่ม (เปิด/พร้อมใช้งาน)

ไฟแสดงสถานะ: (เปิด/พร้อมใช้งาน) (สีขาว) จะกะพริบซ้ำ ๆ

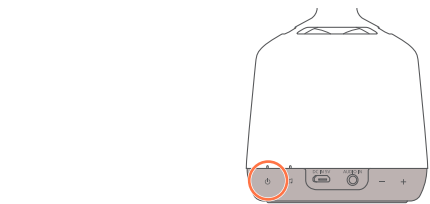

การตัดการเชื่อมต่อด้วย One-touch

นำอุปกรณ์มาสัมผัสบริเวณเครื่องหมาย N อีกครั้ง

หากท่านไม่สามารถทำการเชื่อมต่อได้

- ค่อย ๆ เสียบอุปกรณ์ BLUETOOTH เหนือบริเวณเครื่องหมาย N
- หากอุปกรณ์ BLUETOOTH อยู่ในเคส ให้นำอุปกรณ์ออกจากเคส


การฟังเพลง

1 เริ่มเล่นเพลงบนอุปกรณ์ BLUETOOTH และปรับระดับเสียง

ขั้นแรก ทำตามขั้นตอนใน "การเชื่อมต่ออุปกรณ์ BLUETOOTH" เพื่อเชื่อมต่ออุปกรณ์ BLUETOOTH

2 ปรับระดับเสียงด้วยการกดปุ่ม +/- (ระดับเสียง)

กดปุ่มค้างไว้เพื่อปรับตัวอย่างรวดเร็ว

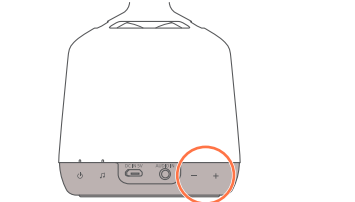

ข้อแนะนำ

หากเสียงถูกขัดจังหวะหรือหากมีเสียงคลื่นรบกวนอย่างชัดเจน เครื่องอาจกำลังถูกรบกวน ย้ายเครื่องไปยังตำแหน่งหรือนำอุปกรณ์ BLUETOOTH ไปใกล้กับเครื่องมากขึ้น

การฟังเพลงจากลำโพง 2 ตัว (ฟังก์ชัน Speaker Add)

สำหรับข้อมูลละเอียด โปรดดูคู่มือช่วยเหลือ

ตอนนี้ท่านสามารถเล่นเพลงที่อยู่บนอุปกรณ์ BLUETOOTH ได้แล้ว หากต้องการเพลิดเพลินกับบริการเผยแพร่เพลงออนไลน์ในขณะที่เชื่อมต่อกับ Wi-Fi โปรดดูที่ "การฟังเพลงจากบริการเผยแพร่เพลง (Spotify) ออนไลน์ผ่าน การเชื่อมต่อ Wi-Fi"


การฟังเพลงจากบริการเผยแพร่เพลง (Spotify) ออนไลน์ผ่านการเชื่อมต่อ Wi-Fi

การเชื่อมต่อกับเครือข่าย Wi-Fi (เลือกขั้นตอน **A** หรือ **B**)


A การเชื่อมต่อกับ Wi-Fi ผ่านเราเตอร์ Wi-Fi ที่มีปุ่ม Wi-Fi Protected Setup™ (WPS)

1 วางเครื่องไว้ใกล้กับเราเตอร์ Wi-Fi แล้วเปิดเครื่อง

2 กดปุ่ม TIMER/PAUSE WPS ค้างไว้ประมาณ 2 วินาทีจนกระทั่งได้ยินเสียงบีบ

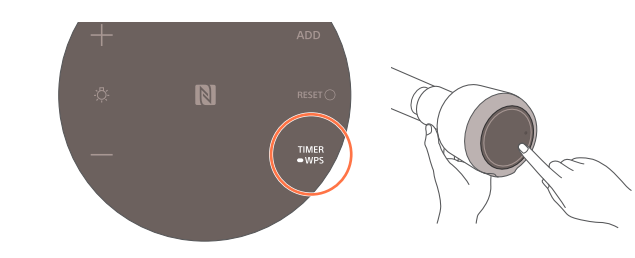


3 กดปุ่ม Wi-Fi Protected Setup™ (WPS) ของเราเตอร์ Wi-Fi ภายใน 90 วินาที

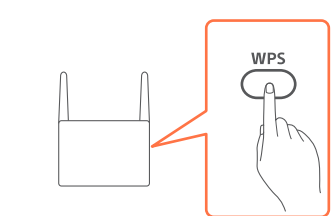

4 ตรวจสอบว่าไฟแสดงสถานะเครือข่าย (สีขาว) ติดสว่าง

การเชื่อมต่อ Wi-Fi เสร็จสมบูรณ์

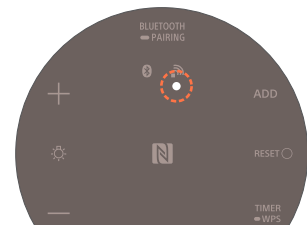

B การใช้สมาร์โฟนของท่านเชื่อมต่อเครือข่าย Wi-Fi

1 ติดตั้ง Sony | Music Center ในสมาร์โฟนของท่าน



2 เชื่อมต่อสมาร์โฟนของท่านกับเราเตอร์ LAN ไร้สาย


3 เชื่อมต่อสมาร์โฟนของท่านกับลำโพงผ่านเทคโนโลยีไร้สาย BLUETOOTH

ทำตามขั้นตอนใน "การเชื่อมต่ออุปกรณ์ BLUETOOTH" เพื่อเชื่อมต่ออุปกรณ์ BLUETOOTH

4 ทำตามคำสั่งที่ปรากฏบนหน้าจอใน Sony | Music Center เพื่อเชื่อมต่อ Wi-Fi

เราเตอร์ LAN ไร้สายบางเครื่องมี SSID หลายตัว ตั้งค่าสมาร์โฟนของท่านและลำโพงให้เป็น SSID เดียวกัน

5 ตรวจสอบว่าไฟแสดงสถานะเครือข่าย (สีขาว) ติดสว่าง การเชื่อมต่อ Wi-Fi เสร็จสมบูรณ์

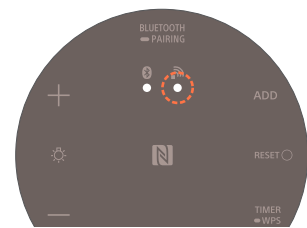

เพลิดเพลินกับบริการเผยแพร่เพลงออนไลน์ (Spotify)

ท่านสามารถเล่นเพลงผ่านลำโพงได้จากบริการเผยแพร่เพลงออนไลน์ (Spotify) ท่านต้องติดตั้งแอป Spotify ในสมาร์โฟนของท่านและลงทะเบียนสมาชิกให้เสร็จสมบูรณ์ จึงจะสามารถใช้สมาร์โฟนของท่านเพลิดเพลินไปกับ Spotify (ฟังก์ชัน Spotify Connect)

1 เชื่อมต่อลำโพงกับเครือข่าย Wi-Fi


2 เริ่มใช้ Spotify ที่ติดตั้งบนสมาร์โฟน แอปเล็ต หรือคอมพิวเตอร์ที่เชื่อมต่อกับ Wi-Fi เดียวกันกับลำโพง

สำหรับรายละเอียดเกี่ยวกับ Spotify โปรดไปที่เว็บไซต์นี้ www.spotify.com/connect

3 เริ่มเล่นเพลง แล้วเลือก [Devices Available]

4 เลือก [LSPX-S2] แล้วฟังเพลงจากลำโพง

เมื่อเปิดใช้งานฟังก์ชัน Spotify Connect ไอคอนการเชื่อมต่อ (🔗) จะสว่างเป็นสีเขียว เมื่อเชื่อมต่อสำเร็จ ไฟแสดงสถานะเครือข่ายที่ด้านล่างของเครื่องจะสว่างเป็นสีเขียว

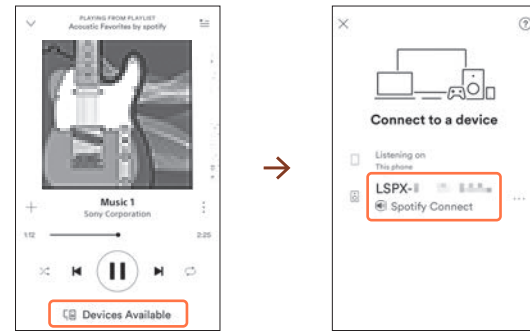

ข้อแนะนำ

- หากเสียงถูกขัดจังหวะหรือหากมีเสียงคลื่นรบกวนอย่างชัดเจน เครื่องอาจกำลังถูกรบกวนหรือสัญญาณอาจอ่อน
- ตรวจสอบว่าไม่มีโลหะล้อมรอบเครื่อง
- นอกจากนี้ วางเครื่องให้ห่างจากเตาไมโครเวฟ อุปกรณ์ Wi-Fi อื่น ๆ หรืออุปกรณ์อื่นที่คล้ายคลึงกัน

หมายเหตุ

รายละเอียดของบริการที่ Spotify นำเสนออาจแตกต่างกันไปตามประเทศหรือภูมิภาคของท่าน


ข้อมูลเฉพาะของซอฟต์แวร์มีการเปลี่ยนแปลงโดยไม่แจ้งให้ทราบล่วงหน้า

การใช้ Push & Play เพื่อเล่นเพลงผ่านบริการเผยแพร่เพลงออนไลน์ (Spotify)

หลังจากใช้ฟังก์ชัน Spotify Connect หรือลงทะเบียน เพลงโปรดของท่าน ท่านสามารถสนุกกับการฟังเพลงได้ เพียงกดปุ่ม **▶** (Push & Play) แม้ว่าเครื่องจะไม่ได้เปิดอยู่

1 หลังจากไปถึงขั้นตอนที่ 3 ของ "เพลิดเพลินกับบริการเผยแพร่เพลงออนไลน์ (Spotify)" แล้ว โปรดกดปุ่ม **▶** (Push & Play)

ไฟแสดงสถานะ: **▶** (Push & Play) (สีขาว) จะสว่างขึ้น

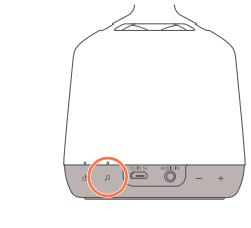

2 ปรับระดับเสียงด้วยการกดปุ่ม +/- (ระดับเสียง)

กดปุ่มค้างไว้เพื่อปรับตัวอย่างรวดเร็ว

ท่านยังสามารถใช้ Spotify เพื่อปรับระดับเสียง



3 นำทางด้วย Sony | Music Center และเลือกเพลงที่ต้องการจะเล่นเมื่อท่านใช้ Push & Play

- ท่านสามารถเลือกได้จากรายการต่อไปนี้
- เพลงที่เล่นล่าสุด (การตั้งค่าเริ่มต้น)
- แนะนำโดย Glass Sound Speaker (ลำโพงแก้ว)
- เพลงโปรด

ลงทะเบียนเป็นเพลงโปรดของท่าน


ขณะเล่นเพลง ให้กดปุ่ม **▶** (Push & Play) ประมาณ 2 วินาที ท่านจะได้ยินเสียงแจ้งเตือนเมื่อการลงทะเบียนเสร็จสมบูรณ์ ไฟแสดงสถานะ: **▶** (Push & Play) (สีขาว) จะติดสว่างหลังจากกะพริบหลายครั้ง

ฟังก์ชันต่าง ๆ

การปรับความสว่างของหลอดไฟ LED

กดปุ่ม (หลอดไฟ LED) +/-


กดปุ่มค้างไว้เพื่อปรับตัวอย่างรวดเร็ว

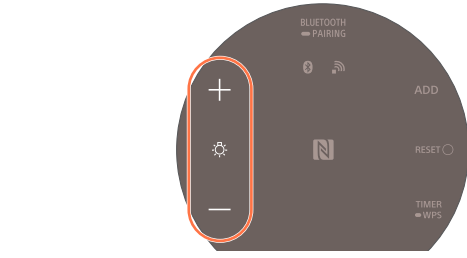

เพลิดเพลินกับโหมดแสงเทียน

กดปุ่ม (เปิด/พร้อมใช้งาน) ค้างไว้ 2 วินาทีขณะที่เครื่องเปิดอยู่

ท่านสามารถตั้งค่าหลอดไฟ LED เพื่อให้แสงส่องสว่างเหมือนแสงเทียน

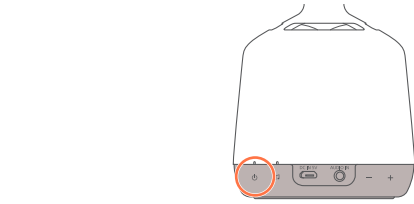

การปิดโหมดแสงเทียน

เช่นเดิม กดปุ่ม (เปิด/พร้อมใช้งาน) ค้างไว้ประมาณ 2 วินาที

การเลือกความเข้มของโหมดแสงเทียน

ในขณะที่โหมดแสงเทียนเปิดอยู่ ให้กดปุ่ม (หลอดไฟ LED) +/- เพื่อเลือกความเข้มที่ท่านชอบมากที่สุดจาก 2 ประเภท


หมายเหตุ

ท่านไม่สามารถตั้งค่าหลอดไฟ LED ได้ในขณะที่เครื่องอยู่ในโหมดแสงเทียน แม้ว่าท่านจะใช้ Sony | Music Center หรือกดปุ่ม (หลอดไฟ LED) +/- ก็ตาม ปิดโหมดแสงเทียนก่อน จากนั้นตั้งค่าความสว่างของหลอดไฟ LED

การใช้ตัวตั้งเวลาปิด

กดปุ่ม TIMER/PAUSE WPS

เสียงสัญญาณจะเป็นการระบุว่าตัวตั้งเวลาปิดถูกตั้งค่าแล้ว เครื่องจะปิดการทำงานโดยอัตโนมัติหลังจากเวลาผ่านไป 60 นาที

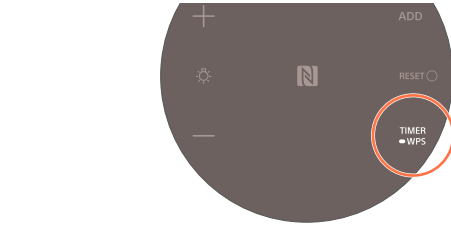

การยกเลิกการทำงานของตัวตั้งเวลาปิด

กดปุ่ม TIMER/PAUSE WPS อีกครั้ง เสียงสัญญาณจะเป็นการระบุว่าตัวตั้งเวลาปิดได้ยกเลิกการทำงานแล้ว

ข้อแนะนำ

ท่านสามารถใช้ Sony | Music Center เพื่อตั้งระยะเวลาของตัวตั้งเวลาปิด

การฟังเพลงจากอุปกรณ์ภายนอก

1 เชื่อมต่ออุปกรณ์เสียงพกพาหรืออุปกรณ์ที่คล้ายกันเข้ากับช่องเสียบ AUDIO IN

ใช้สายเชื่อมต่อที่มีวางจำหน่ายทั่วไป (สเตอริโอมินิ ↔ สเตอริโอมินิ แบบไม่มีตัวต้านทาน)

2 เริ่มการเล่นบนอุปกรณ์ที่เชื่อมต่อ

ข้อแนะนำ

หากต้องการส่งออกเพลงจากอุปกรณ์ BLUETOOTH ที่ยังมีเสียงเชื่อมต่ออยู่ในช่องเสียบ AUDIO IN ให้กดปุ่ม BLUETOOTH/PAIRING ที่ด้านล่างของเครื่อง หรือใช้ Sony | Music Center เพื่อเลือกอุปกรณ์ BLUETOOTH เป็นอุปกรณ์ที่ท่านต้องการใช้เช่น

หากระดับเสียงเบา ให้ปรับระดับเสียงของทั้งลำโพงและอุปกรณ์เสียงที่เชื่อมต่อ

การใช้ Sony | Music Center เพื่อตั้งค่าโดยละเอียด

Sony | Music Center เป็นแอปสำหรับการใช้งานอุปกรณ์เสียงของ Sony ที่รองรับ Sony | Music Center จากสมาร์โฟนของท่าน

คุณสมบัติอื่น ๆ ที่ใช้ได้ใน Sony | Music Center นอกเหนือจากที่แนะนำในเอกสารนี้

- การตั้งค่าฟังก์ชัน Wireless Multi-Room
- การตั้งค่าฟังก์ชัน Wireless Stereo
- การตั้งค่าฟังก์ชัน Speaker Add
- การตั้งค่าฟังก์ชันเพิ่มเสียงเบส
- การตั้งค่าเครือข่ายแยกต้นตอ

วิธีการดาวน์โหลด

ค้นหา "Sony Music Center" ใน Google Play (Play Store) หรือ App Store สำหรับรายละเอียดต่าง ๆ โปรดดูหน้าช่วยเหลือของ Sony | Music Center <http://www.sony.net/smcqa/>



หมายเหตุ

การทำงานที่ Sony | Music Center สามารถทำได้จะแตกต่างกันไปตามอุปกรณ์เสียงที่ข้อมูลเฉพาะของซอฟต์แวร์มีการเปลี่ยนแปลงโดยไม่แจ้งให้ทราบ ล่วงหน้า



ข้อมูลเกี่ยวกับคู่มือช่วยเหลือ

โปรดดูคู่มือช่วยเหลือเพื่อทำความเข้าใจกับคำแนะนำในการแก้ไขปัญหาได้บ้าง ขึ้น ใช้คอมพิวเตอร์หรือสมาร์โฟนในการเข้าใช้งานคู่มือดังกล่าว



http://rd1.sony.net/help/speaker/lsp-x-s2/h_zz/



การแก้ไขปัญหา

สำหรับข้อมูลละเอียด โปรดดู "การแก้ไขปัญหา" ในคู่มือช่วยเหลือ ท่านอาจแก้ไขปัญหาได้ด้วยวิธีการข้างนี้

การชาร์จเครื่อง

หากเครื่องไม่เปิดทำงาน หรือท่านไม่ได้ใช้งานเครื่องเป็นเวลานาน ให้ต่อสายไมโคร USB ที่ให้มาพร้อมกัอุปกรณ์และอะแดปเตอร์ AC พอร์ต USB ที่ให้มาพร้อมกัอุปกรณ์ เข้ากับช่องเสียบ DC IN 5 V โดยเสียบให้แน่น เสียบอะแดปเตอร์ AC พอร์ต USB เข้ากับเต้าเสียบที่ผนัง จากนั้นชาร์จเครื่องอย่างน้อย 1 ชั่วโมงก่อนเปิดเครื่อง

ฟังก์ชันสแตนด์บายอัตโนมัติ

เมื่อเวลาผ่านไปประมาณ 15 นาทีภายใต้เงื่อนไขดังต่อไปนี้ เครื่องจะปิดโดยอัตโนมัติ ซึ่งไม่ใช้ความผิดปกติ หลังจากที่คุณครั้งแรก เครื่องได้รับการตั้งค่าให้เปิดใช้ฟังก์ชันสแตนด์บายอัตโนมัติ ท่านสามารถปิดและเปิดฟังก์ชันสแตนด์บายอัตโนมัติได้จากเมนูฟังก์ชันค่าใน Sony | Music Center

- ไม่ได้กำลังใช้งานเครื่อง
- ไม่ได้กำลังเล่นเพลง (เสียง) ด้วยอุปกรณ์ที่เชื่อมต่อผ่านเทคโนโลยีไร้สาย BLUETOOTH
- เพลง (เสียง) ของอุปกรณ์เสียงที่เชื่อมต่อกับช่องเสียบ AUDIO IN ไม่เล่น หรือการส่งเสียงเพลง (เสียง) ของอุปกรณ์เสียงออนไลน์ยังไม่ผลิต

การตรวจสอบการตั้งค่าการเชื่อมต่อ Wi-Fi

หากฟังก์ชัน **▶** (Push & Play) กะพริบเป็นสีแดงและเสียงเตือนความผิดปกติดังขึ้นเมื่อกำหนดปุ่ม **▶** (Push & Play) ให้ตรวจสอบสถานะการต่อไปนี้

- ท่านไม่เคยใช้ฟังก์ชัน Spotify Connect มาก่อน
- เครื่องไม่ได้เชื่อมต่อกับ Wi-Fi

ทำตามขั้นตอนในหัวข้อ "การเชื่อมต่อกับเครือข่าย Wi-Fi" และทำการตั้งค่าอีกครั้ง

เล่นเพลงโดยใช้การเชื่อมต่อ BLUETOOTH หลังจากที่ท่านเล่นเพลงโดยใช้การเชื่อมต่อ Wi-Fi

ตรวจสอบให้แน่ใจว่าไฟแสดงสถานะ BLUETOOTH ที่ด้านล่างของเครื่องไม่ได้ปิดอยู่

หากไฟแสดงสถานะ BLUETOOTH ปิดอยู่ ให้กดปุ่ม BLUETOOTH/PAIRING ที่ด้านล่างของเครื่อง ตรวจสอบว่าไฟแสดงสถานะ BLUETOOTH ติดสว่าง

การรีเซ็ตเครื่อง

เมื่อเครื่องไม่สามารถทำงานได้ตามปกติ การรีเซ็ตเครื่องอาจสามารถแก้ไขปัญหาได้ หากต้องการรีเซ็ตเครื่อง ให้ใช้ชุดพลาเยอแหลม เช่น เข็มหมุด กลองที่ปุ่ม RESET ในขณะที่อะแดปเตอร์ AC พอร์ต USB ไม่ได้กำลังต่อกับเครื่อง ให้กดปุ่ม RESET แล้วกดปุ่ม (เปิด/พร้อมใช้งาน) เป็นเวลาอย่างน้อย 3 วินาทีเพื่อเปิดเครื่อง



การรีเซ็ตเครื่อง

หากไฟแสดงสถานะ (เปิด/พร้อมใช้งาน) กะพริบเป็นสีแดง แสดงว่าเครื่องอยู่ในโหมดป้องกัน รอสักครู่แล้วกดปุ่ม (เปิด/พร้อมใช้งาน) อีกครั้งเพื่อเปิดเครื่อง

การคืนค่าเครื่องเป็นค่าเริ่มต้น

หากท่านได้ตรวจสอบรายการที่เกี่ยวข้องทั้งหมดใน "การแก้ไขปัญหา" แล้ว แต่เครื่องยังไม่สามารถใช้งานได้ตามปกติ หรือหากการตั้งค่าล้มเหลว ให้คืนค่าเครื่องเป็นค่าเริ่มต้น

ขณะที่เครื่องเปิดอยู่ ให้กดปุ่ม (เปิด/พร้อมใช้งาน) และกดปุ่ม (ระดับเสียง) พร้อมกันเป็นเวลาอย่างน้อย 4 วินาทีเพื่อคืนค่าเครื่องเป็นค่าเริ่มต้น การคืนค่าเครื่องเป็นค่าเริ่มต้นใช้เวลาสิบวินาที เมื่อการคืนค่าเครื่องเสร็จสมบูรณ์ ไฟแสดงสถานะ: (เปิด/พร้อมใช้งาน) ไฟ LED และ เครื่องจะเปิด เนื่องจากข้อมูลการจับคู่ BLUETOOTH และการตั้งค่าเครือข่ายทั้งหมดจะถูกลบออก เมื่อท่านคืนค่าเครื่องเป็นค่าเริ่มต้น ท่านจึงต้องทำการตั้งค่าทั้งหมดอีกครั้ง