


### English

#### Unpacking the system

##### 1 Open the carton and remove the packing.


When removing the packing, support the front and back of this system using 2 people.

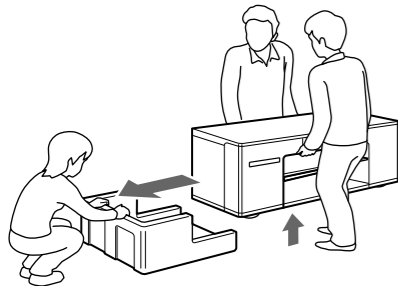

#### Note

Do not hold the grille as it may detach from the stand resulting in serious injury.

##### 2 Carry the system using 4 people, supporting the underside.

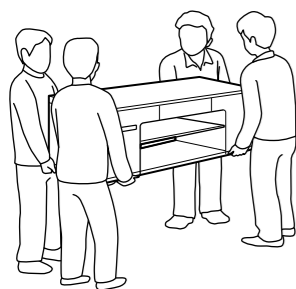


#### Note

Install this system so that the AC power cord (mains lead) can be unplugged from the wall outlet (mains) immediately in the event of trouble.


#### Securing the TV

After installing the TV following the supplied "Quick Setup Guide," fit the support belt and secure the TV as the below.

##### For an LCD Color TV

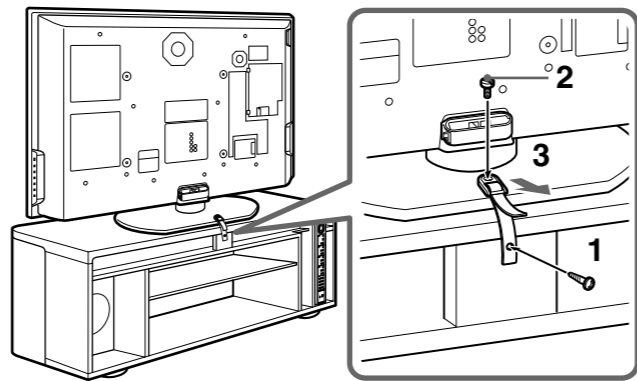

- 1 Fasten the support belt\* to the stand with the wood screw\*.
  - 2 Fit the support belt\* to the TV stand, then firmly fasten with the screw\* using a screw driver or coin, etc.
  - 3 While supporting the TV, tighten the support belt\* to secure in place.
- \* The support belt, screw and wood screw are supplied with LCD color TV.
- 4 To prevent the TV falling, place the stand from 5 cm (2 inches) to 15 cm (6 inches) away from the wall.

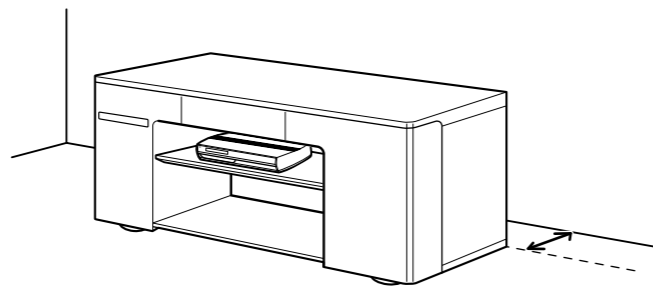


### Français

#### Déballage de la chaîne

##### 1 Ouvrez le carton et retirez l'emballage.

Lorsque vous retirez l'emballage, tenez fermement la partie frontale et la partie arrière de la chaîne à l'aide d'une autre personne.

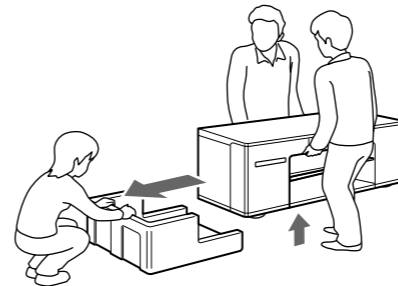

#### Remarque

Ne tenez pas le meuble TV par la grille de ventilation car celle-ci pourrait se détacher du panneau et vous risqueriez de vous blesser.

##### 2 Transportez la chaîne avec trois autres personnes en tenant fermement la partie inférieure.




#### Remarque

Installez cette chaîne de manière à ce que vous puissiez débrancher immédiatement le cordon d'alimentation de la prise secteur en cas de problème.

#### Fixation du téléviseur

Après avoir installé le téléviseur selon les instructions du « Guide d'installation rapide », ajustez la courroie de soutien, puis fixez le téléviseur comme indiqué sur le schéma ci-dessous.

##### Pour téléviseur couleur LCD

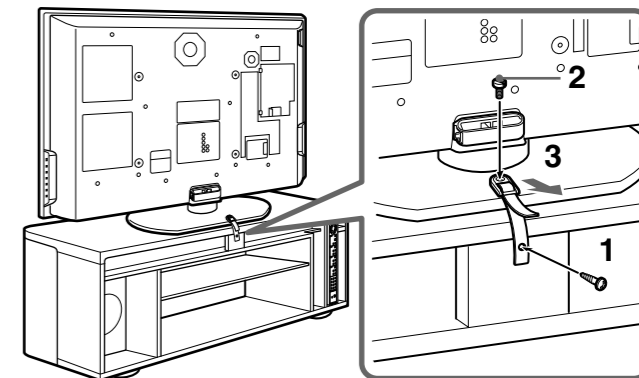

- 1 À l'aide de la vis à bois\*, fixez au meuble la courroie de soutien\*.
- 2 Ajustez la courroie de soutien\* au meuble TV, puis fixez solidement la vis\* à l'aide d'un tournevis, d'une pièce de monnaie, etc.
- 3 Tout en soutenant le téléviseur, serrez la courroie de soutien\* pour fixer correctement le téléviseur.

\* La courroie de soutien, les vis et la vis à bois sont fournies avec le téléviseur couleur LCD.

##### 4 Pour éviter toute chute du téléviseur, placez le support entre 5 cm (2 pouces) et 15 cm (6 pouces) du mur.

