




# Television

## Reference Guide

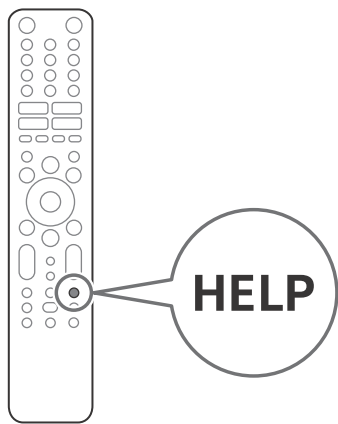

# BRAVIA

KD-65X75K / 65X75AK / 65X74K / 55X75K / 55X75AK / 55X74K / 50X75K / 50X74K  
 KD-43X75K / 43X74K

## About Manuals

This TV comes with the following manuals. Please retain the manuals for future reference.

<b>Setup Guide</b> <ul style="list-style-type: none"> <li>TV installation and setup.</li> </ul>	
<b>Reference Guide (this manual) / Safety Documentation</b> <ul style="list-style-type: none"> <li>Safety information, remote control, troubleshooting, wall-mount installation, specification, etc.</li> </ul>	
<b>Help Guide (On screen Manual)</b> <ul style="list-style-type: none"> <li>Settings, functions, Internet connection, troubleshooting, etc.</li> <li>To open it, press the <b>HELP</b> button on the remote control and select Help Guide.</li> </ul>	<ul style="list-style-type: none"> <li>You can refer to the Help Guide with your smartphone.</li> </ul> <p><a href="https://rd1.sony.net/help/tv/jgar3/h_ga/">https://rd1.sony.net/help/tv/jgar3/h_ga/</a></p>

**IMPORTANT – Read the End User Software Licence Agreement before using your Sony product.** Using your product indicates your acceptance of the End User Software Licence Agreement. The software licence agreement between you and Sony is available online at Sony website (<https://www.sony.net/tv-software-licenses2/>) or on your product screen. Press **⚙** (Quick Settings) on the remote control and select [Settings] → [System] → [About] → [Legal information] → [Notices and licences].

**Note**

- Before operating the TV, please read the "Safety Information".
- Read the supplied safety documentation for additional safety information.
- Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
- Images and illustrations used in the Setup Guide and this manual are for reference only and may differ from the actual product.
- Setting menus are subject to change without notice due to software updates.

For latest information, visit Sony support website.

### Location of the identification label

Labels for the TV Model No. and Power Supply rating are located on the rear of the TV.

For models with supplied AC adapter:  
 Labels for AC adapter Model No. and Serial No. are located on the bottom of AC adapter.

## Safety Information


### Installation/Set-up

Install and use the TV set in accordance with the instructions below in order to avoid any risk of fire, electric shock or damage and/or injuries.

### Installation


- The TV set should be installed near an easily accessible AC power outlet (mains socket).
- Place the TV set on a stable, level surface to prevent it from falling over and causing personal injury or property damage.
- Install the TV where it cannot be pulled, pushed, or knocked over.

- Install the TV so that the TV's Table-Top Stand does not protrude out from the TV stand (not supplied). If the Table-Top Stand protrudes out from the TV stand, it may cause TV set to topple over, fall down, and cause personal injury or damage to the TV.



### Transporting

- Before transporting the TV set, disconnect all cables.
- Two or more persons are needed to transport a large TV set.
- When transporting the TV set by hand, hold it as shown below. Do not put stress on the panel and the frame around the screen.
- When lifting or moving the TV set, hold it firmly from the bottom.

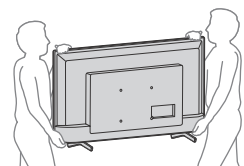


- When transporting the TV set, do not subject it to jolts or excessive vibration.
- When transporting the TV set for repairs or when moving, pack it using the original carton and packing material.

### Topple prevention

#### (Models with supplied support belt kit)


Refer to the Setup Guide on top of the cushion. The supplied wood screw is only for affixing to a solid object made of wood.

(Except models with supplied support belt kit)

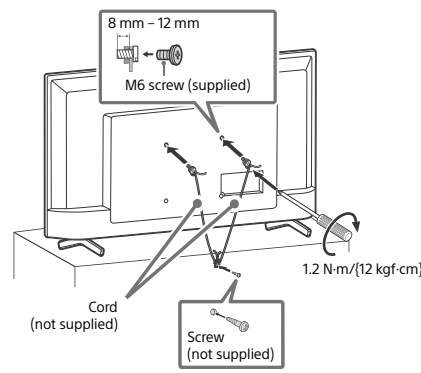

## Remote Control and TV

The remote control shape, layout, availability and function of remote control buttons may vary depending on your region/country/TV model/TV settings.

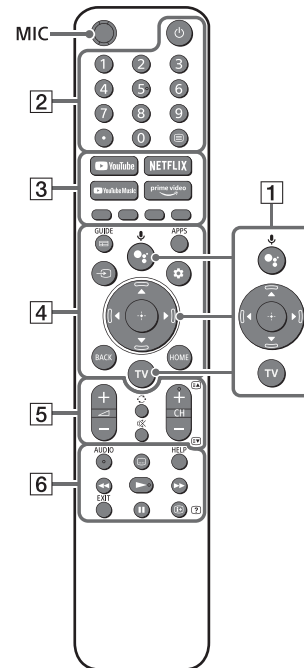

- 1** **⦿ (Google Assistant) / 🎤 (Microphone):** Use Google Assistant\*1\*2 or voice search\*2. For hints on how to control your TV, press the microphone button on the remote control and say "voice hints".\*1  
**▲/▼/◀/▶/⊕:** On screen menu navigation and selection.  
**TV:** Display TV channel list or switch to input.


- 2** **⏻ (Power)**  
**Number buttons**  
**⦿ (dot)**  
**☒ (Text):** Display text information.

- 3** **YouTube™ / NETFLIX\*1\*3 / YouTube Music / Prime Video / Colour buttons**
- 4** **GUIDE/📖:** Display the digital programme guide of TV or TV box\*1\*4.  
**APPS:** Display a list of installed apps.  
**↔ (Input select):** Display and select the input source, etc.  
**⚙ (Quick settings):** Display Quick Settings.  
**BACK**  
**HOME**

- 5** **↔ +/- (Volume)**  
**⏮ (Jump)**  
**🔇 (Mute)**  
**CH +/-/⏪/⏩:** Select the channel, or next (⏪) / previous (⏩) page.

- 6** **AUDIO\*5:** Select the sound of multilingual source or dual sound (depend on programme source).  
**☰ (Subtitle setting)**  
**HELP:** Display the Help menu.  
**◀◀/▶▶/||**

- 7** **⏻ (Power)**

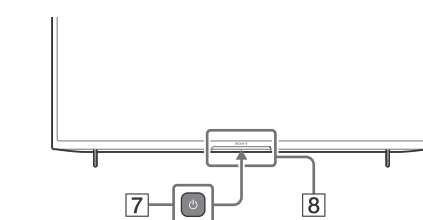

- 8** **Remote Control sensor / LED**

\*1 Only for limited region/country/model/language.  
 \*2 Google Assistant or voice search requires an Internet connection.  
 \*3 Installation might be required depending on region/country.  
 \*4 [TV box setup] setting is required.  
 \*5 Accessibility shortcut is available by pressing and holding **AUDIO**.

For more information, refer to the Help Guide.

## Installing the TV to the Wall


### Using the optional Wall-Mount Bracket (SU-WL450)\* (not supplied)

**To Customers:**  
 For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors. Do not attempt to install it yourself.

**To Sony Dealers and Contractors:**  
 Provide full attention to safety during the installation, periodic maintenance and examination of this product.

**Wall-Mount Bracket Installation Information**  
 For instructions on Wall-Mount Bracket installation, see the Installation Information (Wall-Mount Bracket) on the product page for your TV model.  
<https://www.sony-asia.com/support>

- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
- Sony is not liable for any damage or injury caused by mishandling or improper installation.
- Only qualified service personnel should carry out wall-mount installations.
- For safety reasons, it is strongly recommended that you use Sony accessories, including:  
 – Wall-Mount Bracket SU-WL450
- Be sure to use the screws supplied with the Wall-Mount Bracket when attaching the Wall-Mount Bracket to the TV set.  
 The supplied screws are designed as indicated by illustration when measured from the attaching surface of the Wall-Mount Bracket.  
 The diameter and length of the screws differ depending on the Wall-Mount Bracket model.  
 Use of screws other than those supplied may result in internal damage to the TV set or cause it to fall, etc.

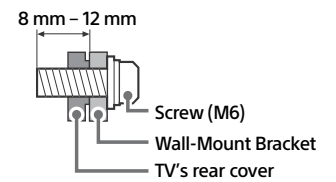

- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

\* Only for limited region/country/model.

## Troubleshooting

General troubleshooting for issues like: black screen, no sound, frozen picture, TV does not respond, or network is lost, do the following steps.

- Restart your TV by pressing the power button on the remote control until a menu appears. Select Restart to restart the TV. If the TV does not recover, try unplugging the AC power cord (mains lead). Then press the power button on the TV, and release it. Wait for two minutes, and plug in the AC power cord (mains lead).
- Refer to the Help Guide by pressing **HELP** on the remote control.
- Connect your TV to the Internet and perform a software update. Sony recommends you to keep your TV software updated. Software updates provide new features and performance improvements.
- Visit Sony support website (information provided at the end of this manual).

**When you plug in the TV, the TV may not be able to turn on for a while even if you press the power button on the remote control or the TV.**  
 It takes time to initialize the system. Wait for about one minute, then operate it again.

**The remote control does not function.**  
 • Replace the batteries.

**The parental lock password has been forgotten.**  
 • Enter 4357 for the PIN and enter the new PIN.

For more information on troubleshooting, refer to the Help Guide.

## Specifications

### System

Panel system: LCD (Liquid Crystal Display) Panel, LED Backlight  
 TV system: Depend on your country/area selection  
 Analogue: B/G, I, D/K, M  
 Digital: DVB-T/DVB-T2

Colour system: PAL/SECAM/NTSC3.58/NTSC4.43  
Channel coverage: Depend on your country/area selection

Analogue: UHF/VHF/Cable  
Digital: UHF/VHF

Sound output: 10 W + 10 W

Wireless technology



Protocol IEEE 802.11a/b/g/n/ac  
(IEEE 802.11ac may not be available depending on countries/regions.)

Bluetooth® Version 5.0

### Input/Output jacks

Antenna (aerial)/cable

75 ohm external terminal for VHF/UHF

 /  AV IN

Video/Audio input (phono jacks)

HDMI IN 1/2/3 (support 4K resolution, HDCP

2.3-compatible)

Video:

4096 × 2160p (50, 60 Hz)<sup>\*1</sup>, 4096 × 2160p (24 Hz),  
3840 × 2160p (50, 60 Hz)<sup>\*1</sup>, 3840 × 2160p (24, 25,  
30 Hz), 1080p (30, 50, 60 Hz), 1080/24p, 1080i (50,  
60 Hz), 720p (30, 50, 60 Hz), 720/24p, 576p, 576i,  
480p, 480i, PC Formats<sup>\*2</sup>

Audio:

In eARC<sup>\*3</sup> (Enhanced Audio Return Channel) mode  
Refer to the online Help Guide for details.

Except eARC mode

Two channel linear PCM: 32/44.1/48 kHz 16/20/24  
bits, Dolby Audio


eARC<sup>\*3</sup>/ARC (Enhanced Audio Return Channel/Audio  
Return Channel) (HDMI IN 3 only)<sup>\*4</sup>

In eARC<sup>\*3</sup> mode


Refer to the online Help Guide for details.

In ARC mode



Two channel linear PCM: 48 kHz 16 bits, Dolby  
Audio, Dolby Atmos

 DIGITAL AUDIO OUT (OPTICAL)

Digital optical jack (Two channel linear PCM: 48 kHz  
16 bits, Dolby Audio)

 (Stereo mini jack)


Headphone

 1,  2

USB port 1 and 2 support High Speed USB (USB 2.0)

 LAN

10BASE-T/100BASE-TX connector (Depending on the  
operating environment of the network, connection  
speed may differ. The communication rate and  
quality are not guaranteed.)

 DC IN 19.5 V (KD-50X75K / 50X74K / 43X75K /  
43X74K only)

AC adapter input

### Power and others

Power requirements

except models with supplied AC adapter

220 V – 240 V AC, 50/60 Hz

models with supplied AC adapter only

19.5 V DC with AC adapter

Rating: Input 100 V – 240 V AC, 50/60 Hz

Energy Efficiency Class<sup>\*5</sup>

(For Jordan only)

KD-65X75K / 65X75AK: A

KD-55X75K / 55X75AK: A

KD-50X75K: A

KD-43X75K: A

Screen size (measured diagonally) (Approx.)

KD-65X75K / 65X75AK / 65X74K: 65 inches / 163.9 cm

KD-55X75K / 55X75AK / 55X74K: 55 inches / 138.8 cm

KD-50X75K / 50X74K: 50 inches / 125.7 cm

KD-43X75K / 43X74K: 43 inches / 108.0 cm

Power consumption

Indicated on the rear of the TV

Power consumption<sup>\*5</sup>

In [Standard] mode

(For Jordan only)

KD-65X75K / 65X75AK: 130 W

KD-55X75K / 55X75AK: 97 W

KD-50X75K: 80 W

KD-43X75K: 67 W

In [Vivid] mode

KD-65X75K / 65X75AK: 180 W

KD-55X75K / 55X75AK: 142 W

KD-50X75K: 115 W

KD-43X75K: 96 W

Annual energy consumption<sup>\*5</sup>

(For Jordan only)<sup>\*6</sup>

KD-65X75K / 65X75AK: 190 kWh per year

KD-55X75K / 55X75AK: 142 kWh per year

KD-50X75K: 117 kWh per year

KD-43X75K: 98 kWh per year

Standby power consumption<sup>\*5\*7\*8</sup>

Jordan/UAE: 0.50 W, Others: 0.5 W

Display resolution (horizontal × vertical) (pixels)

3840 × 2160

Output Rating

USB 1/2

5 V , 500 mA MAX

### Dimensions (Approx.) (w × h × d) (mm)

with Table-Top Stand

KD-65X75K / 65X75AK / 65X74K: 1463 × 914 × 337

KD-55X75K / 55X75AK / 55X74K: 1243 × 790 × 291

KD-50X75K / 50X74K: 1127 × 706 × 231

KD-43X75K / 43X74K: 971 × 619 × 231

without Table-Top Stand

KD-65X75K / 65X75AK / 65X74K: 1463 × 852 × 87

KD-55X75K / 55X75AK / 55X74K: 1243 × 729 × 84

KD-50X75K / 50X74K: 1127 × 662 × 77

KD-43X75K / 43X74K: 971 × 575 × 77

### Mass (Approx.) (kg)

with Table-Top Stand

KD-65X75K / 65X75AK / 65X74K: 22.1

KD-55X75K / 55X75AK / 55X74K: 14.5

KD-50X75K / 50X74K: 10.0

KD-43X75K / 43X74K: 8.0

without Table-Top Stand

KD-65X75K / 65X75AK / 65X74K: 21.4

KD-55X75K / 55X75AK / 55X74K: 13.9

KD-50X75K / 50X74K: 9.8

KD-43X75K / 43X74K: 7.8

### Others

Optional accessories

Wall-Mount Bracket: SU-WL450

Operating temperature: 0 °C – 40 °C

\*1 Refer to the on screen menu to set [HDMI signal format].

\*2 Refer to the online Help Guide for details.

\*3 Only for limited region/country/model.

\*4 Connect your audio system to the HDMI IN 3 to route TV  
audio to your audio system.

\*5 This information is for EU and other countries whose  
relevant regulation is based on EU energy labelling  
regulation.

\*6 Energy consumption in kWh per year, based on the power  
consumption of the television operating 4 hours per day for  
365 days. The actual energy consumption will depend on  
how the television is used.

\*7 Specified standby power is reached after the TV finishes  
necessary internal processes.

\*8 Standby power consumption will increase when your TV is  
connected to the network.

**Note**

- Optional accessories availability depends on countries/  
region/TV model/stock.
- Design and specifications are subject to change without  
notice.
- Subscriptions for services and applications may be required  
and additional terms, conditions and/or charges may apply  
when using the Google Assistant.

### Notes on Digital TV function

- Any functions related to Digital TV (**DVB**) will only  
work in countries or areas where DVB-T/DVB-T2  
(MPEG-2 and H.264/MPEG-4 AVC) digital terrestrial  
signals are broadcast. Please confirm with your local  
dealer if you can receive a DVB-T/DVB-T2 signal  
where you live.
- This TV set complies with DVB-T/DVB-T2  
specifications, but compatibility with future DVB-T/  
DVB-T2 digital terrestrial broadcasts are not  
guaranteed.
- Some Digital TV functions may not be available in  
some countries/areas.

### Trademark information

- The terms HDMI, HDMI High-Definition Multimedia  
Interface, and the HDMI Logo are trademarks or  
registered trademarks of HDMI Licensing  
Administrator, Inc.
- Manufactured under license from Dolby  
Laboratories. Dolby, Dolby Audio, and the double-D  
symbol are trademarks of Dolby Laboratories  
Licensing Corporation.
- Google TV is the name of this device's software  
experience and a trademark of Google LLC. Google,  
YouTube and other marks are trademarks of Google  
LLC.
- Netflix is a registered trademark of Netflix, Inc.
- All other trademarks are the property of their  
respective owners.

**HDMI**<sup>™</sup>  
HIGH-DEFINITION MULTIMEDIA INTERFACE

**Dolby**  
AUDIO

