



English

Read Before Using your Walkman® in a Pool or the Ocean



To use your Walkman while swimming in a pool or the ocean, note the following and fit your Walkman into your ears correctly:

- Choose the size of Swimming earbuds that feel quite snug.
- Fit your Walkman into your ears firmly.


Notes while swimming in a pool or the ocean

- Do not use your Walkman in a crowded place or in circumstances which an inability to hear surrounding sounds would be dangerous.
- When you use your Walkman in public or private swimming facilities, follow the rules of that facility.
- As radio waves do not transmit through water, you cannot listen to music from a smartphone or answer incoming calls via a Bluetooth connection underwater.
- You cannot use the supplied Remote Commander. (NW-WS625 only)

Preparations

1 Select the Swimming earbuds


The standard-type earbuds are attached when you purchase your Walkman. Change the earbuds to **Swimming** earbuds.



2 Choose the best fitting Swimming earbuds

- There are 4 different sizes of Swimming earbuds (S/M/L/LL) supplied inside the box.
- For swimming, choose a size slightly tighter than the standard-type.
- Your ears may require different sized earbuds as not all ears are the same. For example: left side medium size – right side large size.

3 Attach Swimming earbuds to your Walkman

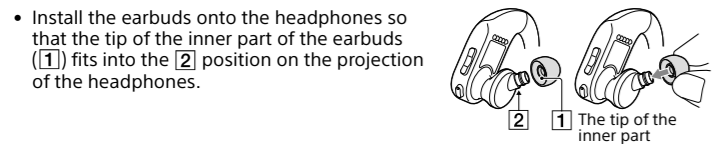

- Make sure that the earbuds fit straight on, not at an angle, to prevent the earbuds from detaching and remaining in your ears.

4 Fit your Walkman into your ears firmly

Follow the procedures below and fit your Walkman into your ears firmly:

- 1 Place your Walkman so that the earbuds fit in your right and left ears snugly.
- 2 Turn the headphones part of your Walkman clockwise-counterclockwise to find the best position.




- Fit your Walkman into your ears while the earbuds and your ears are still dry.
- Make sure to fit your Walkman into your ears firmly so that water does not get into your ears through a gap between your ears and the headphones.

Improving the fit

Stabilizing your Walkman with the supplied adjustment band

You can place your Walkman more firmly into your ears by using the supplied adjustment band.



Hint

By stabilizing the arrow-pointed part on your Walkman with the band of your swimming goggles, you can prevent your Walkman from detaching because of water pressure.



If the sound becomes muffled

Water inside your ears or headphones may cause the sound to be muffled.


1 Removing the water from your ears

Remove the water from your ears.



2 When the water gets inside the headphones

Remove the earbuds from the headphones and pat the headphones lightly about 5 to 10 times on a dry cloth.

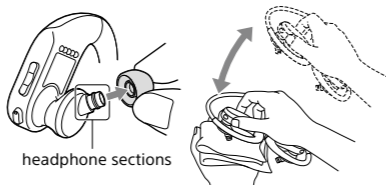

Taking your Walkman off

Gently move your Walkman up and down to take it off your ears.



Note

Removing the Walkman suddenly when the earbuds are fitted firmly in your ears may cause damage to your ears or eardrums, or the earbuds may remain in your ears.

Maintenance

Clean the earbuds and your Walkman after every use as follows.

- If your Walkman is left with salt and sand unremoved, the metal terminals may rust or foreign substances may build up. This may result in your Walkman not charging properly or not being recognized by a computer.
- If tanning oil or sunscreen gets onto your Walkman, wash it off using lukewarm water. Otherwise, it may cause discoloration or damage such as cracks to occur.
- The build up of foreign substances such as earwax etc. in the headphone sections may cause deteriorated sound quality or sound loss.

① After use in the ocean, wash your Walkman with fresh water such as tap water to remove salt and sand.


② While immersing it in fresh water, gently shake your Walkman about 20 times and then soak it for about 30 minutes.



③ Remove the earbuds from your Walkman, and then wash them by hand using a mild detergent solution. After washing the earbuds, dry them well.




④ Rinse the terminals and mesh sheet of your Walkman with gentle running tap water. If the terminals and mesh sheet are not clean, wet a soft brush such as a toothbrush with water and clean them.

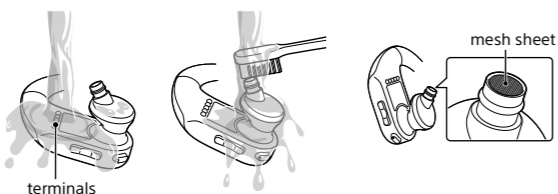


⑤ Wipe the moisture off the terminals and surface of your Walkman using a soft dry cloth.

⑥ Pat the headphones softly against a dry cloth. Repeat patting about 20 times.

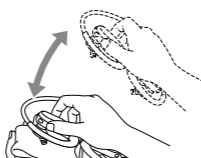

⑦ Pat the areas around the buttons of your Walkman softly against a dry cloth. Repeat this about 30 times.

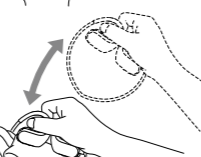

⑧ Place a dry cloth under the headphones and leave them at room temperature for 2 to 3 hours.

Notes

- Do not apply strong force to the mesh sheet. Doing so may damage the mesh sheet.
- Do not rub foreign substances on the mesh sheet. Doing so may push them into the headphones.

Notes on use

Liquids that the water resistant performance specifications apply to

Applicable: fresh water, tap water, perspiration, pool water, salt water

Not applicable: liquids other than those above (examples: soapy water, detergent water, water with bath agents, shampoo, hot spring water, etc.)

The water resistant performance of your Walkman is based on our measurements under the conditions described in this section. Note that malfunctions as a result of water immersion caused by misuse by the customer are not covered by the limited warranty.

Notes on charging the battery


The USB cradle supplied with your Walkman is not water resistant. Before charging the battery, make sure your Walkman is not wet. If there is moisture on the Walkman, wipe it off completely, and leave the Walkman at room temperature to dry until no moisture remains on the Walkman before you start charging. Never use the USB cradle (supplied) with wet hands or when your Walkman is wet.

Notes on using your Walkman

- The earbuds create a seal in your ear canal. Thus, there is a risk of damage to your ears or eardrums if strong pressure is applied to the earbuds, or the earbuds are removed suddenly from your ears. Due to this risk, do not do vigorous exercise, dive into a swimming pool, etc., while wearing your Walkman.
- Do not pour hot water directly on your Walkman and do not blow hot air from a hair dryer, etc., directly on the Walkman. Never use the Walkman in high temperature locations such as in saunas or near a stove.
- Do not use or leave your Walkman in the following types of environment:
 - in high temperature locations with a temperature above 45 °C (113 °F) such as under the blazing sun, in a car, in warm water or other high temperature and high humidity locations
 - in a cold locations with a temperature below –5 °C (23 °F)
- If you cannot avoid using your Walkman in a location exposed to direct sunlight, cover your Walkman with a towel, etc.
- The sound volume is lower with Swimming earbuds than with standard-type earbuds. Increase the volume as needed.
- When you replace Swimming earbuds with the standard-type earbuds, the sound becomes louder. Adjust the volume so as not to hurt your eardrums.
- Your Walkman may detach and fall during vigorous exercise, etc.
- Your Walkman will sink if dropped in water.

Notes on Ambient Sound Mode

- When the Swimming earbuds are attached, ambient sound cannot be heard as well as when Standard-type earbuds are attached.
- Ambient sounds cannot be heard well after using your Walkman in a pool or the ocean. Repeatedly pat the parts around the buttons of your Walkman softly against a dry cloth about 30 times. Then place your Walkman on a dry cloth at room temperature for 2 to 3 hours to ensure it is completely dry before the next use.

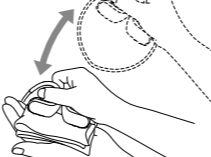

Water resistance/dust proofing

The water resistance specifications*1 of this Walkman are equivalent to IEC 60529 "Degrees of protection against ingress of water (IP Code)" IPX5/8*, and the dust proofing specifications of this Walkman are equivalent to IEC 60529 "Degrees of protection against solid foreign objects" IP6X*. If you use your Walkman in a swimming pool, do not exceed a depth of 2 m (6.5 feet) while wearing it. Be sure to read and understand the water resistant/dust proof specifications completely before use.

*1 The headphone sections are not completely watertight.

*2 **IPX5 (Degrees of protection against jets of water)** Your Walkman, when Swimming earbuds are attached, has been tested under and maintains its operability under the following test conditions: When exposed to direct streams of water from any direction where approximately 12.5 l/min. of water is supplied for more than 3 minutes from a distance of approximately 3 m using a nozzle with an inner diameter of 6.3 mm. However, this does not apply to the headphone sections.

IPX8 (Degrees of protection against continual water submersion) Your Walkman, when Swimming earbuds are attached, has been tested to and maintains its operability when submersed in water to a depth of 2 m for 30 minutes.

*3 **IP6X (Degrees of protection against dust)** Your Walkman, when Swimming earbuds are attached, has been tested to and continues to block dust after stirring for 8 hours in a testing device which contains dust particles that are up to 75 µm in diameter.

简体中文

在游泳池或海中使用 Walkman® 之前请阅读



若要在游泳池或海中游泳时使用 Walkman，请注意以下事项并将 Walkman 正确贴合到耳朵中：

- 请选择感觉十分贴合的游泳耳塞尺寸。
- 请将 Walkman 牢固贴合到耳朵中。


有关在游泳池或海中游泳时的注意事项

- 请不要在拥挤的地方或听不到周围声音会发生危险的情况下使用 Walkman。
- 在公共或私人游泳设施中使用 Walkman 时，请遵守该设施的相关规定。
- 因无线电波不能在水里传播，您不能在水下通过 Bluetooth 连接聆听来自智能手机的音乐或接听来电。
- 无法使用附带的遥控器。（仅限于 NW-WS625）

准备

1 选择游泳耳塞

购买 Walkman 时已安装**标准型**耳塞。将耳塞更换为**游泳**耳塞。

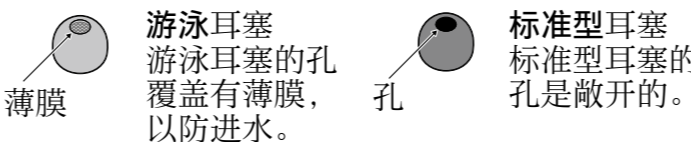


2 选择最合适的游泳耳塞

- 盒内附带了 4 种不同尺寸的游泳耳塞 (S/M/L/LL)。
- 游泳时，请选择比标准型稍紧一些的尺寸。

• 您的双耳可能需要不同尺寸的耳塞，因为并非所有耳朵都相同。例如：左侧中号尺寸 - 右侧大号尺寸。

3 将游泳耳塞安装到 Walkman 上

- 将耳塞安装于耳机上，使耳塞内部顶端 (1) 装入耳机突出部分上的 2 位置。

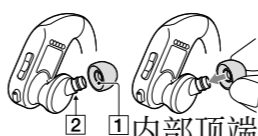

- 请确保径直装入耳塞，不要有角度，以防止耳塞脱落并留在耳朵中。



4 请将 Walkman 牢固贴合到耳朵中

请按照以下步骤操作，将 Walkman 牢固贴合到耳朵中：

1 放置 Walkman，使耳塞贴合在右耳和左耳中。




2 顺时针 - 逆时针方向转动 Walkman 的耳机部分以找到最佳位置。

- 在耳塞和耳朵仍然干燥时，将 Walkman 贴合到耳朵中。
- 请务必将 Walkman 牢固贴合到耳朵中，以便水不会通过耳朵和耳机之间的缝隙进入耳朵中。

改进贴合程度

使用附带的调节带保持 Walkman 稳定

通过使用附带的调节带，可以将 Walkman 更牢固地放入耳朵中。



要点

通过使用游泳镜的带子保持 Walkman 上箭头所指部分稳定，可以防止 Walkman 因水压而脱落。



如果声音变得低沉

耳朵或耳机中的水可能会导致声音低沉。


1 请清除耳朵中的水

请清除耳朵中的水。



2 当水进入耳机内部时

请从耳机上取下耳塞，在一块干布上轻拍耳机 5 到 10 次左右。

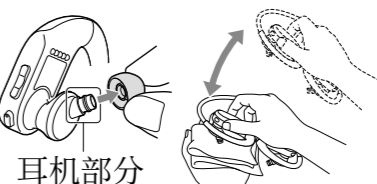

取下 Walkman

轻轻地上下移动 Walkman，将其从耳朵上取下。



注意

耳塞牢固贴合在耳朵中时，猛然取出 Walkman 可能会导致耳朵或耳膜损伤，或耳塞可能会留在耳朵中。

维护

每次使用后，请按照以下步骤清洁耳塞和 Walkman。


- 如果在没有去除盐分和沙子的状态下放置 Walkman，金属端子可能会生锈或有异物积聚。这可能会导致 Walkman 不正确充电或无法被电脑识别。
- 如果晒黑油或防晒霜进入 Walkman，请用温水将其洗掉。否则，可能会导致变色或出现裂纹等损坏。
- 耳机部分内部积聚的耳垢等异物可能会导致音质变差或声音损失。

① 在海中使用后，请用自来水等淡水清洗 Walkman 以清除盐分和沙子。


② 请将其浸没在淡水中，并轻轻晃动 Walkman 约 20 次，然后将其浸泡约 30 分钟。



③ 从 Walkman 上取下耳塞，然后使用中性洗涤剂溶液手工清洗耳塞。清洗耳塞后使其干燥。

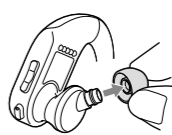


④ 用缓慢流动的自来水冲洗 Walkman 的端子和网罩。如果端子和网罩不干净，请用蘸水的牙刷等软刷进行清洁。

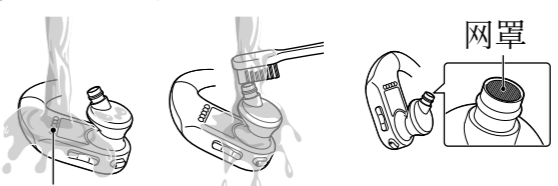

端子

⑤ 使用一块柔软的干布擦干 Walkman 端子和表面上的水分。

⑥ 在一块干布上轻拍耳机。重复轻拍约 20 次。

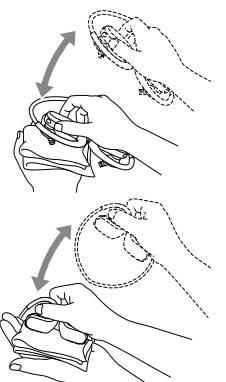

⑦ 在一块干布上轻拍 Walkman 按钮的周围区域。重复此操作约 30 次。

⑧ 将一块干布放在耳机下面，置于室温环境下 2 到 3 小时。

注意事项

- 请勿对网罩施加强力。否则可能会损坏网罩。
- 请勿擦抹网罩上的异物。否则可能会使异物嵌入耳机中。

有关使用的注意事项

防水性能规格适用的液体

适用：淡水、自来水、汗液、游泳池水、盐水
不适用：除上述以外的其他液体（例如：肥皂水、洗涤剂水溶液、沐浴液水溶液、洗发液、温泉水等）

Walkman 的防水性能基于本节所述条件下的本公司测量结果。请注意，客户使用不当造成进水而引起的故障不在有限保修范围之列。

有关给电池充电的注意事项

Walkman 附带的 USB 底座并不防水。对电池充电之前，请确保 Walkman 没有沾水。如果 Walkman 上有水分，请在开始充电前将其彻底擦干，并将 Walkman 置于室温下干燥，直到 Walkman 上无水分残留为止。双手沾水或 Walkman 沾水时，切勿使用 USB 底座（提供）。

有关使用 Walkman 的注意事项

- 耳塞在耳道中形成密封。因此，如果对耳塞施加较强压力或从耳中猛然取出耳塞，则存在损伤耳朵或耳膜的风险。鉴于此风险，佩戴 Walkman 时，请勿进行剧烈运动、在游泳池中跳水等。
- 请勿将热水直接倒在 Walkman 上，请勿使用吹风机等的热风直接吹 Walkman。切勿在桑拿房或火炉附近等高温场所使用 Walkman。
- 请勿在以下类型的环境中使用或放置 Walkman：
 - 在炙热的太阳下、车中、温水中等温度超过 45°C 的高温场所，或其他高温高湿的场所
 - 在温度低于 –5 °C 的寒冷场所
- 如果无法避免在受直射阳光照射的地方使用 Walkman，请用毛巾等遮盖 Walkman。
- 使用游泳耳塞时的音量低于使用标准型耳塞时的音量。请根据需要提高音量。
- 用标准型耳塞替换游泳耳塞时，声音会变得更大。调节音量以免伤害耳膜。
- 在剧烈运动等期间，Walkman 可能会脱落并掉落。
- 万一 Walkman 掉入水中将会下沉。

