

SONY®

TFT LCD Color Computer Display

***SDM-X53
SDM-X73
SDM-X93***

Owner's Record

The model and serial numbers are located at the rear of the unit. Record these numbers in the spaces provided below. Refer to them whenever you call upon your dealer regarding this product.

Model No. _____ Serial No. _____

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Dangerously high voltages are present inside the unit. Do not open the cabinet. Refer servicing to qualified personnel only.

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

IMPORTANTE

Para prevenir cualquier mal funcionamiento y evitar daños, por favor, lea detalladamente este manual de instrucciones antes de conectar y operar este equipo.

**If you have any questions about this product, you may call; Sony Customer Information Services Center
1-800-222-7669 or <http://www.sony.com/>**

Declaration of Conformity

Trade Name: SONY
Model: SDM-X53/X73/X93
Responsible Party: Sony Electronics Inc.
Address: 16450 W. Bernardo Dr,
San Diego, CA 92127 U.S.A.
Telephone Number: 858-942-2230

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTICE

This notice is applicable for USA/Canada only. If shipped to USA/Canada, install only a UL LISTED/CSA LABELLED power supply cord meeting the following specifications:

SPECIFICATIONS

Plug Type	Nema-Plug 5-15p
Cord	Type SVT or SJT, minimum 3 × 18 AWG
Length	Maximum 15 feet
Rating	Minimum 7 A, 125 V

NOTICE

Cette notice s'applique aux Etats-Unis et au Canada uniquement.

Si cet appareil est exporté aux Etats-Unis ou au Canada, utiliser le cordon d'alimentation portant la mention UL LISTED/CSA LABELLED et remplissant les conditions suivantes:

SPECIFICATIONS

Type de fiche	Fiche Nema 5-15 broches
Cordon	Type SVT ou SJT, minimum 3 × 18 AWG
Longueur	Maximum 15 pieds
Tension	Minimum 7 A, 125 V



As an ENERGY STAR Partner, Sony Corporation has determined that this product meets the ENERGY STAR guidelines for energy efficiency.



This monitor complies with the TCO'99 guidelines.



BZ03

Owner's Record

The model and serial numbers are located at the rear of the unit. Record these numbers in the spaces provided below. Refer to them whenever you call upon your dealer regarding this product.

Model No. _____ Serial No. _____

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Dangerously high voltages are present inside the unit. Do not open the cabinet. Refer servicing to qualified personnel only.

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

IMPORTANTE

Para prevenir cualquier mal funcionamiento y evitar daños, por favor, lea detalladamente este manual de instrucciones antes de conectar y operar este equipo.

**If you have any questions about this product, you may call; Sony Customer Information Services Center
1-800-222-7669 or <http://www.sony.com/>**

Declaration of Conformity

Trade Name: SONY
Model: SDM-X53/X73/X93
Responsible Party: Sony Electronics Inc.
Address: 16450 W. Bernardo Dr,
San Diego, CA 92127 U.S.A.
Telephone Number: 858-942-2230

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTICE

This notice is applicable for USA/Canada only. If shipped to USA/Canada, install only a UL LISTED/CSA LABELLED power supply cord meeting the following specifications:

SPECIFICATIONS

Plug Type	Nema-Plug 5-15p
Cord	Type SVT or SJT, minimum 3 × 18 AWG
Length	Maximum 15 feet
Rating	Minimum 7 A, 125 V

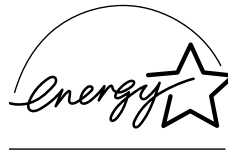
NOTICE

Cette notice s'applique aux Etats-Unis et au Canada uniquement.

Si cet appareil est exporté aux Etats-Unis ou au Canada, utiliser le cordon d'alimentation portant la mention UL LISTED/CSA LABELLED et remplissant les conditions suivantes:

SPECIFICATIONS

Type de fiche	Fiche Nema 5-15 broches
Cordon	Type SVT ou SJT, minimum 3 × 18 AWG
Longueur	Maximum 15 pieds
Tension	Minimum 7 A, 125 V



As an ENERGY STAR Partner, Sony Corporation has determined that this product meets the ENERGY STAR guidelines for energy efficiency.












This monitor complies with the TCO'99 guidelines.



BZ03

Table of Contents

Precautions	4
Identifying parts and controls	5
Setup	7
Setup 1: Connect the video signal cables	7
Setup 2: Connect the audio cord	8
Setup 3: Connect the power cord	8
Setup 4: Bundle the cords and cables	9
Setup 5: Turn on the monitor and computer	9
Setup 6: Adjust the height and tilt	10
Selecting the input signal (INPUT button)	11
Customizing Your Monitor	12
Navigating the menu	12
 PICTURE ADJUST menu	13
 SCREEN menu (analog RGB signal only)	14
 COLOR menu	15
 GAMMA menu	16
 MENU POSITION menu	16
 INPUT SENSING ON/OFF menu	16
 LANGUAGE menu	17
 RESET menu	17
 MENU LOCK menu	17
Technical Features	18
Controlling the volume	18
Power saving function	18
Reducing the power consumption (ECO mode)	19
Automatic brightness adjustment function (light sensor)	19
Automatic picture quality adjustment function (analog RGB signal only)	19
Troubleshooting	20
On-screen messages	20
Trouble symptoms and remedies	21
Self-diagnosis function	23
Specifications	24

GB

- Macintosh is a trademark licensed to Apple Computer, Inc., registered in the U.S.A. and other countries.
- Windows® is registered trademark of Microsoft Corporation in the United States and other countries.
- IBM PC/AT and VGA are registered trademarks of IBM Corporation of the U.S.A.
- VESA and DDC™ are trademarks of the Video Electronics Standards Association.
- ENERGY STAR is a U.S. registered mark.
- Adobe and Acrobat are trademarks of Adobe Systems Incorporated.
- All other product names mentioned herein may be the trademarks or registered trademarks of their respective companies.
- Furthermore, “™” and “®” are not mentioned in each case in this manual.

Precautions

Warning on power connections

- Use the supplied power cord. If you use a different power cord, be sure that it is compatible with your local power supply.


For the customers in the U.S.A.

If you do not use the appropriate cord, this monitor will not conform to mandatory FCC standards.

For the customers in the UK

If you use the monitor in the UK, be sure to use the appropriate UK power cord.

Example of plug types



for 100 to 120 V AC for 200 to 240 V AC for 240 V AC only

The equipment should be installed near an easily accessible outlet.

Installation

Do not install or leave the monitor:

- In places subject to extreme temperatures, for example near a radiator, heating vent, or in direct sunlight. Subjecting the monitor to extreme temperatures, such as in an automobile parked in direct sunlight or near a heating vent, could cause deformations of the casing or malfunctions.
- In places subject to mechanical vibration or shock.
- Near any equipment that generates a strong magnetic field, such as a TV or various other household appliances.
- In places subject to inordinate amounts of dust, dirt, or sand, for example near an open window or an outdoor exit. If setting up temporarily in an outdoor environment, be sure to take adequate precautions against airborne dust and dirt. Otherwise irreparable malfunctions could occur.

Handling the LCD screen

- Do not leave the LCD screen facing the sun as it can damage the LCD screen. Take care when you place the monitor by a window.
- Do not push on or scratch the LCD screen. Do not place a heavy object on the LCD screen. This may cause the screen to lose uniformity or cause LCD panel malfunctions.
- If the monitor is used in a cold place, a residual image may appear on the screen. This is not a malfunction. The screen returns to normal as the temperature rises to a normal operating level.
- If a still picture is displayed for a long time, a residual image may appear for a while. The residual image will eventually disappear.
- The LCD panel becomes warm during operation. This is not a malfunction.

About the built-in stereo speakers

Be sure to keep magnetic recording equipment, tapes, and floppy discs away from the speaker's opening as the speakers generate a magnetic field. This magnetic field may affect data stored on magnetic tapes and discs.

Note on the LCD (Liquid Crystal Display)

Please note that the LCD screen is made with high-precision technology. However, black points or bright points of light (red, blue, or green) may appear constantly on the LCD screen, and irregular colored stripes or brightness may appear on the LCD screen. This is not malfunction.

(Effective dots: more than 99.99%)

Maintenance

- Be sure to unplug the power cord from the power outlet before cleaning your monitor.
- Clean the LCD screen with a soft cloth. If you use a glass cleaning liquid, do not use any type of cleaner containing an anti-static solution or similar additive as this may scratch the LCD screen's coating.
- Clean the cabinet, panel, and controls with a soft cloth lightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzene.
- Do not rub, touch, or tap the surface of the screen with sharp or abrasive items such as a ballpoint pen or screwdriver. This type of contact may result in a scratched picture tube.
- Note that material deterioration or LCD screen coating degradation may occur if the monitor is exposed to volatile solvents such as insecticide, or if prolonged contact is maintained with rubber or vinyl materials.

Transportation

- Disconnect all cables from the monitor, and after fixing the LCD display at its highest point, grasp both side of the LCD display firmly taking care not to scratch the screen when transporting. If you drop the monitor, you may be injured or the monitor may be damaged.
- When you transport this monitor for repair or shipment, use the original carton and packing materials.

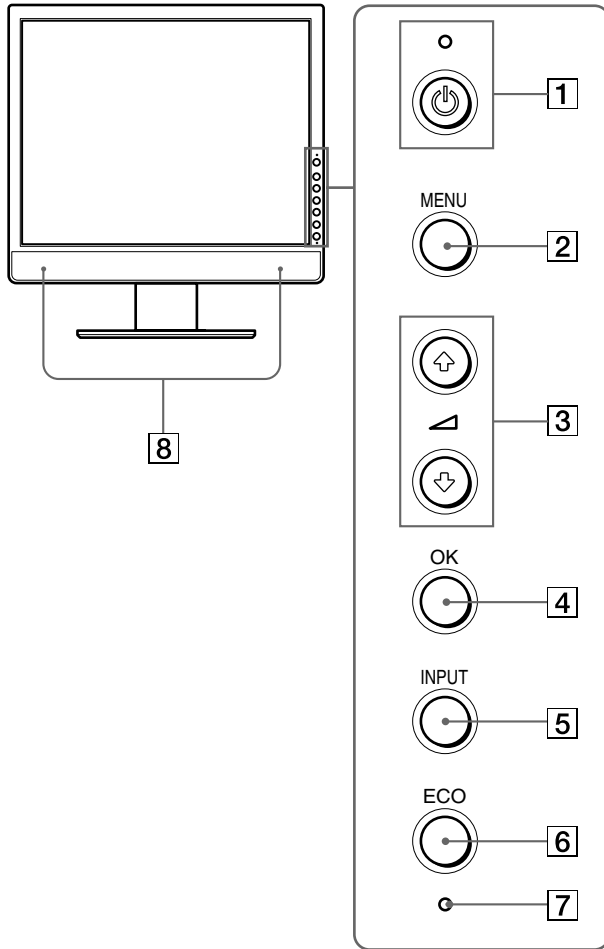
Disposal of the monitor

- **Do not dispose of this monitor with general household waste.**
- **The fluorescent tube used in this monitor contains mercury. Disposal of this monitor must be carried out in accordance to the regulations of your local sanitation authority.**


Identifying parts and controls

See the pages in parentheses for further details.


Front of the LCD display



Side view of the LCD display

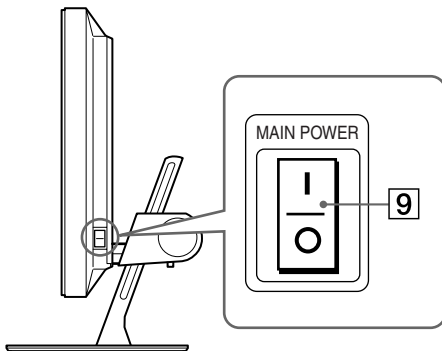

Rear of the display stand

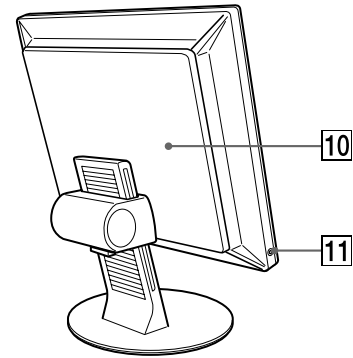

1 (Power) switch and (power) indicator (pages 9, 18, 23)

This switch turns the monitor on when the (power) indicator lights up in red. To turn the monitor off, press this switch again.

If the (power) indicator does not light up, press the MAIN POWER switch (**9**).

2 MENU button (page 12)

This button turns the menu screen on and off.

3 / and (volume control) buttons (pages 12, 18)

These buttons are used to select the menu items and make adjustments, and also display the “Volume” menu to control the volume.

4 OK button (page 12)

This button activates the selected menu item and adjustments made using the / buttons (**3**).

5 INPUT button (page 11)

This button switches the video input signal between INPUT1, INPUT2 and INPUT3 (SDM-X73/X93) when two computers are connected to the monitor.

6 ECO button (page 19)

This button is used to reduce the power consumption.

7 Light sensor (page 19)

This sensor measures the brightness of the surrounding area. Be sure not to cover the sensor with papers, etc.

8 Stereo speakers (page 18)

These speakers output the audio signals as sound.

9 MAIN POWER switch (page 9)

This switch turns the monitor’s main power on and off.

10 Back cover (page 7)

Remove this cover when you connect cables or cords.

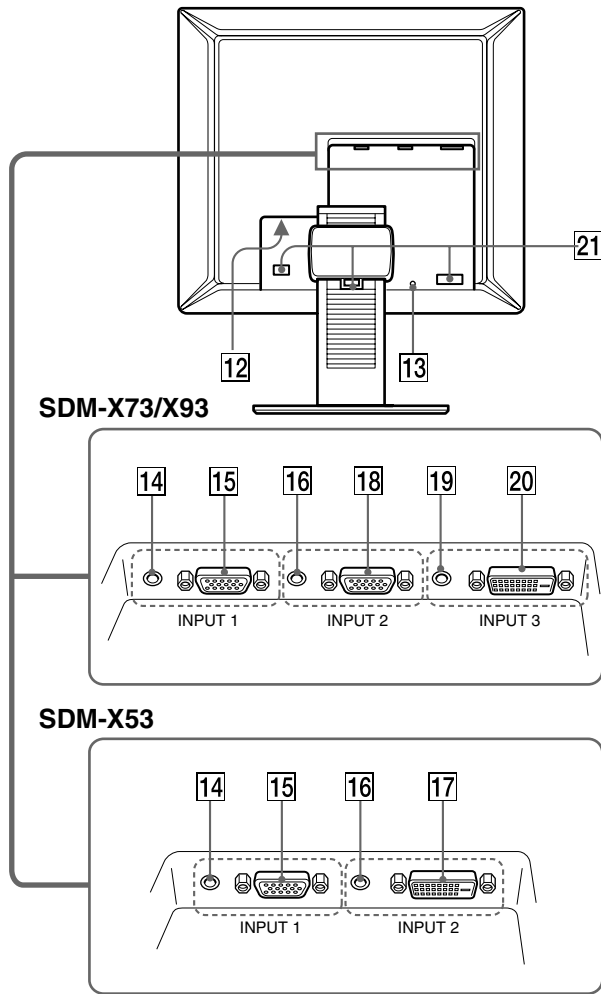
11 Headphones jack (page 18)

This jack outputs audio signals to the headphones.

GB

(continued)

Rear of the LCD display



12 AC IN connector (page 8)

This connector connects the power cord (supplied).

13 Security Lock Hole

The security lock hole should be used with the Kensington Micro Saver Security System. Micro Saver Security System is a trademark of Kensington.

14 Audio input jack for INPUT1 (page 8)

This jack inputs audio signals when connected to the audio output jack of a computer or other audio equipment connected to INPUT1.

15 HD15 input connector (analog RGB) for INPUT1 (page 7)

This connector inputs analog RGB video signals (0.700 Vp-p, positive) and sync signals.

16 Audio input jack for INPUT2 (page 8)

This jack inputs audio signals when connected to the audio output jack of a computer or other audio equipment connected to INPUT2.

17 DVI-D input connector (digital RGB) for INPUT2 (SDM-X53) (page 7)

This connector inputs digital RGB video signals that comply with DVI Rev.1.0.

18 HD15 input connector (analog RGB) for INPUT2 (SDM-X73/X93) (page 7)

This connector inputs analog RGB video signals (0.700 Vp-p, positive) and sync signals.

19 Audio input jack for INPUT3 (SDM-X73/X93) (page 8)

This jack inputs audio signals when connected to the audio output jack of a computer or other audio equipment connected to INPUT3.

20 DVI-D input connector (digital RGB) for INPUT3 (SDM-X73/X93) (page 7)

This connector inputs digital RGB video signals that comply with DVI Rev.1.0.

21 Cable holder (page 9)

This part secures cables and cords to the monitor.

Setup

Before using your monitor, check that the following items are included in your carton:

- LCD display
- Power cord
- HD15-HD15 video signal cable (analog RGB)
- DVI-D video signal cable (digital RGB)
- Audio cord (stereo miniplug)
- CD-ROM (utility software for Windows/Macintosh, Operating Instructions, etc.)
- Warranty card
- Quick Setup Guide


Setup 1: Connect the video signal cables

- Turn off the monitor and computer before connecting them.
- When connecting the computer to the monitor's HD15 input connector (analog RGB), refer to "Connect a computer equipped with an HD15 output connector (analog RGB)."

Note


Do not touch the pins of the video signal cable connector as this might bend the pins.

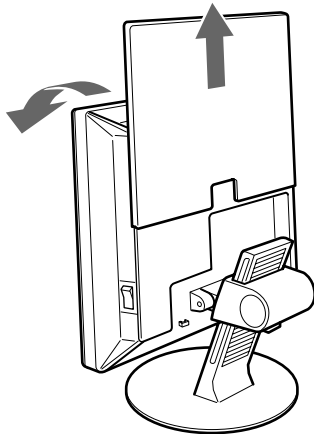- 1 Slide up the back cover.
- 2 Tilt the display forward.



Connect a computer equipped with a DVI output connector (digital RGB)

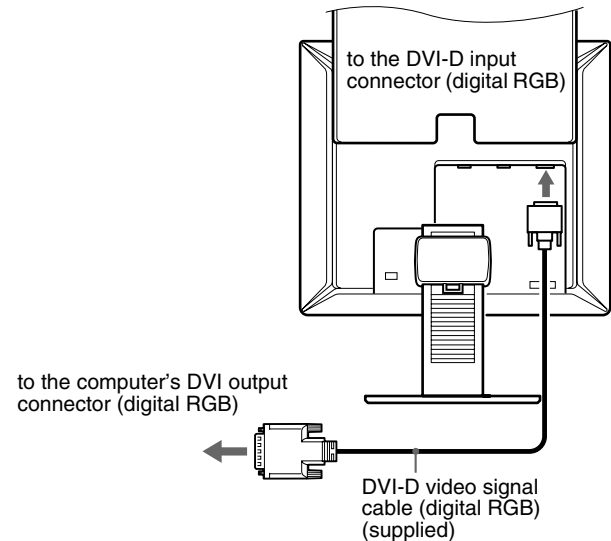Using the supplied DVI-D video signal cable (digital RGB), connect the computer to the monitor's DVI-D input connector (digital RGB) for INPUT2 (SDM-X53) or INPUT3 (SDM-X73/X93).




Connect a computer equipped with an HD15 output connector (analog RGB)

Using the supplied HD15-HD15 video signal cable (analog RGB), connect the computer to the monitor's HD 15 input connector (analog RGB) for INPUT1 or INPUT2 (SDM-X73/X93).

Connect the computer according to the following illustrations.

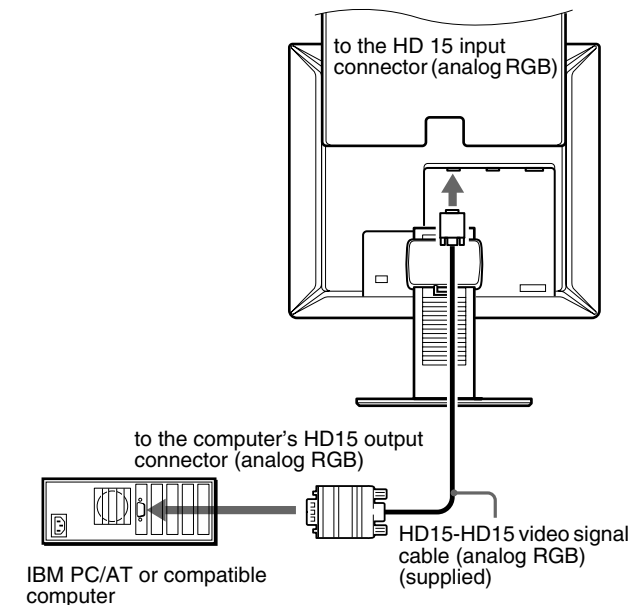
■ Connecting to an IBM PC/AT or compatible computer



GB

(continued)

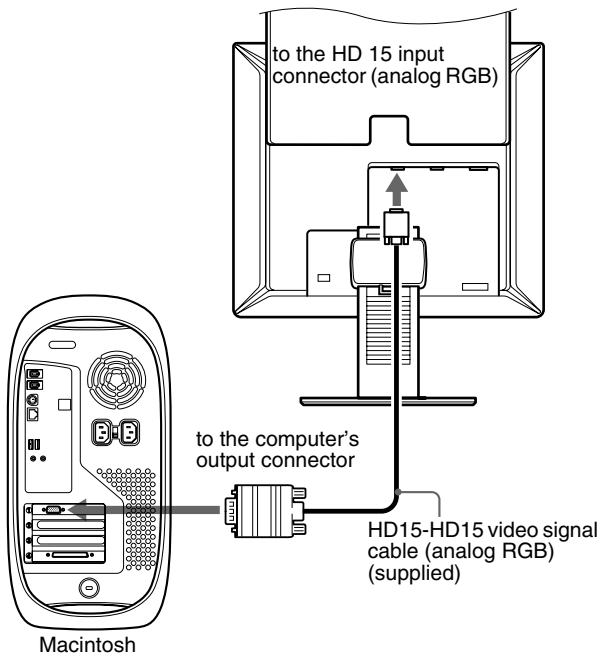
■ Connecting to a Macintosh



When connecting a Macintosh computer, use an adapter (not supplied), if necessary. Connect the adapter to the computer before connecting the video signal cable.

Setup 3: Connect the power cord

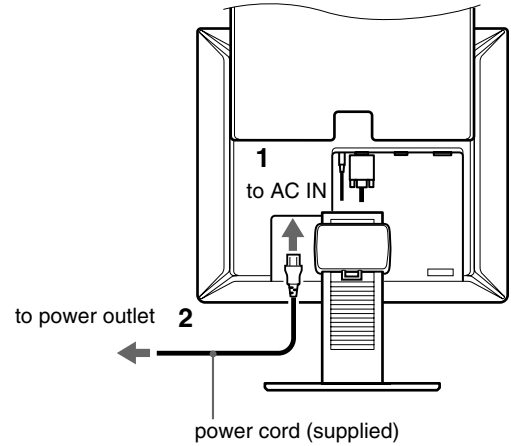- 1 Connect the supplied power cord securely to the monitor's AC IN connector.
- 2 Connect the other end securely to a power outlet.




Setup 2: Connect the audio cord

Connect the supplied audio cord to the monitor's corresponding audio input jack.


Using the monitor's speakers or headphones, you can listen to sound from your computer or other audio equipment connected to the monitor's audio input jacks.

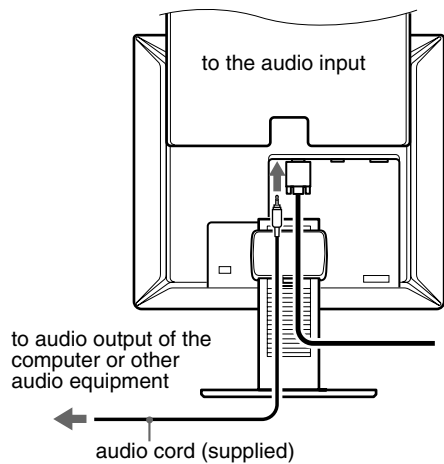For more information, see "Controlling the volume" on page 18.



Setup 4: Bundle the cords and cables

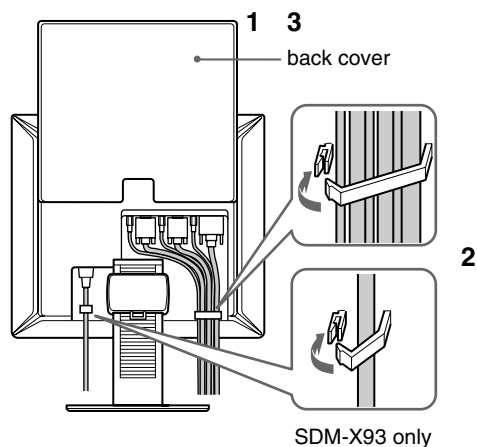
- 1 Slide up the back cover.
- 2 Secure the video signal cable, audio cords and the power cord using the cable holder on the cabinet.
- 3 Slide down the back cover.
- 4 Bundle all the cords and cables through the cable holder of the stand.



Note

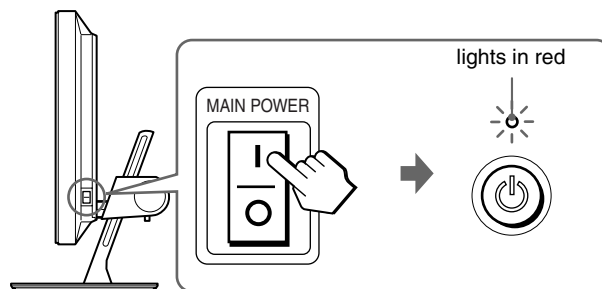
If you cannot bundle all the cords and cables through the cable holder of the stand, leave them hanging down.



Setup 5: Turn on the monitor and computer


- 1 Press the MAIN POWER switch located on the right side of the monitor in the direction of the I, if it is not already pressed. Make sure the  (power) indicator is lit in red.

Note

The monitor is factory shipped with the MAIN POWER switch set to on (I).



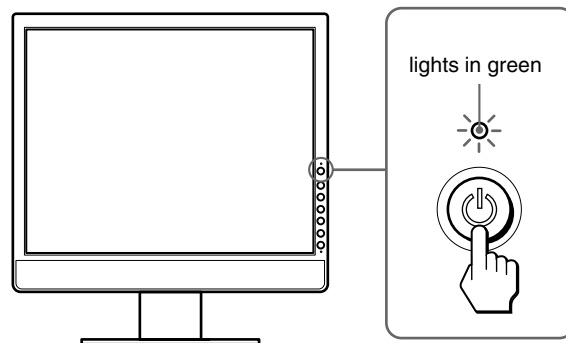- 2 Press the  (power) switch on the front right of the monitor.
The  (power) indicator lights up in green.



- 3 Turn on the computer.
- 4 Press the INPUT button to select the desired input signal.
The selected input's picture appears on the screen.
For more information, see "Selecting the input signal (INPUT button)" on page 11.

INPUT



The installation of your monitor is complete. If necessary, use the monitor's controls to adjust the picture (page 12).

(continued)

If no picture appears on your screen

- Check that the power cord and the video signal cable are properly connected.
- If “NO INPUT SIGNAL” appears on the screen:
 - The computer is in the power saving mode. Try pressing any key on the keyboard or moving the mouse.
 - Check that the input signal setting is correct by pressing the INPUT button (page 11).
- If “CABLE DISCONNECTED” appears on the screen:
 - Check that the video signal cable is properly connected.
 - Check that the input signal setting is correct by pressing the INPUT button (page 11).
- If “OUT OF RANGE” appears on the screen, reconnect the old monitor. Then adjust the computer’s graphics board within the following ranges.

SDM-X53

	Analog RGB	Digital RGB
Horizontal frequency	28–61 kHz	28–49 kHz
Vertical frequency	48–75 Hz	60 Hz
Resolution	1024 × 768 or less	

SDM-X73/X93

	Analog RGB	Digital RGB
Horizontal frequency	28–80 kHz	28–64 kHz
Vertical frequency	48–75 Hz	60 Hz
Resolution	1280 × 1024 or less	

For more information about on-screen messages, see “Trouble symptoms and remedies” on page 21.

No need for specific drivers

The monitor complies with the “DDC” Plug & Play standard and automatically detects all the monitor’s information. No specific driver needs to be installed on the computer.

The first time you turn on your computer after connecting the monitor, the setup Wizard may appear on the screen. In this case, follow the on-screen instructions. The Plug & Play monitor is automatically selected so that you can use this monitor.




The vertical frequency is set to 60 Hz.

Since flickers are unobtrusive on the monitor, you can use it as it is. You do not need to set the vertical frequency to any particular high value.

Setup 6: Adjust the height and tilt

This monitor can be adjusted within the angles shown below.

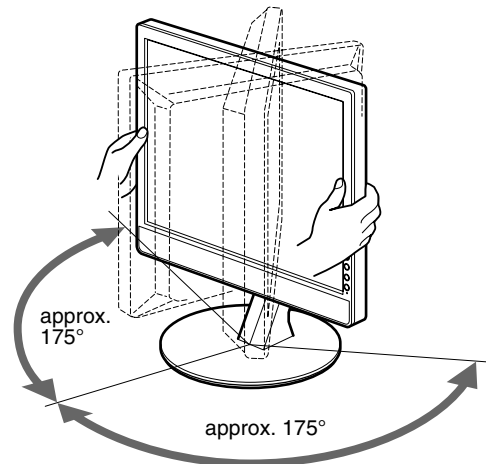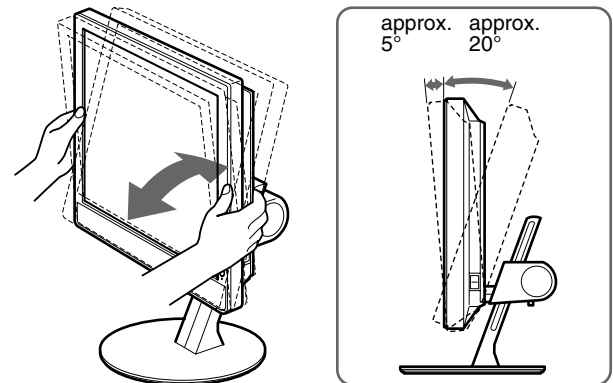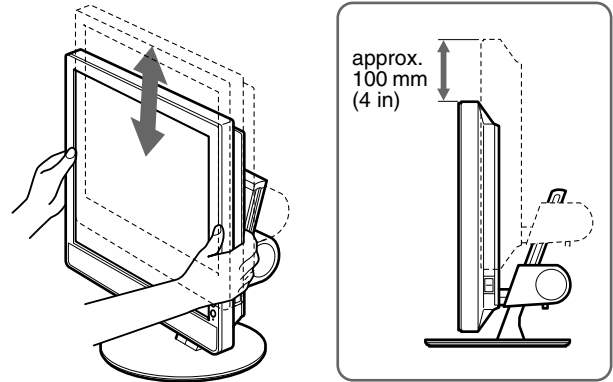Grasp the sides of the LCD panel, then adjust screen angles.



To use the monitor comfortably

Adjust the viewing angle of your monitor according to the height of your desk and chair, and so that light is not reflected from the screen to your eyes.

Note

When adjusting the screen tilt and height, proceed slowly and carefully, being sure not to hit the monitor against the desk.

Selecting the input signal (INPUT button)

Press the INPUT button.

The input signal change each time you press this button.



SDM-X53

On-screen message (Appears about 5 seconds on the upper left corner.)	Input signal configuration
INPUT1 : HD15	HD15 input connector (analog RGB) for INPUT1
INPUT2 : DVI-D	DVI-D input connector (digital RGB) for INPUT2

SDM-X73/X93

On-screen message (Appears about 5 seconds on the upper left corner.)	Input signal configuration
INPUT1 : HD15	HD15 input connector (analog RGB) for INPUT1
INPUT2 : HD15	HD15 input connector (analog RGB) for INPUT2
INPUT3 : DVI-D	DVI-D input connector (digital RGB) for INPUT3

Customizing Your Monitor

Before making adjustments

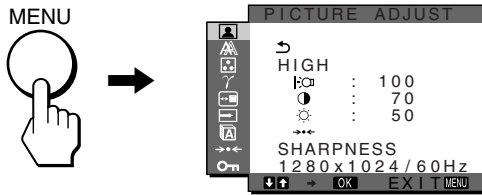
Connect the monitor and the computer, and turn them on. For the best results, wait for at least 30 minutes before making adjustments.

You can make numerous adjustments to your monitor using the on-screen menu.

Navigating the menu


1 Display the main menu.

Press the MENU button to display the main menu on your screen.




2 Select the menu.

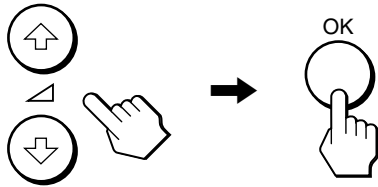Press the ↓/↑ buttons to display the desired menu. Press the OK button to move to the first menu item.



3 Select the item you want to adjust.

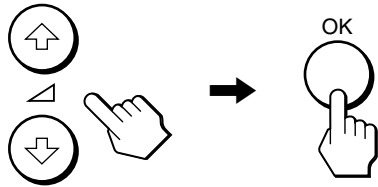Press the ↓/↑ buttons to select the item you want to adjust, then press the OK button.




If ↶ is one of the menu items.

When you select ↶ and press the OK button, the display returns to the previous menu.

4 Adjust the item.

Press the ↓/↑ buttons to make the adjustment, then press the OK button.

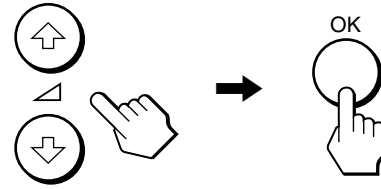When you press the OK button, the setting is stored, then the display returns to the previous menu.



5 Close the menu.

Press the MENU button once to return to normal viewing. If no buttons are pressed, the menu closes automatically after about 45 seconds.




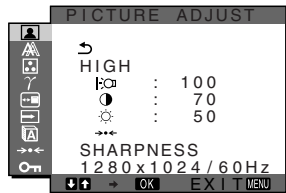
Resetting the adjustments to the default settings

You can reset the adjustments using RESET menu. For more information about resetting the adjustments, see ↶ (RESET) on page 17.

PICTURE ADJUST menu

You can adjust the following items using the PICTURE ADJUST menu.

- MODE (ECO mode)
- BACKLIGHT 
- CONTRAST 
- BRIGHTNESS 
- RESET 
- SHARPNESS




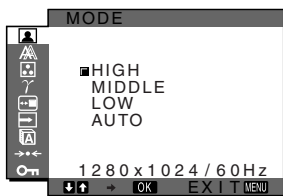
■ Selecting the MODE (ECO mode)

You can select the picture mode to reduce the power consumption.

NOTE

You can also select the picture mode with the ECO button (pages 5, 19) on the front of the monitor.

- 1 Press the MENU button.**
The main menu appears on the screen.
- 2 Press the ↓/↑ buttons to select  (PICTURE ADJUST) and press the OK button.**
The PICTURE ADJUST menu appears on the screen.
- 3 Press the ↓/↑ buttons to select “HIGH” and press the OK button.**
The “MODE” menu appears on the screen.



- 4 Press the ↓/↑ buttons to select the desired mode and press the OK button.**
The screen brightness is changed as the mode turns to HIGH → MIDDLE → LOW, and the power consumption is reduced. When you select “AUTO,” the monitor automatically adjusts the screen brightness according to the brightness of the surroundings (automatic brightness adjustment function). For more information, see “Automatic brightness adjustment function (light sensor)” on page 19

NOTE



In the AUTO mode, you cannot adjust the backlight.

■ Adjusting the BACKLIGHT

If the screen is too bright, adjust the backlight to make the screen easier to see.



Note

The backlight cannot be adjusted when the ECO mode is set to “AUTO” (page 19).

- 1 Press the MENU button.**
The main menu appears on the screen.
- 2 Press the ↓/↑ buttons to select  (PICTURE ADJUST) and press the OK button.**
The PICTURE ADJUST menu appears on the screen.
- 3 Press the ↓/↑ buttons to select “ BACKLIGHT” and press the OK button.**
The “BACKLIGHT” menu appears on the screen.
- 4 Press the ↓/↑ buttons to adjust the light level and press the OK button.**



■ Adjusting the CONTRAST

Adjust the picture contrast.

- 1 Press the MENU button.**
The main menu appears on the screen.
- 2 Press the ↓/↑ buttons to select  (PICTURE ADJUST) and press the OK button.**
The PICTURE ADJUST menu appears on the screen.
- 3 Press the ↓/↑ buttons to select “ CONTRAST” and press the OK button.**
The “CONTRAST” menu appears on the screen.
- 4 Press the ↓/↑ buttons to adjust the contrast and press the OK button.**


■ Adjusting the BRIGHTNESS

Adjust the picture brightness (black level).

- 1 Press the MENU button.**
The main menu appears on the screen.
- 2 Press the ↓/↑ buttons to select  (PICTURE ADJUST) and press the OK button.**
The PICTURE ADJUST menu appears on the screen.
- 3 Press the ↓/↑ buttons to select “ BRIGHTNESS” and press the OK button.**
The “BRIGHTNESS” menu appears on the screen.
- 4 Press the ↓/↑ buttons to adjust the brightness and press the OK button.**

■ Resetting the adjustment data to the defaults

You can reset the adjustments to the default settings.

- 1 Press the MENU button.**
The main menu appears on the screen.
- 2 Press the ↓/↑ buttons to select  (PICTURE ADJUST) and press the OK button.**
The PICTURE ADJUST menu appears on the screen.

(continued)

- 3 Press the **↓/↑** buttons to select “**←←← RESET**” and press the **OK** button.


The “RESET” menu appears on the screen.

- 4 Press the **↓/↑** buttons to select the desired mode and press the **OK** button.

- **OK:** To reset all of the adjustment data in the PICTURE ADJUST menu to the default settings.
- **CANCEL:** To cancel resetting and return to the PICTURE ADJUST menu.

■ Adjusting the SHARPNESS

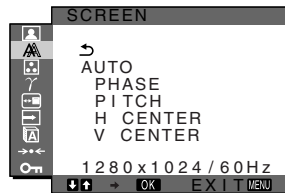
Adjust to sharpen the edge of images, etc.

- 1 Press the **MENU** button.
The main menu appears on the screen.
- 2 Press the **↓/↑** buttons to select  (**PICTURE ADJUST**) and press the **OK** button.
The PICTURE ADJUST menu appears on the screen.
- 3 Press the **↓/↑** buttons to select “**SHARPNESS**” and press the **OK** button.
The “SHARPNESS” menu appears on the screen.
- 4 Press the **↓/↑** buttons to adjust the sharpness and press the **OK** button.

SCREEN menu (analog RGB signal only)

You can adjust the following items using the SCREEN menu.

- AUTO
- PHASE
- PITCH
- H CENTER
- V CENTER




Note

When receiving digital RGB signals from the DVI-D input connector for INPUT2 (SDM-X53) and INPUT3 (SDM-X73/X93), adjustment is unnecessary.

■ Automatic picture quality adjustment function

When the monitor receives an input signal, it automatically adjusts the picture’s position and sharpness (phase/pitch), and ensures that a clear picture appears on the screen (page 19).

Note

While the automatic picture quality adjustment function is activated, only the  (power) switch will operate.

If the automatic picture quality adjustment function of this monitor seems to not completely adjust the picture


You can make further automatic adjustment of the picture quality for the current input signal (See “AUTO” below).

If you still need to make further adjustments to the picture quality

You can manually adjust the picture’s sharpness (phase/pitch) and position (horizontal/vertical position).


These adjustments are stored in memory and automatically recalled when the monitor receives a previously input and registered input signal.

■ Make further automatic adjustments to the picture quality for the current input signal (AUTO)

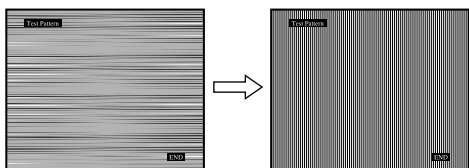
- 1 Press the **MENU** button.
The main menu appears on the screen.
- 2 Press the **↓/↑** buttons to select  (**SCREEN**) and press the **OK** button.
The SCREEN menu appears on the screen.
- 3 Press the **↓/↑** buttons to select “**AUTO**” and press the **OK** button.
Make the appropriate adjustments of the screen’s phase, pitch and horizontal/vertical position for the current input signal and store them.

■ Adjust the picture’s sharpness manually (Phase/Pitch)

You can adjust the picture’s sharpness as follows. This adjustment is effective when the computer is connected to the monitor’s HD15 input connector (analog RGB).

- 1 Set the resolution to 1024 × 768 (SDM-X53), 1280 × 1024 (SDM-X73/X93) on the computer.
- 2 Load the CD-ROM.
- 3 Start the CD-ROM, select the area and model, and display the test pattern.
For Windows
Click [Utility] → [Windows]/[Win Utility.exe].
For Macintosh
Click [Utility] → [Mac]/[Mac Utility].
- 4 Press the **MENU** button.
The main menu appears on the screen.
- 5 Press the **↓/↑** buttons to select  (**SCREEN**) and press the **OK** button.
The SCREEN menu appears on the screen.
- 6 Press the **↓/↑** buttons to select “**PHASE**” and press the **OK** button.
The “PHASE” adjustment menu appears on the screen.
- 7 Press the **↓/↑** buttons until the horizontal stripes are at a minimum.

Adjust so that the horizontal stripes are at a minimum.



8 Press the OK button.

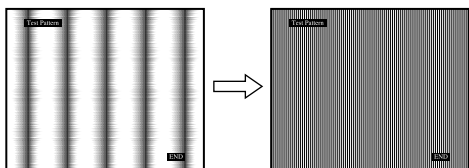
The main menu appears on the screen.
If vertical stripes are observed over the entire screen, adjust the pitch using the following procedures.

9 Press the ↓/↑ buttons to select “PITCH” and press the OK button.

The “PITCH” adjustment menu appears on the screen.

10 Press the ↓/↑ buttons until the vertical stripes disappear.

Adjust so that the vertical stripes disappear.



11 Click [END] on the screen to turn off the test pattern.

■ Adjust the picture’s position manually (H CENTER / V CENTER)

If the picture is not in the center of the screen, adjust the picture’s centering as follows.

1 Set the resolution to 1024 × 768 (SDM-X53), 1280 × 1024 (SDM-X73/X93) on the computer.

2 Load the CD-ROM.

3 Start the CD-ROM, select the area and model, and display the test pattern.

For Windows

Click [Utility] → [Windows]/[Win Utility.exe].

For Macintosh

Click [Utility] → [Mac]/[Mac Utility].

4 Press the MENU button.

The main menu appears on the screen.

5 Press the ↓/↑ buttons to select  (SCREEN) and press the OK button.

The SCREEN menu appears on the screen.

6 Press the ↓/↑ buttons to select “H CENTER” or “V CENTER” and press the OK button.

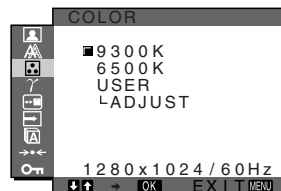
The “H CENTER” adjustment menu or “V CENTER” adjustment menu appears on the screen.

7 Press the ↓/↑ buttons to center the test pattern on the screen.

8 Click [END] on the screen to turn off the test pattern.


 COLOR menu

You can select the picture’s color level for the white color field from the default color temperature settings.
Also, if necessary, you can fine tune the color temperature.



1 Press the MENU button.

The main menu appears on the screen.

2 Press the ↓/↑ buttons to select  (COLOR) and press the OK button.

The COLOR menu appears on the screen.

3 Press the ↓/↑ buttons to select the desired color temperature and press the OK button.

Whites will change from a bluish hue to a reddish hue as the temperature is lowered from 9300K to 6500K.

■ Fine tuning the color temperature


The INPUT setting is stored in memory.

SDM-X53: INPUT1 or INPUT2 (DVI-D)

SDM-X73/93: INPUT1, INPUT2 or INPUT3 (DVI-D)

1 Press the MENU button.

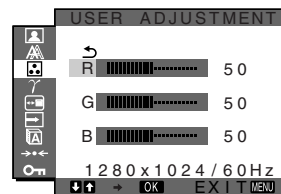
The main menu appears on the screen.

2 Press the ↓/↑ buttons to select  (COLOR) and press the OK button.

The COLOR menu appears on the screen.

3 Press the ↓/↑ buttons to select “ADJUST” and press the OK button.

The fine tuning menu for color temperature appears on the screen.



4 Press the ↓/↑ buttons to select R (Red) or B (Blue) and press the OK button. Then press the ↓/↑ buttons to adjust the color temperature and press the OK button.

Since this adjustment changes the color temperature by increasing or decreasing the R and B components with respect to G (green), the G component is fixed.

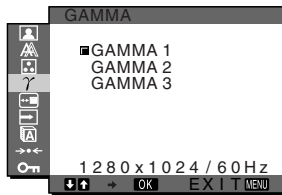
5 Press the ↓/↑ buttons to select , then press the OK button.

The new color setting is stored in memory and automatically recalled whenever “User” is selected.
The COLOR menu appears on the screen.

(continued)

γ GAMMA menu

You can associate the picture's color shade on the screen with the picture's original color shade.




■ Selecting the GAMMA

- 1 Press the MENU button.**
The main menu appears on the screen.
- 2 Press the ↓/↑ buttons to select γ (GAMMA) and press the OK button.**
The GAMMA menu appears on the screen.
- 3 Press the ↓/↑ buttons to select the desired mode and press the OK button.**

⇄ MENU POSITION menu

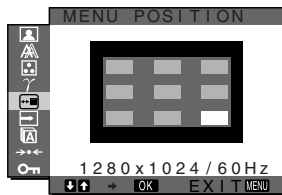
You can change the menu position if it is blocking an image on the screen.



- 1 Press the MENU button.**
The main menu appears on the screen.
- 2 Press the ↓/↑ buttons to select ⇄ (MENU POSITION) and press the OK button.**
The "MENU POSITION" menu appears on the screen.
- 3 Press the ↓/↑ buttons to select the desired position and press the OK button.**
You can choose one of 9 positions where the menu will appear.

⇒ INPUT SENSING ON/OFF menu

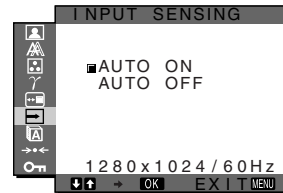
When you select AUTO ON in the INPUT SENSING ON/OFF menu, the monitor automatically detects an input signal to an input terminal, and changes the input automatically before the monitor goes into the power saving mode.



- 1 Press the MENU button.**
The main menu appears on the screen.
- 2 Press the ↓/↑ buttons to select ⇒ (INPUT SENSING ON/OFF) and press the OK button.**
The INPUT SENSING menu appears on the screen.
- 3 Press the ↓/↑ buttons to select the desired mode and press the OK button.**
 - **ON:** When the selected input terminal has no input signal, or when you select an input terminal by the INPUT button on the monitor and the terminal has no input signal, the on-screen message appears (page 20) and the monitor checks the input signal to another input terminal automatically to change the input.
When the input is changed, the selected input terminal is displayed on the left upper of the screen. When there is no input signal, the monitor goes into the power saving mode automatically.
 - **OFF:** The input is not changed automatically. Press the INPUT button to change the input.

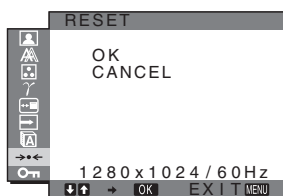
LANGUAGE menu





- 1 Press the MENU button.**
The main menu appears on the screen.
- 2 Press the ↓/↑ buttons to select  (LANGUAGE) and press the OK button.**
The LANGUAGE menu appears on the screen.
- 3 Press the ↓/↑ buttons to select a language and press the OK button.**
 - English
 - Français: French
 - Deutsch: German
 - Español: Spanish
 - Italiano: Italian
 - Nederlands: Dutch
 - Svenska: Swedish
 - Русский: Russian
 - 日本語: Japanese
 - 中文: Chinese

RESET menu

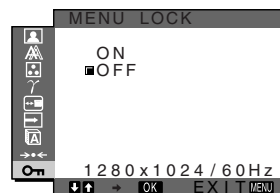
Reset the adjustments to the default settings.









- 1 Press the MENU button.**
The main menu appears on the screen.
- 2 Press the ↓/↑ buttons to select  (RESET) and press the OK button.**
The RESET menu appears on the screen.
- 3 Press the ↓/↑ buttons to select the desired mode and press the OK button.**
 - OK: To reset all of the adjustment data to the default settings. Note that the " LANGUAGE" setting is not reset by this method.
 - CANCEL: To cancel resetting and return to the menu screen.

MENU LOCK menu

Lock the control of buttons to prevent accidental adjustments or resetting.



- 1 Press the MENU button.**
The main menu appears on the screen.
- 2 Press the ↓/↑ buttons to select  (MENU LOCK) and press the OK button.**
The MENU LOCK menu appears on the screen.
- 3 Press the ↓/↑ buttons to select either "On" or "Off."**
 - ON: Only the  (power) switch and INPUT button will operate. If you attempt any other operation, the  icon appears on the screen.
 - OFF: Set " MENU LOCK" to off. If " MENU LOCK" has been set to "ON," when you press the MENU button, " MENU LOCK" is automatically selected.

GB

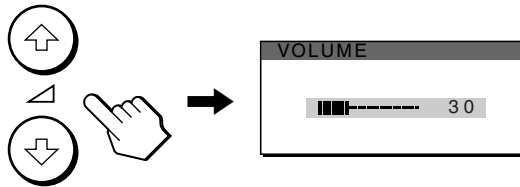
Technical Features

Controlling the volume

Using the monitor's speakers or headphones, you can listen to sound from your computer or other audio equipment connected to the monitor's audio input jacks.

You can control the volume by using a separate "Volume" menu from the main menu.

- 1 Press the ↓/↑ buttons when no menu appears on the screen.



- 2 Press the ↓/↑ buttons to control the volume.
The menu automatically disappears after about 5 seconds.

Notes

- You cannot adjust the volume when the main menu is displayed on the screen.
- When your monitor is in power saving mode, no sound comes from the speakers or the headphones.

Power saving function

This monitor meets the power-saving guidelines set by VESA, ENERGY STAR, and NUTEK. If the monitor is connected to a computer or video graphics board that is DPMS (Display Power Management Signaling) compliant, the monitor will automatically reduce power consumption as shown below.

SDM-X53

Power mode	Power consumption	⏻ (power) indicator
normal operation	25 W (max.)	green
ECO mode		green
active off* (deep sleep)	1.2 W (max.)**	amber
⏻ (power) off	1.0 W (max.)	red
main power off	0 W	off

SDM-X73

Power mode	Power consumption	⏻ (power) indicator
normal operation	45 W (max.)	green
ECO mode		green
active off* (deep sleep)	1.2 W (max.)**	amber
⏻ (power) off	1.0 W (max.)	red
main power off	0 W	off

SDM-X93

Power mode	Power consumption	⏻ (power) indicator
normal operation	50 W (max.)	green
ECO mode		green
active off* (deep sleep)	1.2 W (max.)**	amber
⏻ (power) off	1.0 W (max.)	red
main power off	0 W	off

* When your computer enters the "active off" mode, the input signal is cut and "NO INPUT SIGNAL" appears on the screen. After 5 seconds, the monitor enters the power saving mode.

"Deep sleep" is a power saving mode defined by the Environmental Protection Agency.

** The maximum power consumption is 1.0 W in 100-120 V AC areas.

Reducing the power consumption (ECO mode)

If you press the ECO button on the front of the monitor repeatedly, you can select the screen brightness from HIGH → MIDDLE → LOW, and the power consumption is reduced. When you select “AUTO,” the monitor automatically adjusts the screen brightness according to the brightness of the surroundings (Automatic brightness adjustment function). For more information, see “Automatic brightness adjustment function (light sensor)” on page 19.

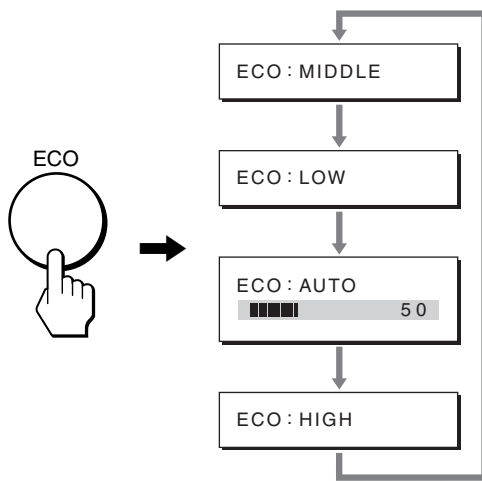
NOTE

You can also select the picture mode with MODE (ECO mode) (page 13) in the PICTURE ADJUST menu.

Press the ECO button repeatedly.

The default setting of the screen brightness is set to “MIDDLE”. When you press the ECO button once, “MIDDLE” (the default setting) is displayed, and when you press again, LOW is displayed and the power consumption is reduced to approximately 50%.

Each time you press the ECO button, the mode changes as follows.



Each mode appears on the screen and the screen brightness is reduced according to the mode. The menu automatically disappears after about 5 seconds.

Automatic brightness adjustment function (light sensor)

This monitor is provided with a feature to automatically adjust the screen brightness according to the brightness of the surroundings. The brightness of the screen is set to the most appropriate level by setting the ECO mode to AUTO with the ECO button on the front of the monitor, or in the PICTURE ADJUST menu. The default setting of the brightness of the screen is set to MIDDLE. Also, when you set the ECO mode to “AUTO” with the ECO button on the front of the monitor, the adjustment bar is also displayed. You can adjust the bar with the ↓/↑ buttons. Screen brightness changes according to the level you set.

Automatic picture quality adjustment function (analog RGB signal only)

When the monitor receives an input signal, it automatically adjusts the picture’s position and sharpness (phase/pitch), and ensures that a clear picture appears on the screen.

The factory preset mode

When the monitor receives an input signal, it automatically matches the signal to one of the factory preset modes stored in the monitor’s memory to provide a high quality picture at the center of the screen. If the input signal matches the factory preset mode, the picture appears on the screen automatically with the appropriate default adjustments.

If input signals do not match one of the factory preset modes

When the monitor receives an input signal that does not match one of the factory preset modes, the automatic picture quality adjustment function of this monitor is activated to ensure that a clear picture always appears on the screen (within the following monitor frequency ranges):

Horizontal frequency: 28–61 kHz (SDM-X53)
28–80 kHz (SDM-X73/X93)

Vertical frequency: 48–75 Hz

Consequently, the first time the monitor receives input signals that do not match one of the factory preset modes, the monitor may take a longer time than normal to display the picture on the screen. This adjustment data is automatically stored in memory so that next time, the monitor will function in the same way as when the monitor receives the signals that match one of the factory preset modes.

If you adjust the phase, pitch, and picture position manually

For some input signals, the automatic picture quality adjustment function of this monitor may not completely adjust the picture position, phase, and pitch. In this case, you can set these adjustments manually (page 14). If you set these adjustments manually, they are stored in memory as user modes and automatically recalled whenever the monitor receives the same input signals.

Troubleshooting

Before contacting technical support, refer to this section.

On-screen messages

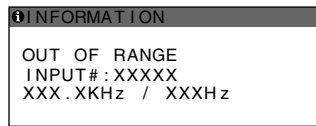
If there is something wrong with the input signal, one of the following messages appears on the screen. To solve the problem, see “Trouble symptoms and remedies” on page 21.

If “OUT OF RANGE” appears on the screen

This indicates that the input signal is not supported by the monitor’s specifications. Check the following items. For more information about on-screen messages, see “Trouble symptoms and remedies” on page 21.

If “xxx.x kHz / xxx Hz” is displayed

This indicates that either the horizontal or vertical frequency is not supported by the monitor’s specifications. The figures indicate the horizontal and vertical frequencies of the current input signal.




If “RESOLUTION > 1024 × 768” is displayed (SDM-X53)

This indicates that the resolution is not supported by the monitor’s specifications (1024 × 768 or less).

If “RESOLUTION > 1280 × 1024” is displayed (SDM-X73/X93)

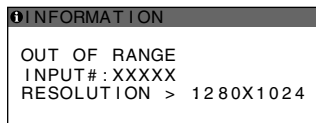
This indicates that the resolution is not supported by the monitor’s specifications (1280 × 1024 or less).



If “NO INPUT SIGNAL” appears on the screen


This indicates that no signal is being input via the currently selected connector.

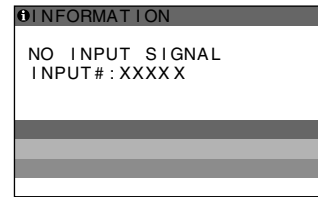When INPUT SENSING ON/OFF (page 16) is set to ON, the monitor finds another input signal and changes the input automatically.



GO TO POWER SAVE

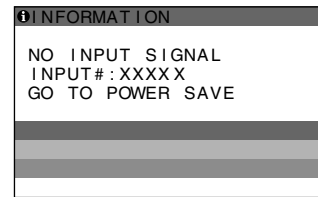
The monitor will enter the power saving mode after about 5 seconds from the time the message is displayed.



If “CABLE DISCONNECTED” appears on the screen

This indicates that the video signal cable has been disconnected from the currently selected connector.

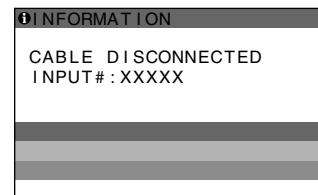When INPUT SENSING ON/OFF (page 16) is set to ON, the monitor finds another input signal and changes the input automatically.



Trouble symptoms and remedies

If a problem occurs as a result of a connected computer or other equipment, refer to the connected computer/equipment's instruction manual. Use the self-diagnosis function (page 23) if the following recommendations do not resolve the problem.

For further information and troubleshooting assistance, please visit Sony support website at: <http://www.sony.net/>

Symptom	Check these items
No picture	
If the ⏻ (power) indicator is not lit, or if the ⏻ (power) indicator will not light up when the ⏻ (power) switch is pressed,	<ul style="list-style-type: none"> • Check that the power cord is properly connected. • Check that the monitor's MAIN POWER switch is on (page 9).
If the ⏻ (power) indicator turns on in red,	<ul style="list-style-type: none"> • Check that the ⏻ (power) switch is on.
If the ⏻ (power) indicator is green,	<ul style="list-style-type: none"> • Use the self-diagnosis function (page 23).
If "CABLE DISCONNECTED" appears on the screen,	<ul style="list-style-type: none"> • Check that the video signal cable is properly connected and all plugs are firmly seated in their sockets (page 7). • Check that the video input connector's pins are not bent or pushed in. • Check that the input select setting is correct (page 11). • A non-supplied video signal cable is connected. If you connect a non-supplied video signal cable, "CABLE DISCONNECTED" may appear on the screen. This is not a malfunction.
If "NO INPUT SIGNAL" appears on the screen, or the ⏻ (power) indicator is amber,	<ul style="list-style-type: none"> • Check that the video signal cable is properly connected and all plugs are firmly seated in their sockets (page 7). • Check that the video input connector's pins are not bent or pushed in. • Check that the input select setting is correct (page 11). <p>■Problem caused by a connected computer or other equipment, and not caused by the monitor</p> <ul style="list-style-type: none"> • The computer is in the power saving mode. Try pressing any key on the keyboard or moving the mouse. • Check that your graphics board is installed properly. • Check that the computer's power is on.
If "OUT OF RANGE" appears on the screen (page 20),	<p>■Problem caused by a connected computer or other equipment, and not caused by the monitor</p> <ul style="list-style-type: none"> • Check that the video frequency range is within that specified for the monitor. If you replaced an old monitor with this monitor, reconnect the old monitor and adjust the computer's graphics board within the following ranges: Horizontal frequency: 28–61 kHz (SDM-X53), 28–80 kHz (SDM-X73/X93) Vertical frequency: 48–75 Hz Resolution: 1024 × 768 or less (SDM-X53), 1280 × 1024 or less (SDM-X73/X93)
If using Windows,	<ul style="list-style-type: none"> • If you replaced an old monitor with this monitor, reconnect the old monitor and do the following. Select "SONY" from the "Manufacturers" list and select "SDM-X53, SDM-X73 or SDM-X93" from the "Models" list in the Windows device selection screen. If "SDM-X53, SDM-X73 or SDM-X93" does not appear in the "Models" list, try "Plug & Play."
If using a Macintosh system,	<ul style="list-style-type: none"> • When connecting a Macintosh computer, use an adapter (not supplied) if necessary. Connect the adapter to the computer before connecting the video signal cable.

GB

(continued)


Symptom	Check these items
Picture flickers, bounces, oscillates, or is scrambled.	<ul style="list-style-type: none"> • Adjust the pitch and phase (analog RGB signal only) (page 14). • Isolate and eliminate any potential sources of electric or magnetic fields such as other monitors, laser printers, electric fans, fluorescent lighting, or televisions. • Move the monitor away from power lines or place a magnetic shield near the monitor. • Try plugging the monitor into a different AC outlet, preferably on a different circuit. • Change the orientation of the monitor. <p>■ Problem caused by a connected computer or other equipment, and not caused by the monitor</p> <ul style="list-style-type: none"> • Check your graphics board manual for the proper monitor setting. • Confirm that the graphics mode (VESA, Macintosh 19" Color, etc.) and the frequency of the input signal are supported by this monitor. Even if the frequency is within the proper range, some graphics boards may have a sync pulse that is too narrow for the monitor to sync with correctly. • This monitor does not process interlace signals. Set for progressive signals. • Adjust the computer's refresh rate (vertical frequency) to obtain the best possible picture (60 Hz is recommended).
Picture is fuzzy.	<ul style="list-style-type: none"> • Adjust the brightness and contrast (page 13). • Adjust the pitch and phase (analog RGB signal only) (page 14). <p>■ Problem caused by a connected computer or other equipment, and not caused by the monitor</p> <ul style="list-style-type: none"> • Set the resolution to 1024 × 768 (SDM-X53), 1280 × 1024 (SDM-X73/X93) on your computer.
Picture is ghosting.	<ul style="list-style-type: none"> • Eliminate the use of video cable extensions and/or video switch boxes. • Check that all plugs are firmly seated in their sockets.
Picture is not centered or sized properly (analog RGB signal only).	<ul style="list-style-type: none"> • Adjust the pitch and phase (page 14). • Adjust the picture position (page 15). Note that some video modes do not fill the screen to the edges.
Picture is too small.	<p>■ Problem caused by a connected computer or other equipment, and not caused by the monitor</p> <ul style="list-style-type: none"> • Set the resolution to 1024 × 768 (SDM-X53), 1280 × 1024 (SDM-X73/X93) on your computer.
Picture is dark.	<ul style="list-style-type: none"> • Adjust the brightness (page 13). • Adjust the backlight (page 13). • It takes a few minutes for the display to become bright after turning on the monitor. • Adjust the gamma on the GAMMA menu (page 16). • The screen might turn darker, depends on ECO mode you selected.
Wavy or elliptical pattern (moire) is visible.	<ul style="list-style-type: none"> • Adjust the pitch and phase (analog RGB signal only) (page 14).
Color is not uniform.	<ul style="list-style-type: none"> • Adjust the pitch and phase (analog RGB signal only) (page 14).
White does not look white.	<ul style="list-style-type: none"> • Adjust the color temperature (page 15).
Monitor buttons do not operate (O_{TT} appears on the screen).	<ul style="list-style-type: none"> • If "MENU LOCK" is set to "ON," set it to "OFF" (page 17).
Resolution displayed on the menu screen is incorrect.	<ul style="list-style-type: none"> • Depending on the graphics board setting, the resolution displayed on the menu screen may not coincide with the one set on the computer.
After turnig off the main power, the ⏻ (power) indicator stays bright for a while.	<ul style="list-style-type: none"> • When the main power is on but the ⏻ (power) switch is not pressed, or when the monitor is in the power saving mode, if you turn the MAIN POWER switch off, the ⏻ (power) indicator may not turn off right away. This is not a malfunction.

Displaying this monitor's information

While the monitor is receiving a video signal, press and hold the MENU button for more than 5 seconds until the information box appears.

Press the MENU button again to make the box disappear.

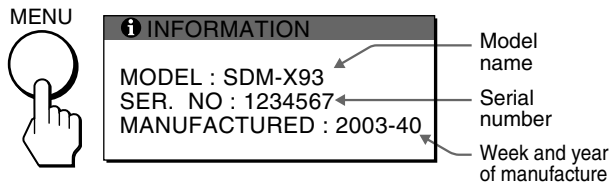Example




If any problem persists, call your authorized Sony dealer and give the following information:

- Model name: SDM-X53, SDM-X73 or SDM-X93
- Serial number
- Detailed description of the problem
- Date of purchase
- Name and specifications of your computer and graphics board
- Type of input signals (analog RGB/digital RGB)

Self-diagnosis function

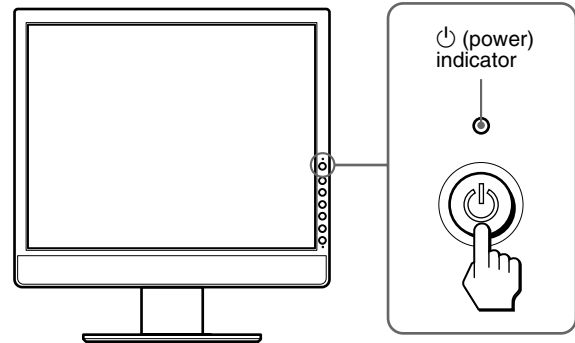This monitor is equipped with a self-diagnosis function. If there is a problem with your monitor or computer(s), the screen will go blank and the ⏻ (power) indicator will light up green. If the ⏻ (power) indicator is lit in amber, the computer is in power saving mode. Try pressing any key on the keyboard or moving the mouse.



If the picture disappears from the screen and the ⏻ (power) indicator is green

- 1 Turn off the ⏻ (power) switch and disconnect the video signal cables from the monitor.
- 2 Turn the monitor on by pressing the ⏻ (power) switch.

If all four color bars appear (white, red, green, blue), the monitor is working properly. Reconnect the video input cables and check the condition of your computer(s).

If the color bars do not appear, there is a potential monitor failure. Inform your authorized Sony dealer of the monitor's condition.

If the ⏻ (power) indicator lights up in amber

Try pressing any key on the keyboard or moving the mouse.

The computer's power saving mode is shut off and the ⏻ (power) indicator lights up in green, and the picture appears on the screen.

Specifications

SDM-X53

LCD panel

Panel type: a-Si TFT Active Matrix
Picture size: 15 inch (38 cm)

Input signal format

RGB operating frequency*
Horizontal: 28–61 kHz (analog RGB)
28–49 kHz (digital RGB)
Vertical: 48–75 Hz (analog RGB)
60 Hz (digital RGB)

Resolution

Horizontal: Max. 1024 dots
Vertical: Max. 768 lines

Input signal levels

Analog RGB video signal:
0.7 V_{p-p}, 75 Ω, positive
SYNC signal:
TTL level, 2.2 kΩ, positive or negative (Separate horizontal and vertical, or composite sync)
0.3 V_{p-p}, 75 Ω, negative (Sync on green)
Digital RGB (DVI) signal: TMDS (Single link)

Audio input

Stereo minijack, 0.5 V_{rms}, 47 kΩ

Speaker output

1 W × 2

Headphones jack

Stereo minijack

Power requirements

100–240 V, 50–60 Hz, Max. 1.0 A

Power consumption

Max. 25 W

Operating temperature

5–35 °C

Dimensions (width/height/depth)

Display (upright):
Approx. 339 × 319–419 × 201–231 mm (with stand)
(13 ³/₈ × 12 ⁵/₈–16 ¹/₂ × 8–9 ¹/₈ inches)
Approx. 339 × 297 × 53 mm (without stand)
(13 ³/₈ × 11 ³/₄ × 2 ¹/₈ inches)

Mass

Approx. 4.6 kg (10 lb 2 oz) (with stand)
Approx. 3.0 kg (6 lb 9 oz) (without stand)

Plug & Play

DDC2B

Accessories

See page 7.

SDM-X73/X93

LCD panel

Panel type: a-Si TFT Active Matrix
Picture size: 17 inch (43 cm) (SDM-X73)
19 inch (48 cm) (SDM-X93)

Input signal format

RGB operating frequency*
Horizontal: 28–80 kHz (analog RGB)
28–64 kHz (digital RGB)
Vertical: 48–75 Hz (analog RGB)
60 Hz (digital RGB)

Resolution

Horizontal: Max. 1280 dots
Vertical: Max. 1024 lines

Input signal levels

Analog RGB video signal:
0.7 V_{p-p}, 75 Ω, positive
SYNC signal:
TTL level, 2.2 kΩ, positive or negative (Separate horizontal and vertical, or composite sync)
0.3 V_{p-p}, 75 Ω, negative (Sync on green)
Digital RGB (DVI) signal: TMDS (Single link)

Audio input

Stereo minijack, 0.5 V_{rms}, 47 kΩ

Speaker output

1 W × 2

Headphones jack

Stereo minijack

Power requirements

100–240 V, 50–60 Hz, Max. 1.0 A

Power consumption

Max. 45W (SDM-X73)
Max. 50W (SDM-X93)

Operating temperature

5–35 °C

Dimensions (width/height/depth)

Display (upright):
SDM-X73
Approx. 367 × 361–461 × 232–248 mm (with stand)
(14 ¹/₂ × 14 ¹/₄–18 ¹/₄ × 9 ¹/₄–9 ⁷/₈ inches)
Approx. 367 × 336 × 60 mm (without stand)
(14 ¹/₂ × 13 ¹/₄ × 2 ³/₈ inches)
SDM-X93
Approx. 412 × 395–495 × 232–248 mm (with stand)
(16 ¹/₄ × 15 ⁵/₈–19 ¹/₂ × 9 ¹/₄–9 ⁷/₈ inches)
Approx. 412 × 372 × 64 mm (without stand)
(16 ¹/₄ × 14 ³/₄ × 2 ⁵/₈ inches)

Mass

SDM-X73
Approx. 7.1 kg (15 lb 10 oz) (with stand)
Approx. 5.0 kg (11 lb 4 oz) (without stand)
SDM-X93
Approx. 7.5 kg (16 lb 9 oz) (with stand)
Approx. 5.4 kg (11 lb 15 oz) (without stand)

Plug & Play

DDC2B

Accessories

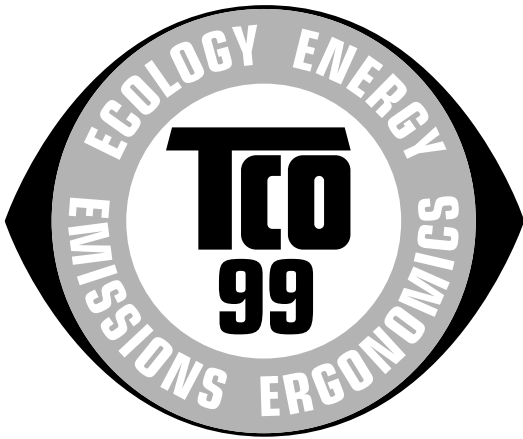
See page 7.

* Recommended horizontal and vertical timing condition

- Horizontal sync width duty should be more than 4.8% of total horizontal time or 0.8 μs, whichever is larger.
- Horizontal blanking width should be more than 2.5 μsec.
- Vertical blanking width should be more than 450 μsec.

Design and specifications are subject to change without notice.

TCO'99 Eco-document



■ Congratulations!

You have just purchased a TCO'99 approved and labelled product! Your choice has provided you with a product developed for professional use. Your purchase has also contributed to reducing the burden on the environment and also to the further development of environmentally adapted electronics products.

■ Why do we have environmentally labelled computers?

In many countries, environmental labelling has become an established method for encouraging the adaptation of goods and services to the environment. The main problem, as far as computers and other electronics equipment are concerned, is that environmentally harmful substances are used both in the products and during their manufacture. Since it is not so far possible to satisfactorily recycle the majority of electronics equipment, most of these potentially damaging substances sooner or later enter nature.

There are also other characteristics of a computer, such as energy consumption levels, that are important from the viewpoints of both the work (internal) and natural (external) environments. Since all methods of electricity generation have a negative effect on the environment (e.g. acidic and climate-influencing emissions, radioactive waste), it is vital to save energy. Electronics equipment in offices is often left running continuously and thereby consumes a lot of energy.

■ What does labelling involve?

This product meets the requirements for the TCO'99 scheme which provides for international and environmental labelling of personal computers. The labelling scheme was developed as a joint effort by the TCO (The Swedish Confederation of Professional Employees), Svenska Naturskyddsforeningen (The Swedish Society for Nature Conservation) and Statens Energimyndighet (The Swedish National Energy Administration).

Approval requirements cover a wide range of issues: environment, ergonomics, usability, emission of electric and magnetic fields, energy consumption and electrical and fire safety.

The environmental demands impose restrictions on the presence and use of heavy metals, brominated and chlorinated flame retardants, CFCs (freons) and chlorinated solvents, among other things. The product must be prepared for recycling and the manufacturer is obliged to have an environmental policy which must be adhered to in each country where the company implements its operational policy.

The energy requirements include a demand that the computer and/or display, after a certain period of inactivity, shall reduce its power consumption to a lower level in one or more stages. The length of time to reactivate the computer shall be reasonable for the user.

Labelled products must meet strict environmental demands, for example, in respect of the reduction of electric and magnetic fields, physical and visual ergonomics and good usability.

Below you will find a brief summary of the environmental requirements met by this product. The complete environmental criteria document may be ordered from:

TCO Development

SE-114 94 Stockholm, Sweden

Fax: +46 8 782 92 07

Email (Internet): development@tco.se

Current information regarding TCO'99 approved and labelled products may also be obtained via the Internet, using the address: <http://www.tco-info.com/>

■ Environmental requirements

Flame retardants

Flame retardants are present in printed circuit boards, cables, wires, casings and housings. Their purpose is to prevent, or at least to delay the spread of fire. Up to 30% of the plastic in a computer casing can consist of flame retardant substances. Most flame retardants contain bromine or chloride, and those flame retardants are chemically related to another group of environmental toxins, PCBs. Both the flame retardants containing bromine or chloride and the PCBs are suspected of giving rise to severe health effects, including reproductive damage in fish-eating birds and mammals, due to the bio-accumulative* processes. Flame retardants have been found in human blood and researchers fear that disturbances in foetus development may occur.

The relevant TCO'99 demand requires that plastic components weighing more than 25 grams must not contain flame retardants with organically bound bromine or chlorine. Flame retardants are allowed in the printed circuit boards since no substitutes are available.

Cadmium**

Cadmium is present in rechargeable batteries and in the colour-generating layers of certain computer displays. Cadmium damages the nervous system and is toxic in high doses. The relevant TCO'99 requirement states that batteries, the colour-generating layers of display screens and the electrical or electronics components must not contain any cadmium.

Mercury**

Mercury is sometimes found in batteries, relays and switches. It damages the nervous system and is toxic in high doses. The relevant TCO'99 requirement states that batteries may not contain any mercury. It also demands that mercury is not present in any of the electrical or electronics components associated with the labelled unit.

CFCs (freons)

The relevant TCO'99 requirement states that neither CFCs nor HCFCs may be used during the manufacture and assembly of the product. CFCs (freons) are sometimes used for washing printed circuit boards. CFCs break down ozone and thereby damage the ozone layer in the stratosphere, causing increased reception on earth of ultraviolet light with e.g. increased risks of skin cancer (malignant melanoma) as a consequence.

Lead**

Lead can be found in picture tubes, display screens, solders and capacitors. Lead damages the nervous system and in higher doses, causes lead poisoning. The relevant TCO'99 requirement permits the inclusion of lead since no replacement has yet been developed.

* Bio-accumulative is defined as substances which accumulate within living organisms.

** Lead, Cadmium and Mercury are heavy metals which are Bio-accumulative.